 


---

01-03-001 , Fuse Details , Fuses I and II

---

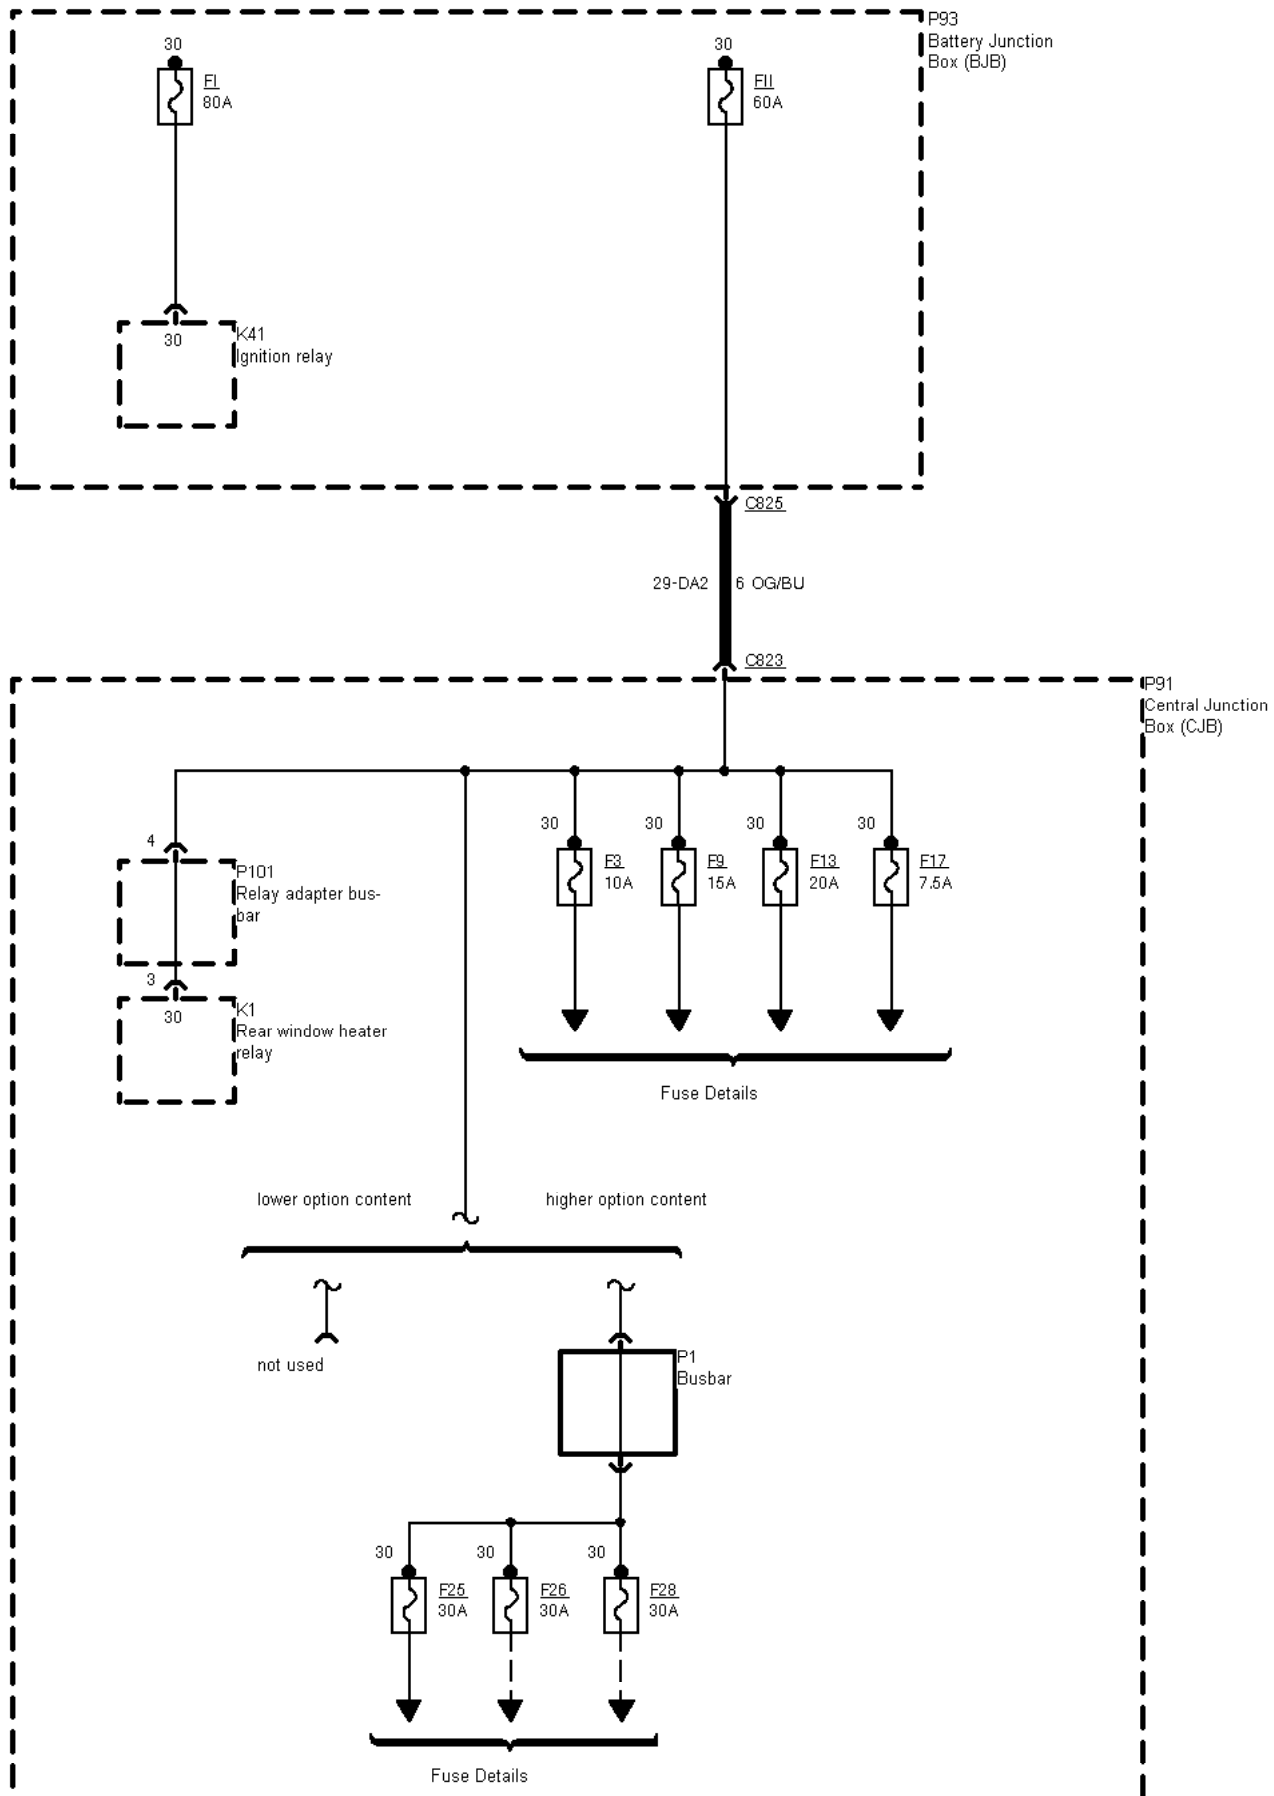 




---

01-03-002 , Fuse Details , Fuse III

---

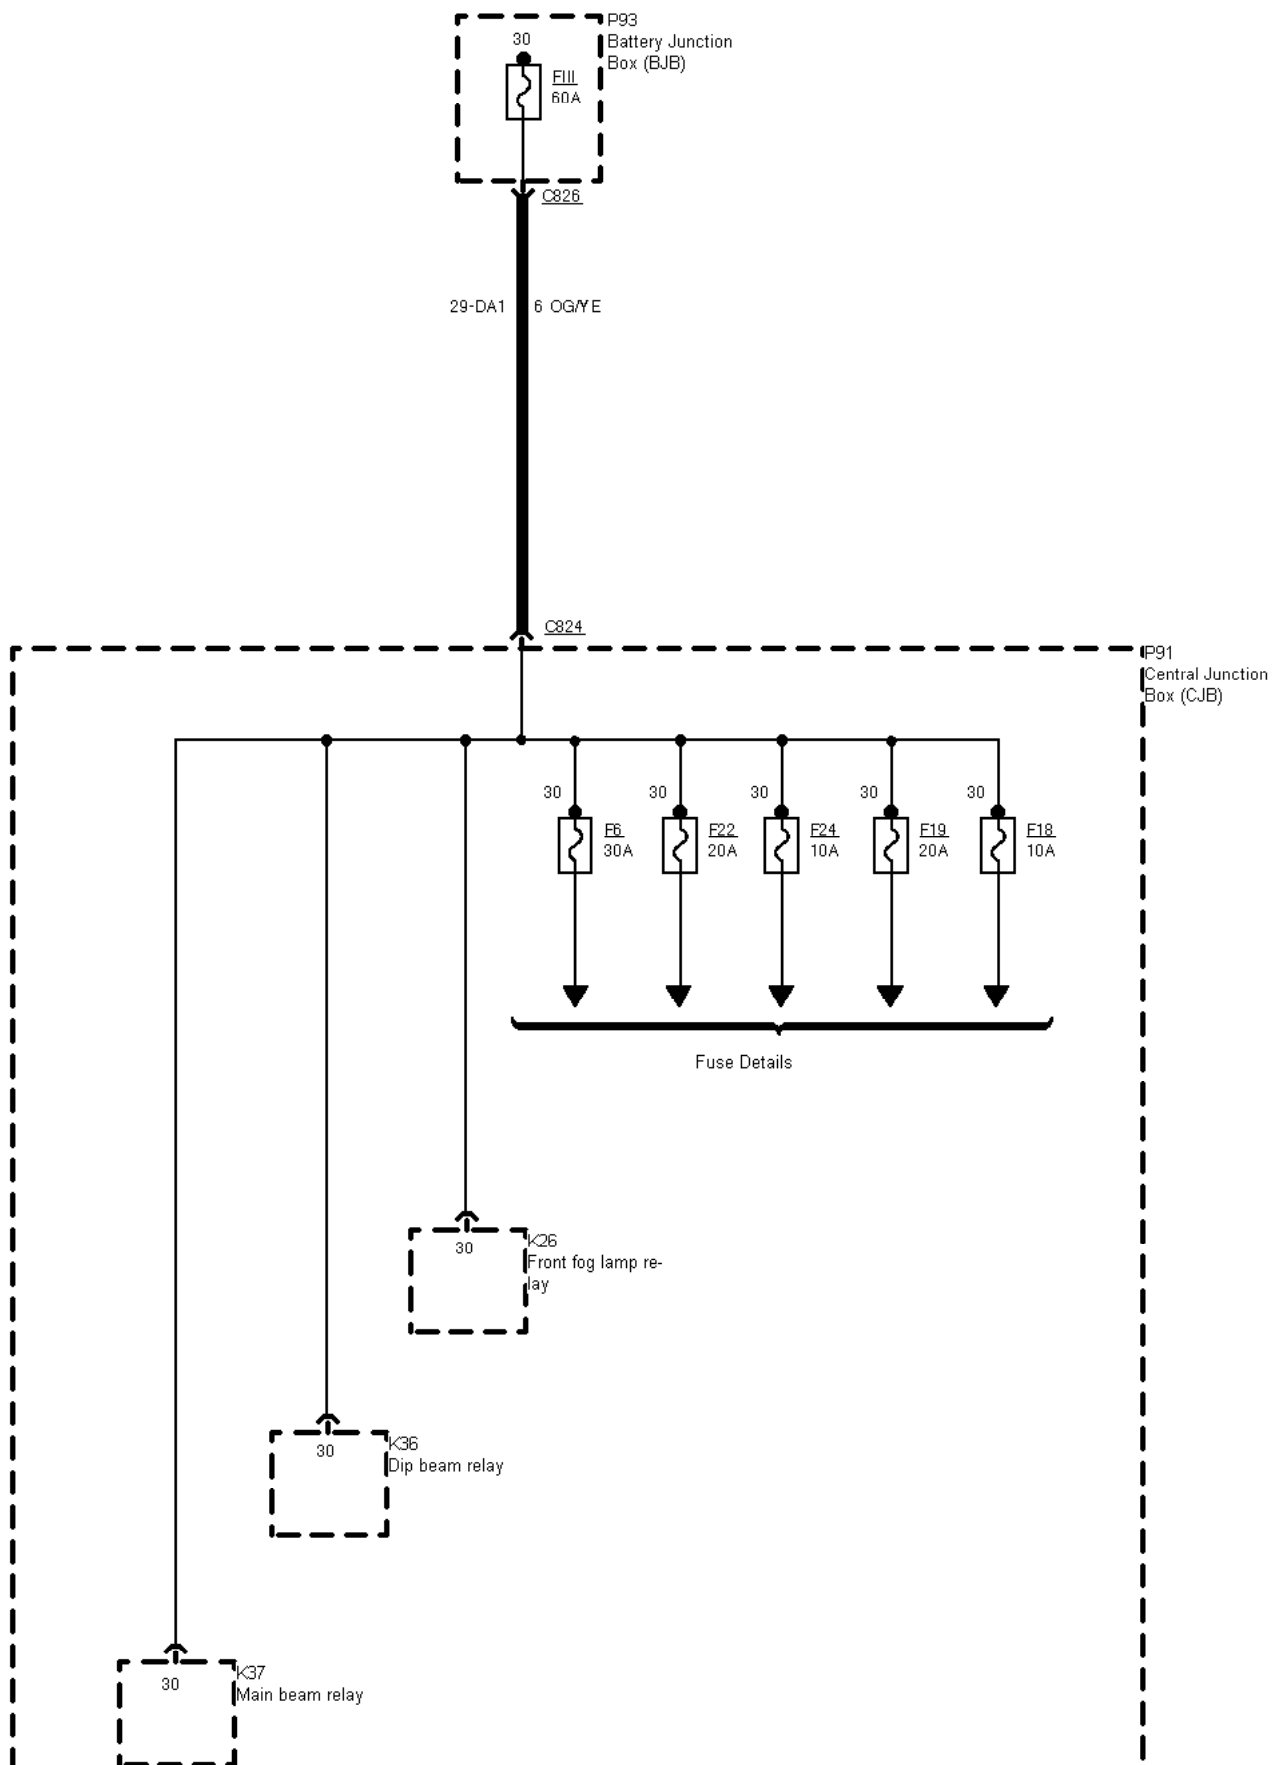




---


01-03-003 , Fuse Details , Fuse IV

---

 TCI Diesel before 09/96

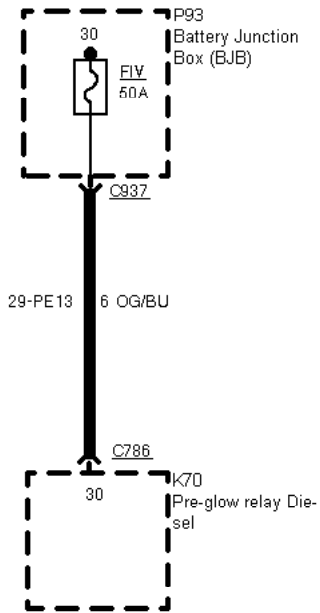

TCI Diesel as of 09/96

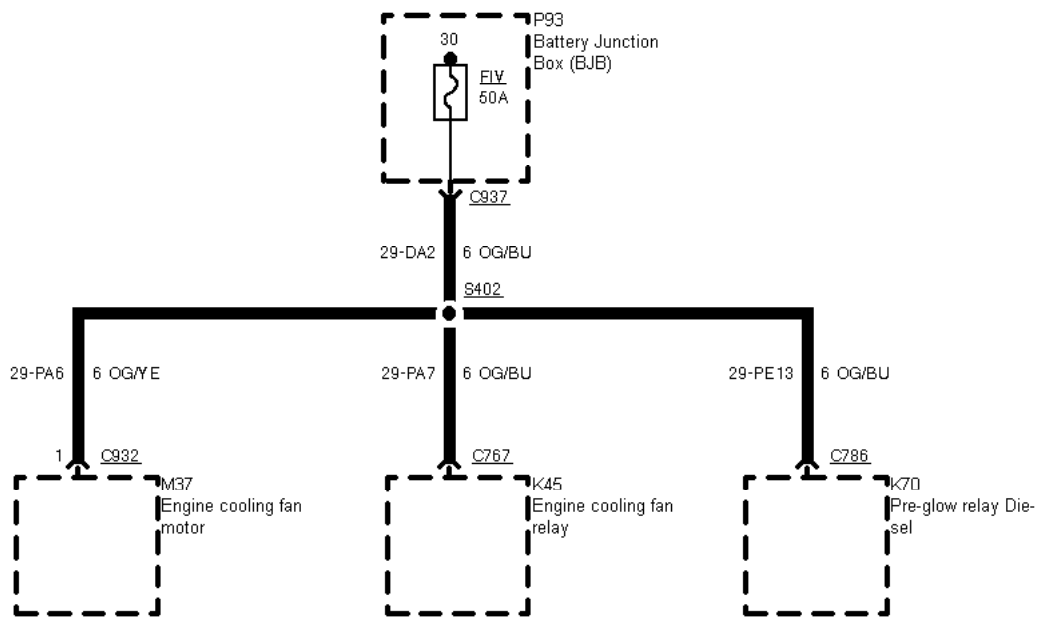 


---


01-03-005 , Fuse Details

---


 
Fuse 1

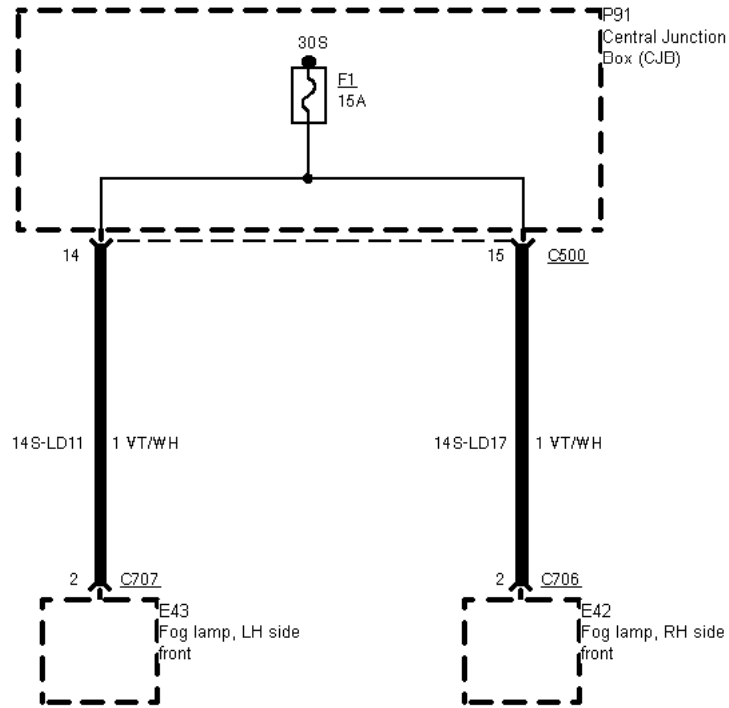

Fuse 2

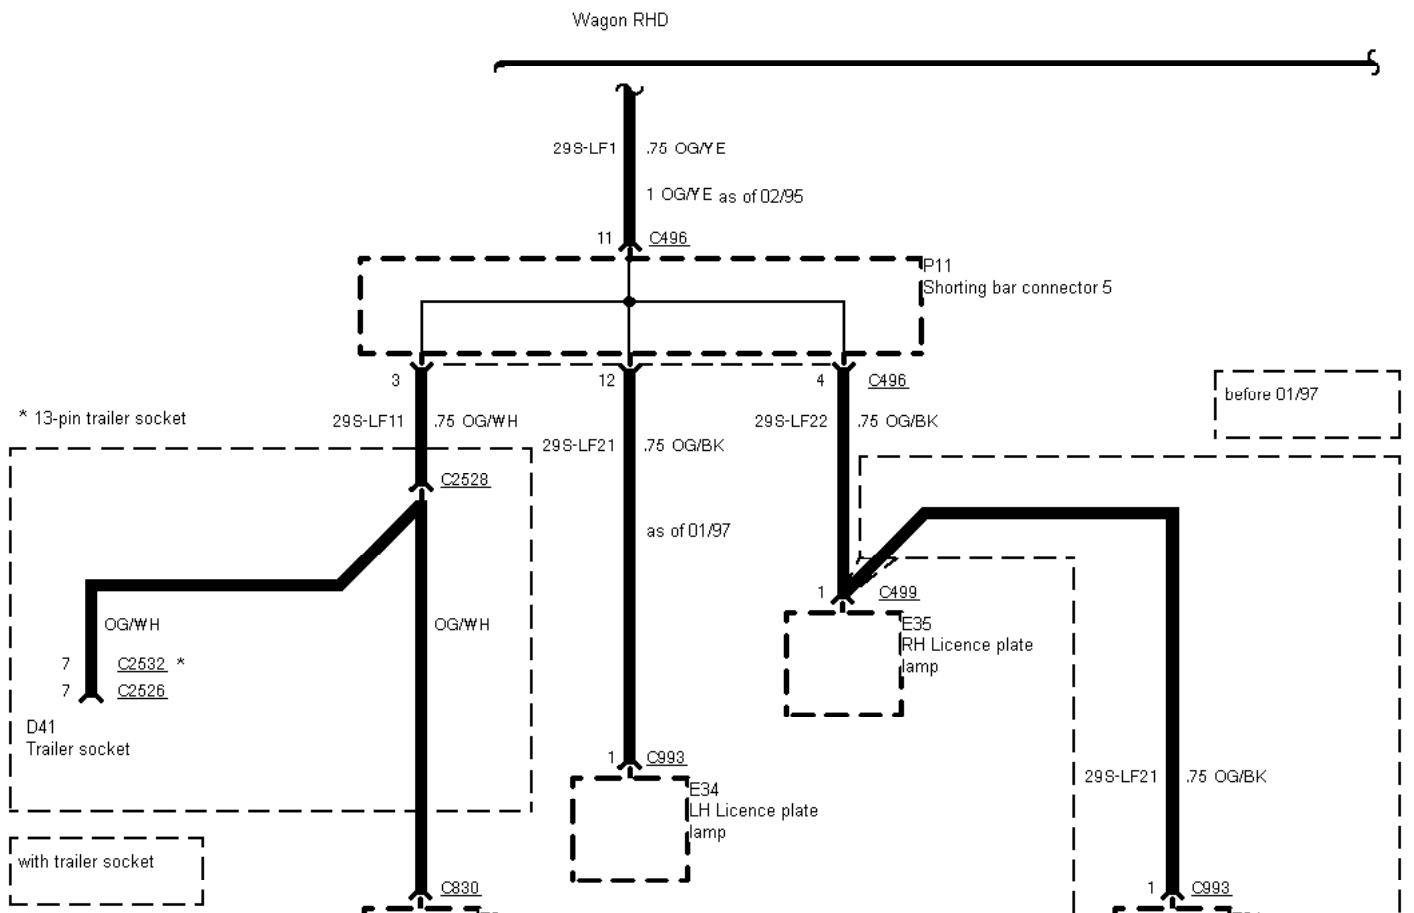 




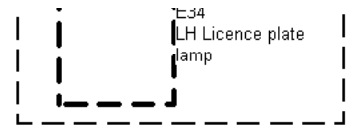  


---

01-03-006 , Fuse Details , Fuse 2

  ---

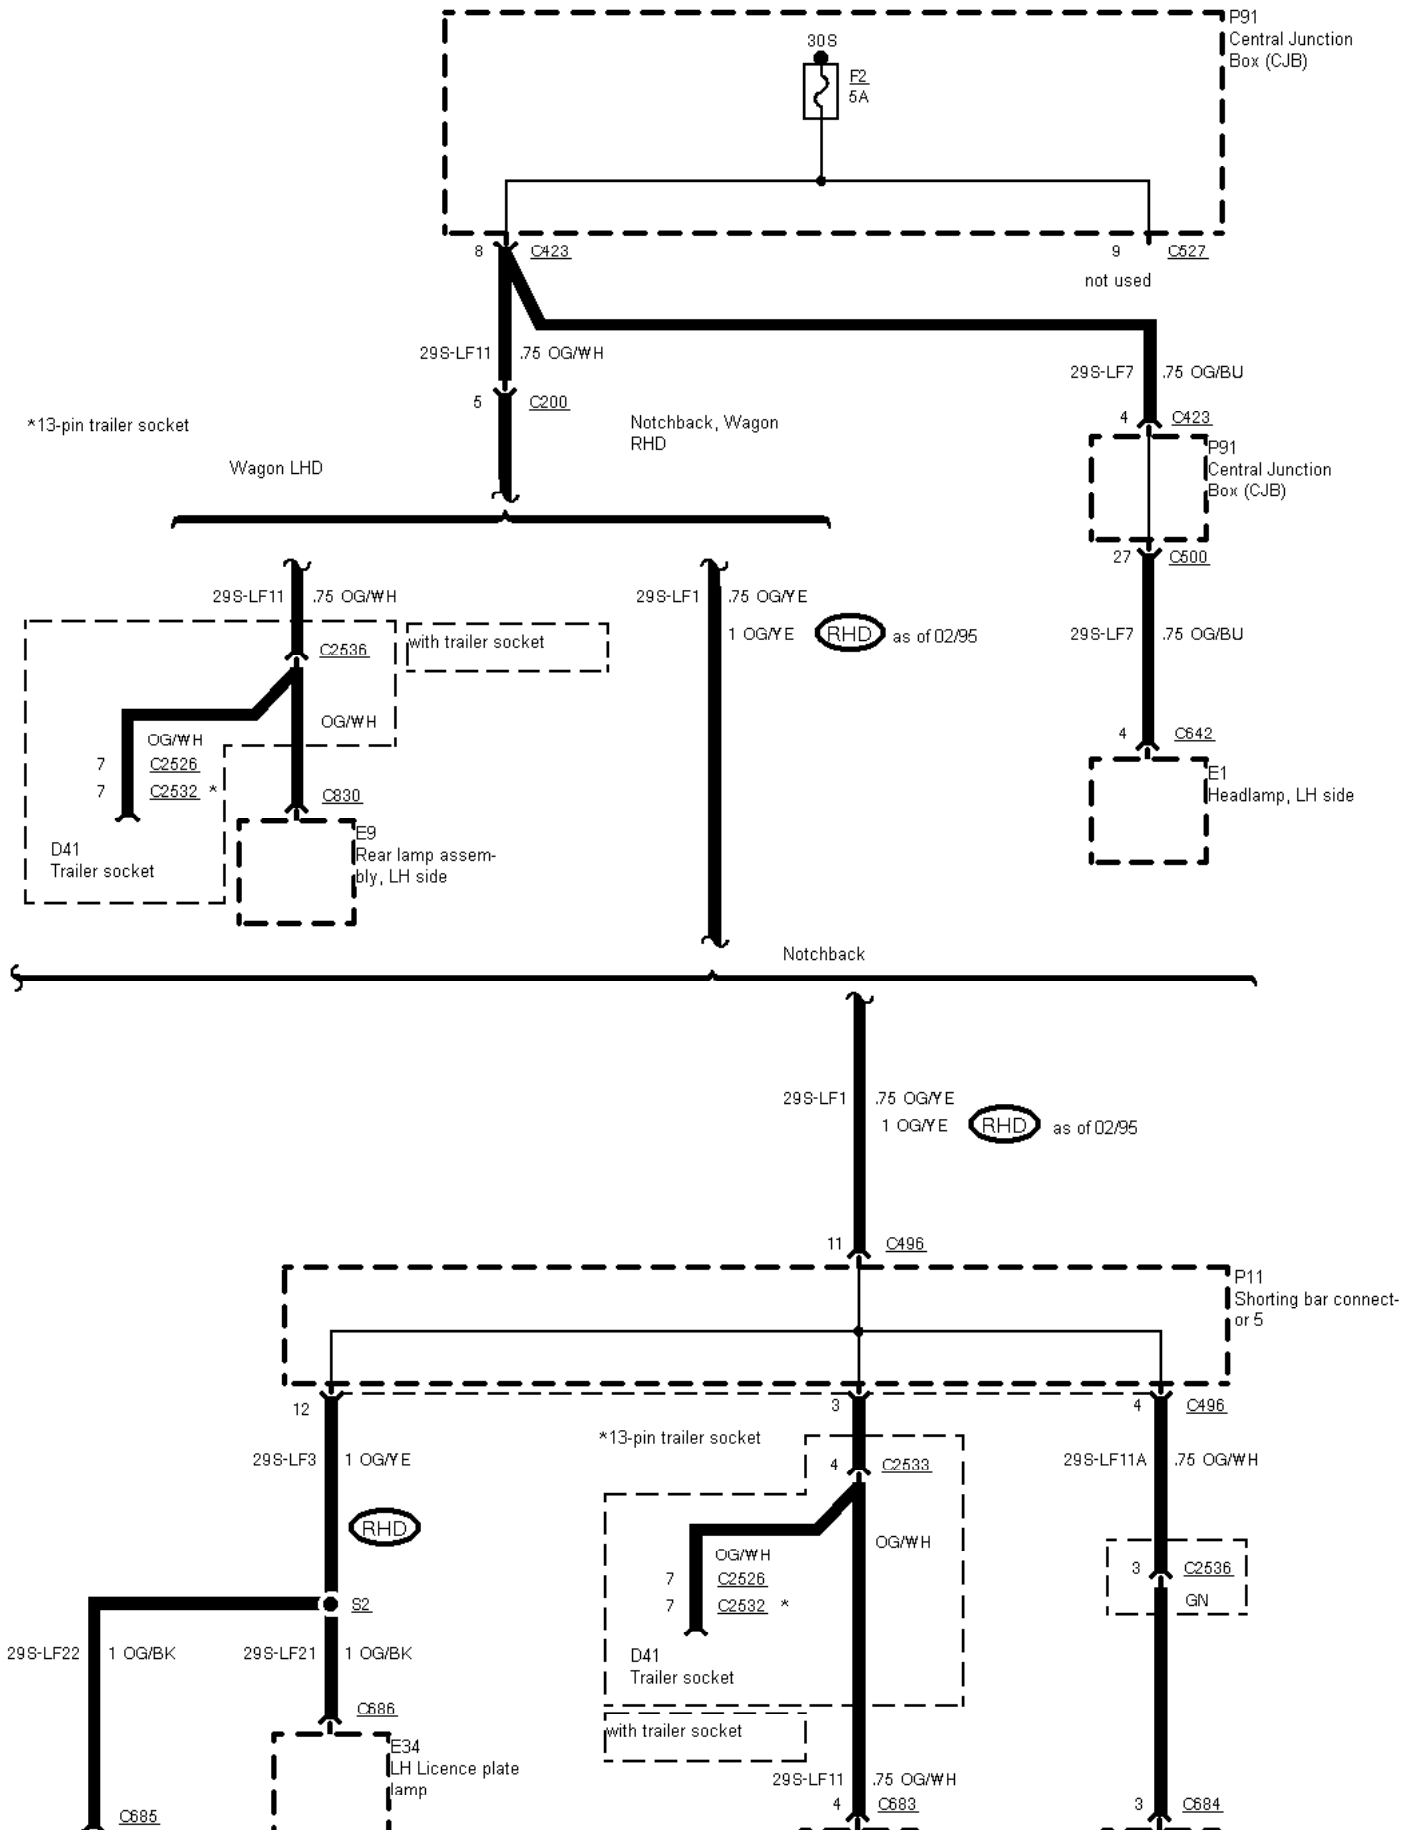





---

01-03-007 , Fuse Details , Fuse 3

  ---

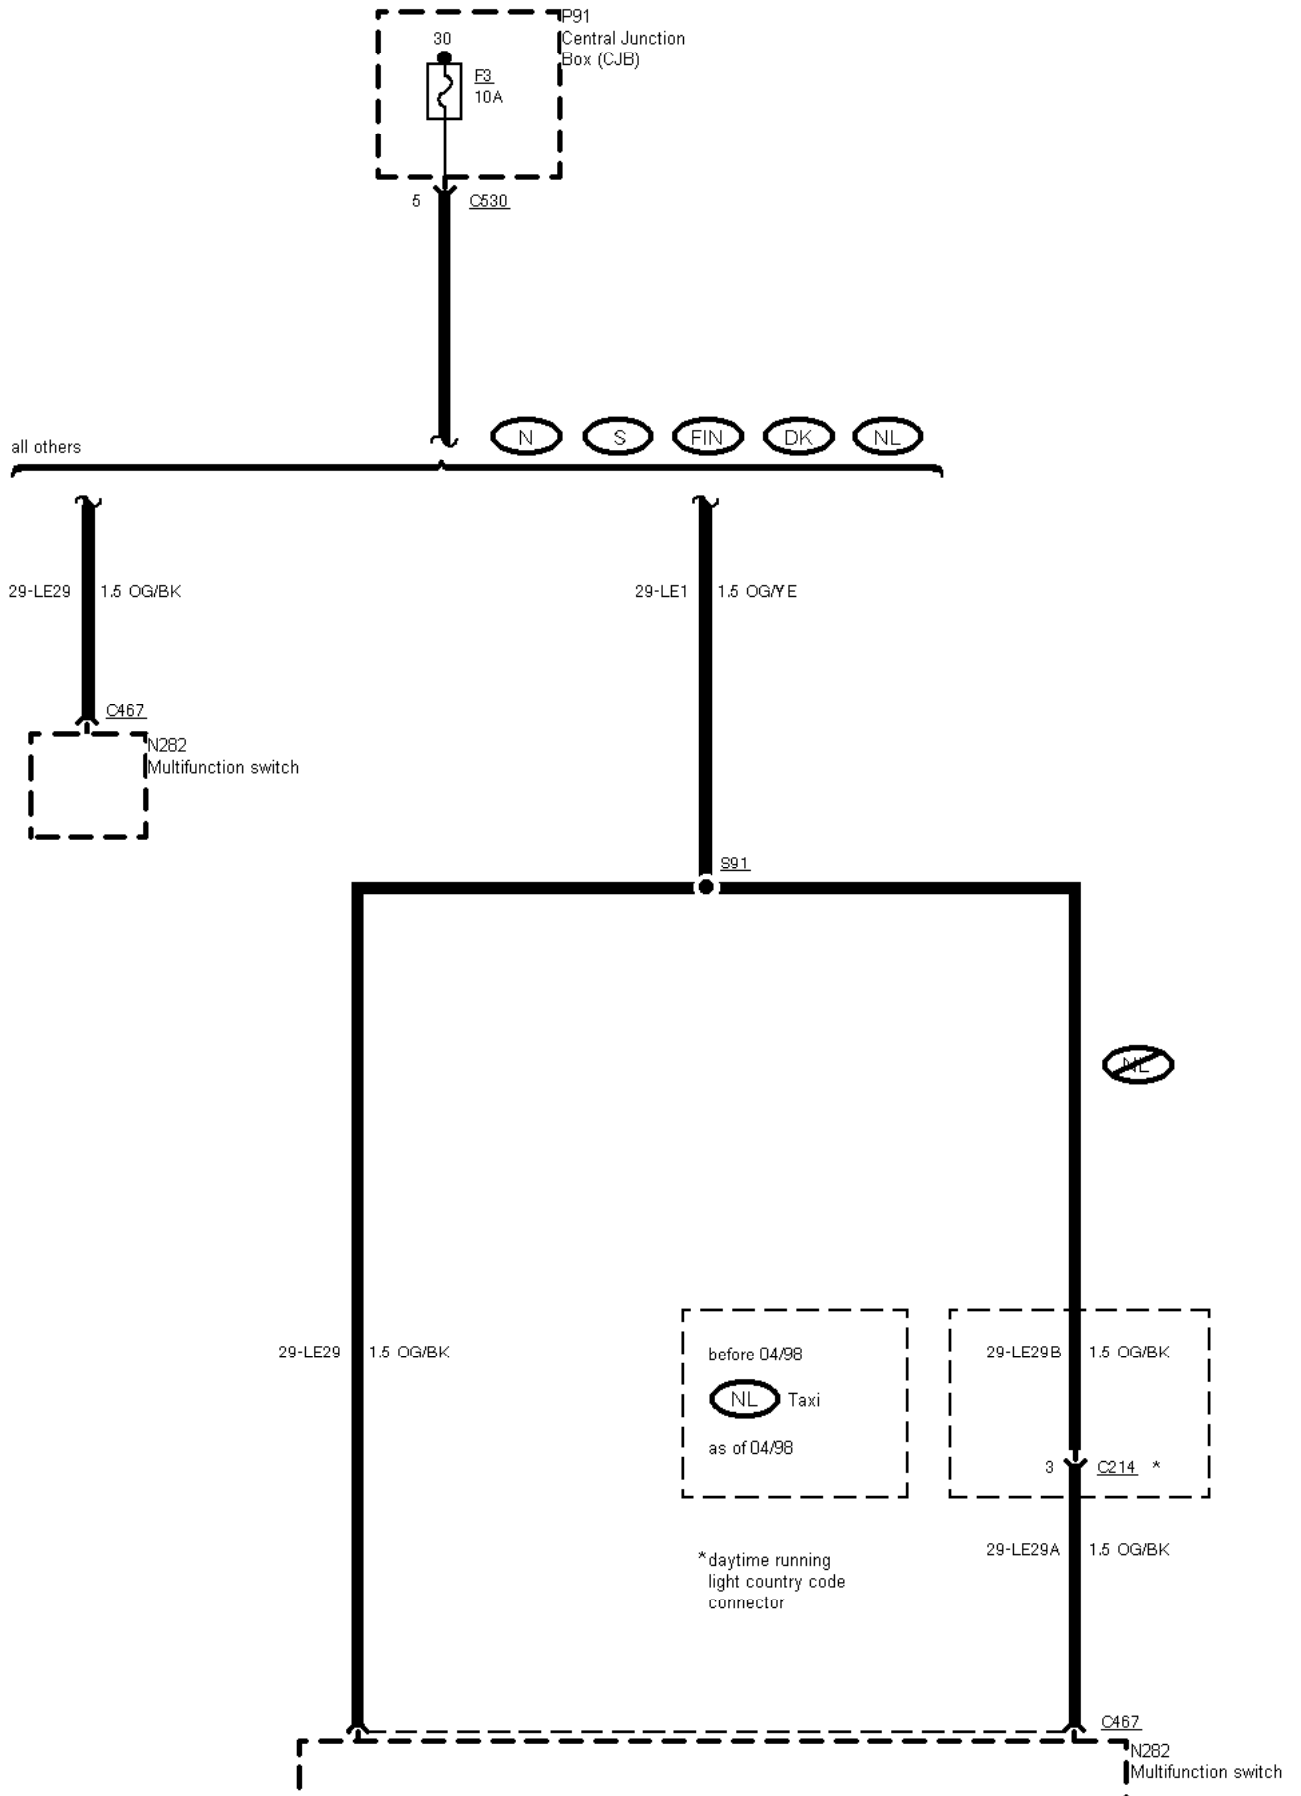





---

01-03-008 , Fuse Details , Fuses 4 and 5

  ---

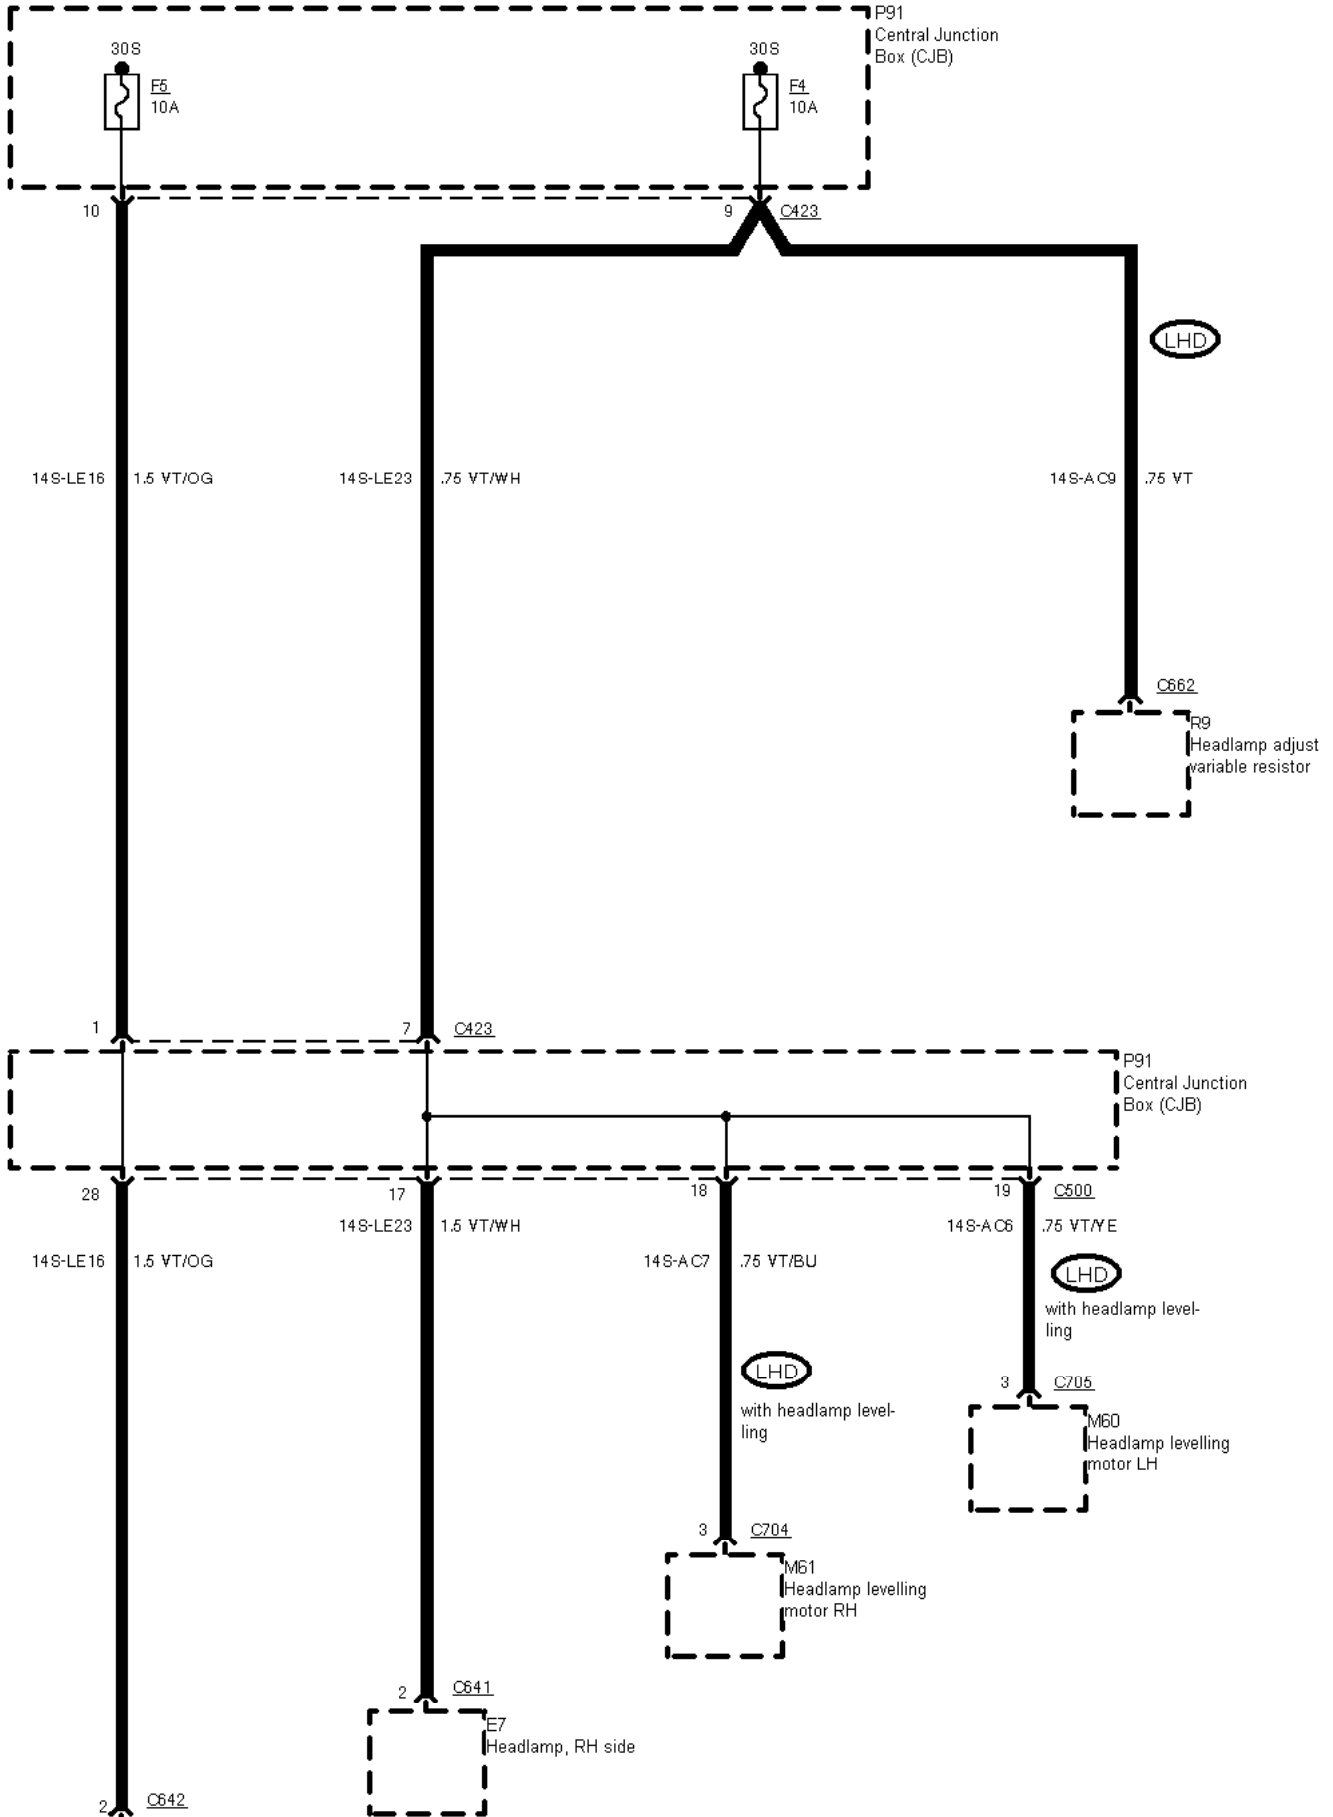


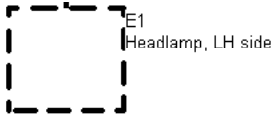

---

01-03-009 , Fuse Details , Fuse 6

 ---

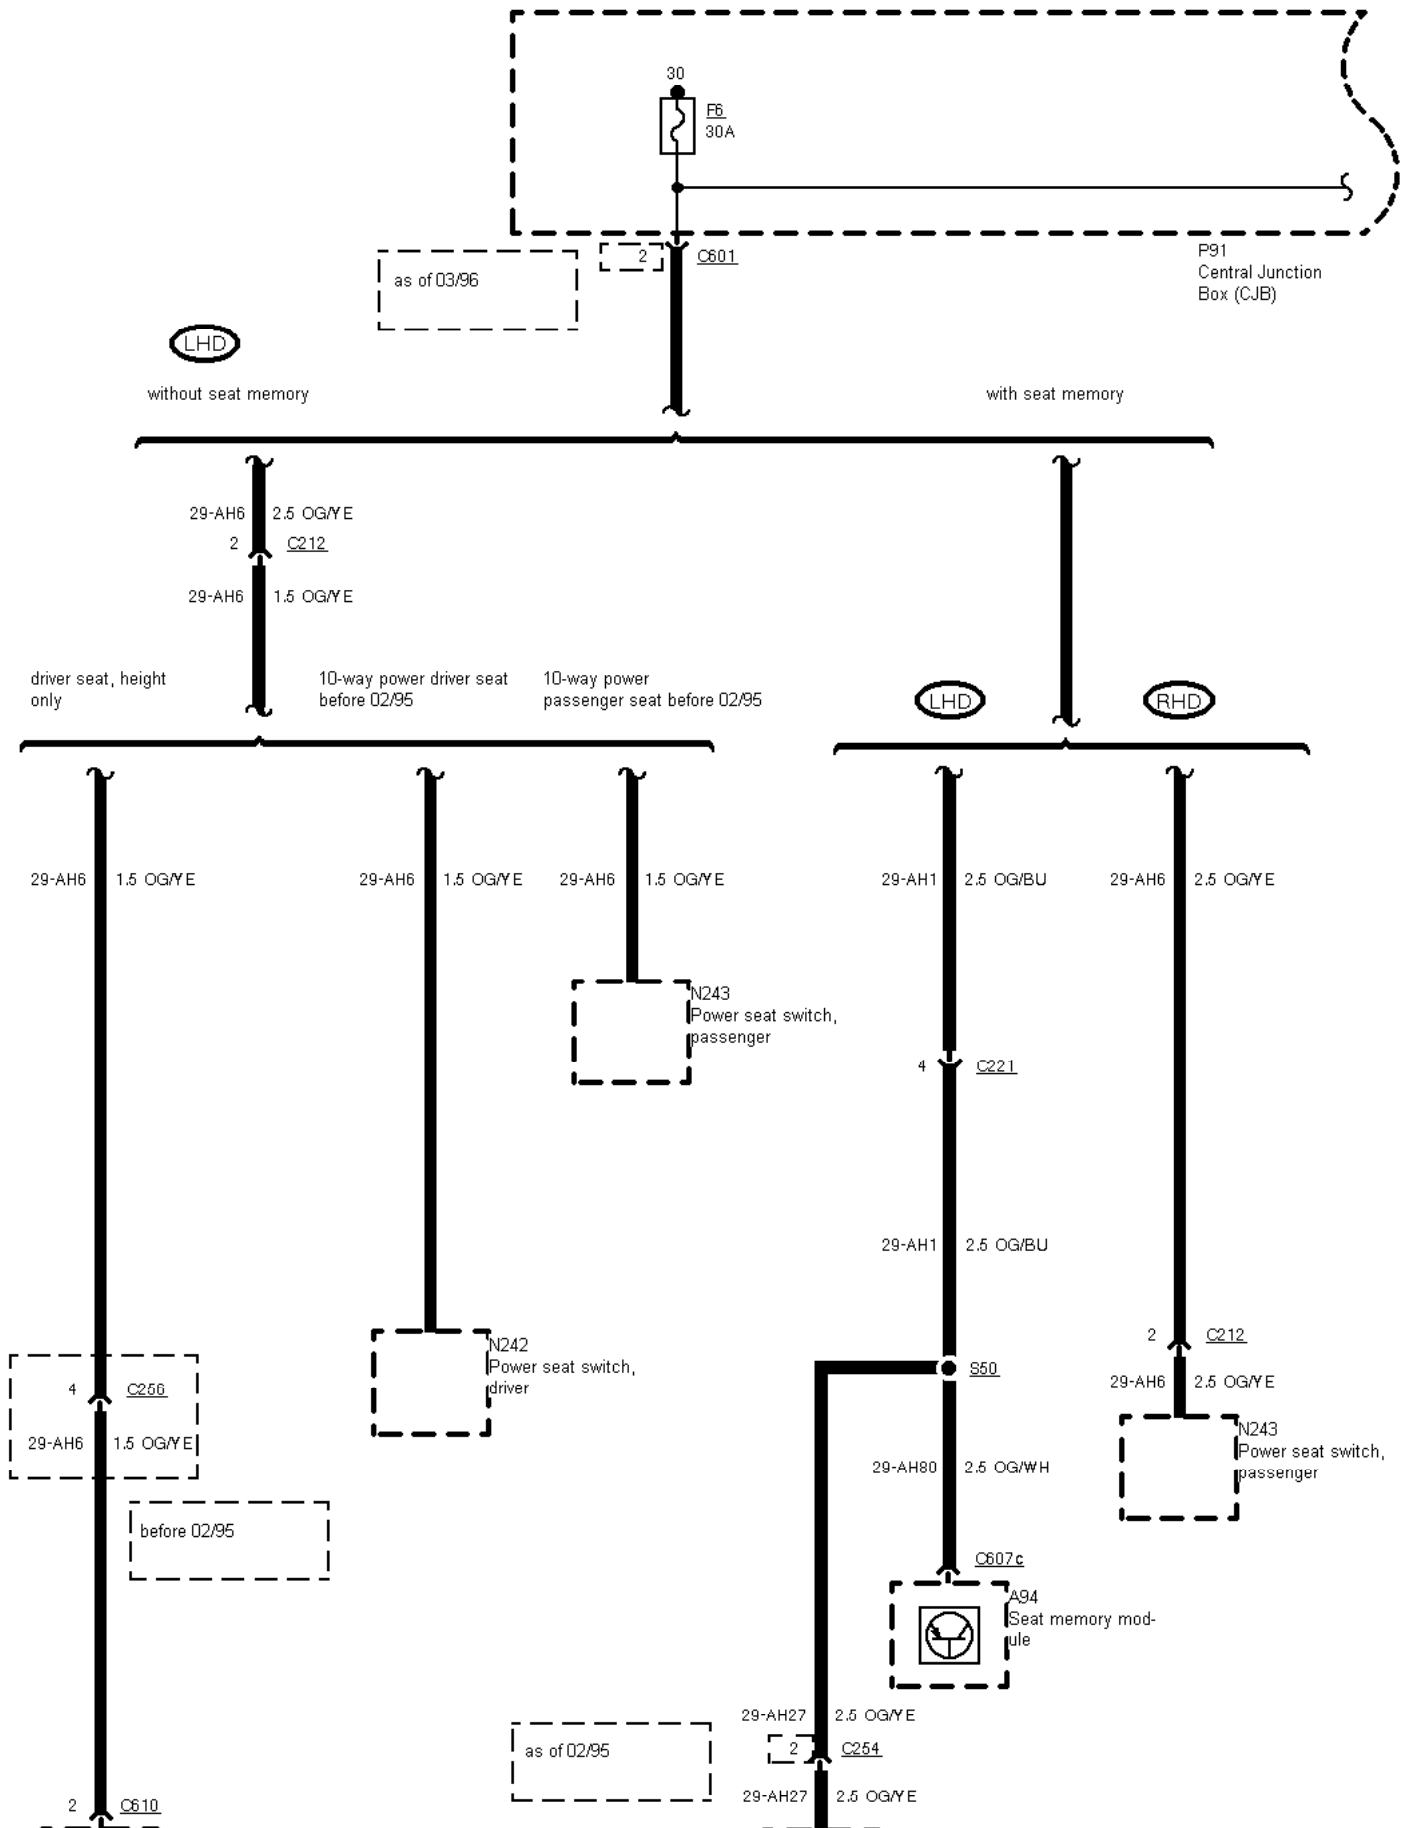




N97  
Front seat adjust  
switch

N242  
Power seat switch,  
driver

---

01-03-010 , Fuse Details , Fuse 6

 ---

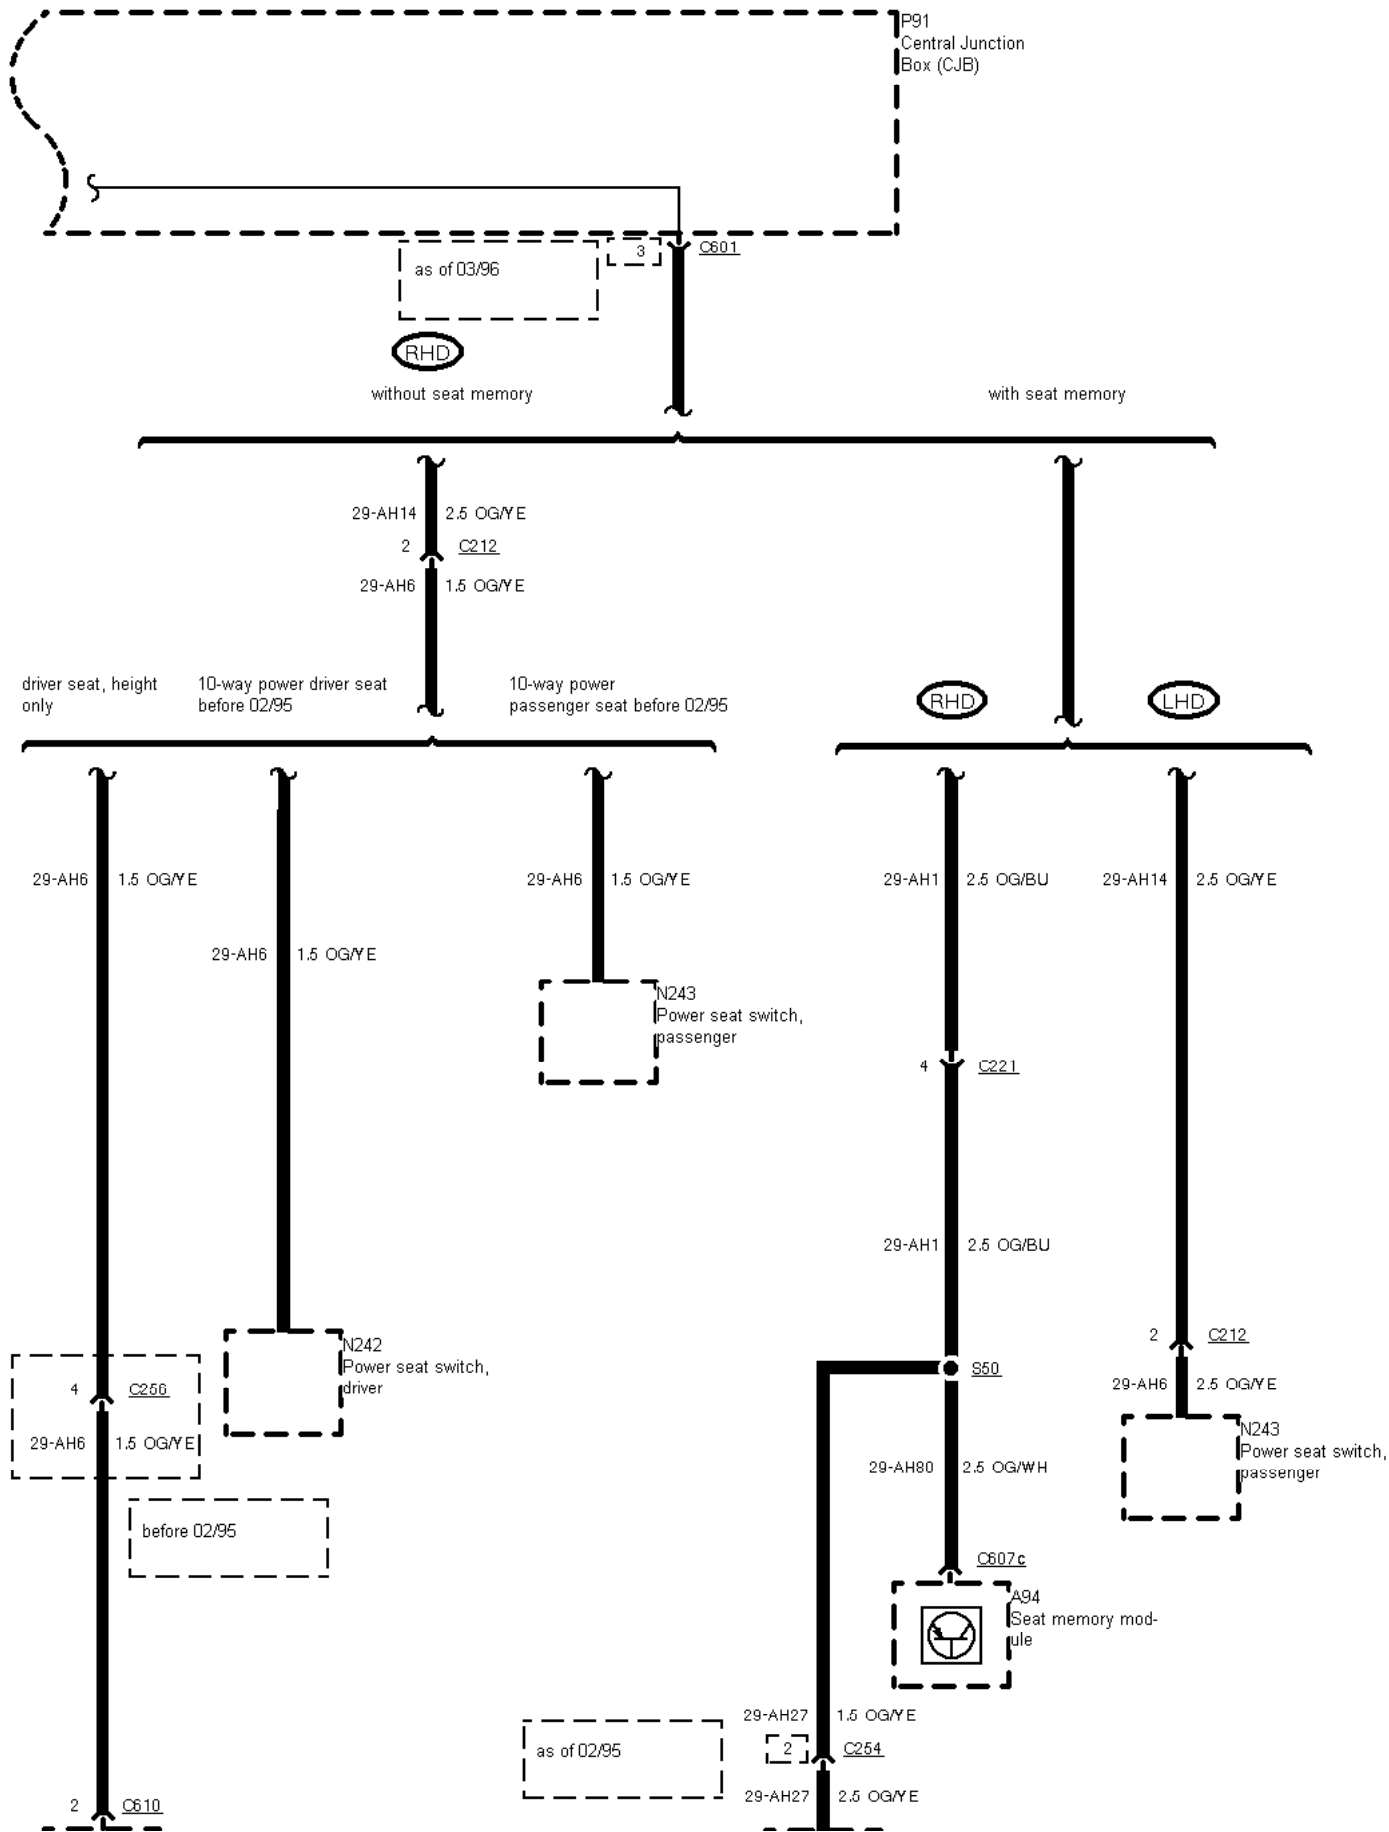


N97  
Front seat adjust  
switch




N242  
Power seat switch,  
driver

---

01-03-011 , Fuse Details , Fuse 7

    ---

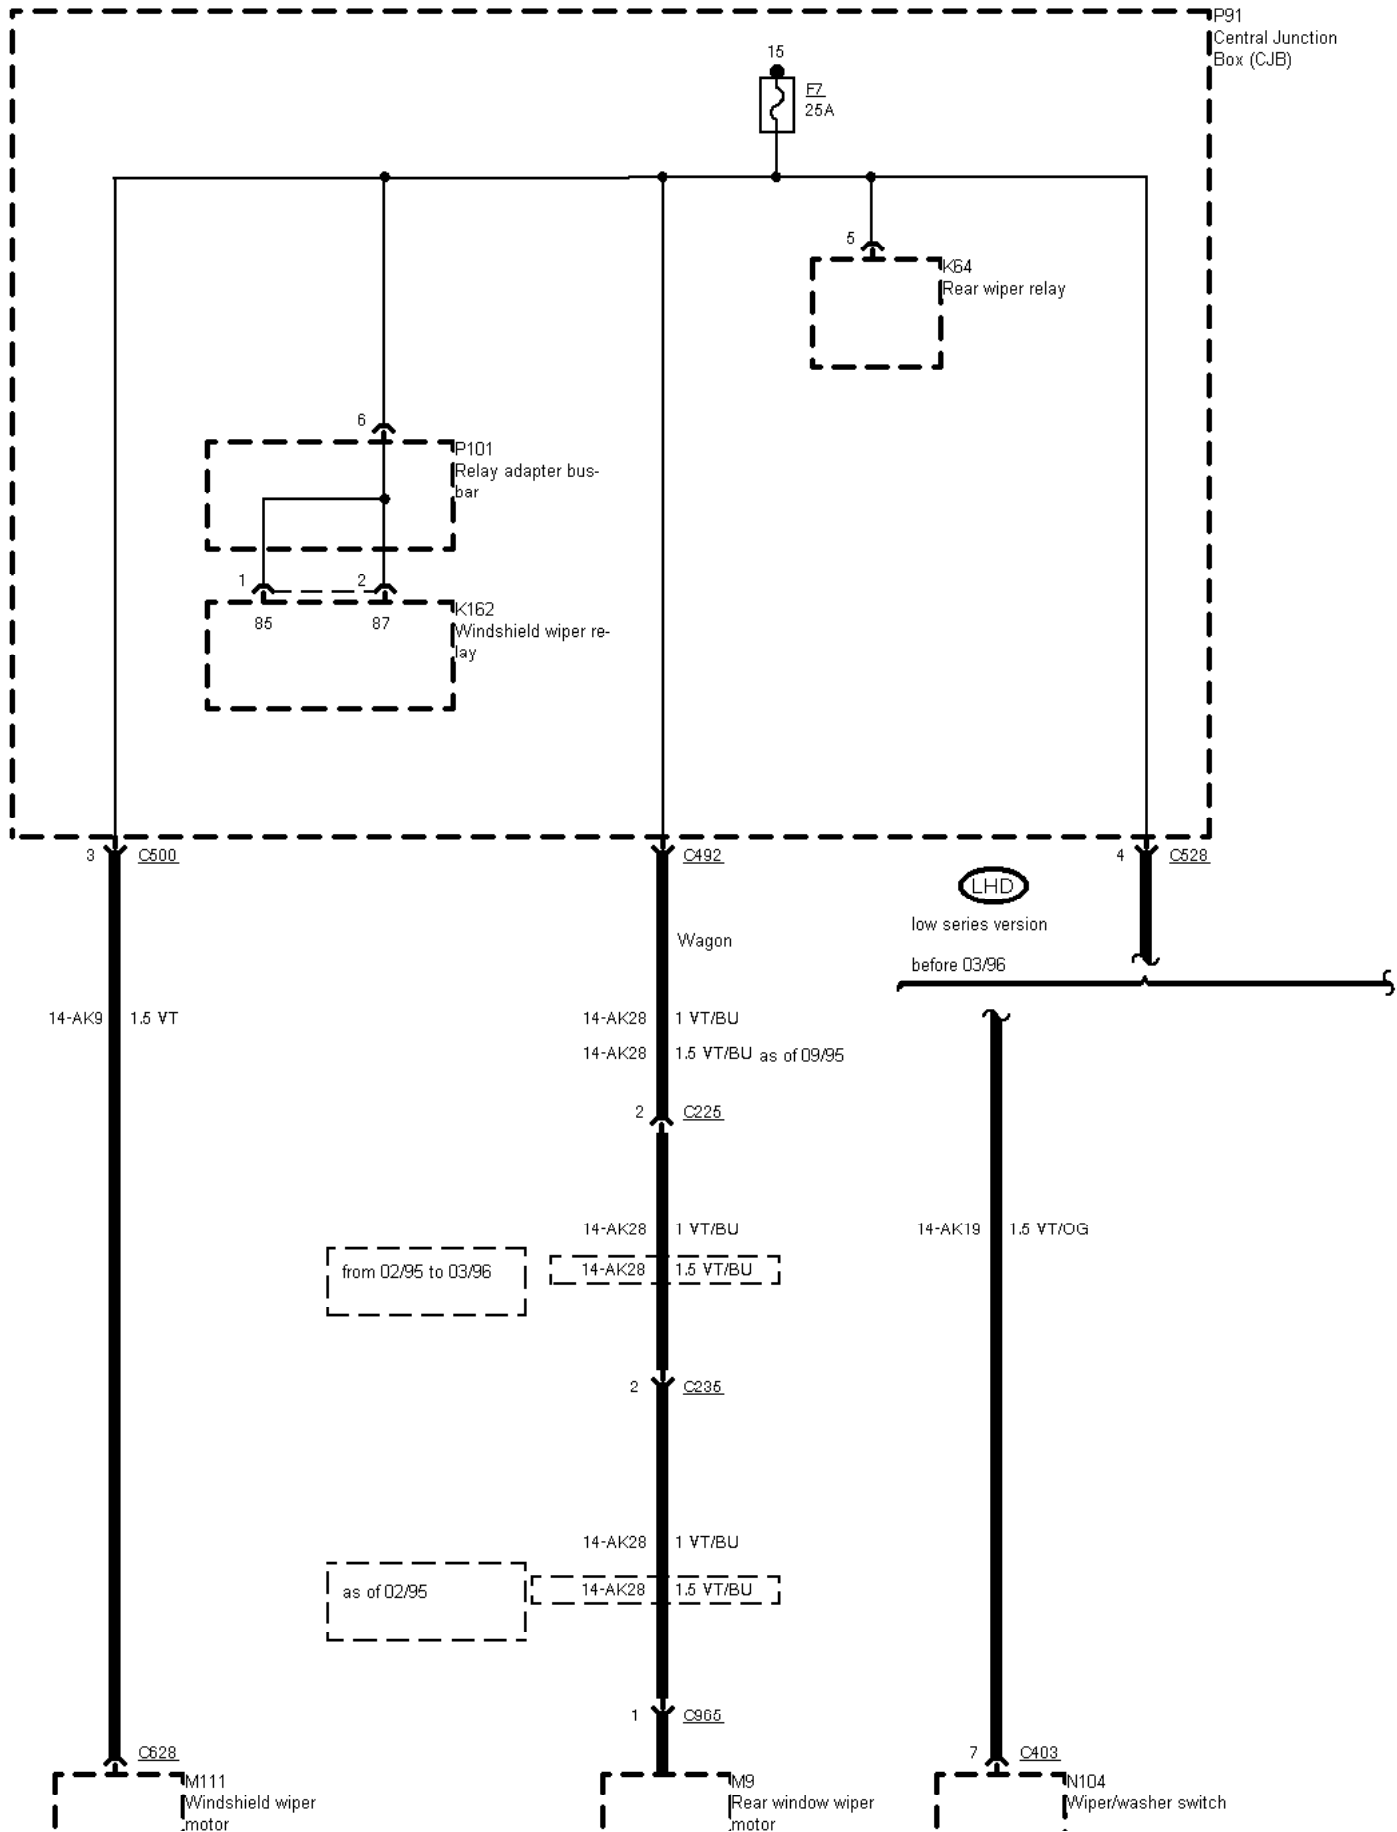




---


01-03-012 , Fuse Details , Fuse 7

---


all others before 02/95

  all others as of 02/95, as of 03/96

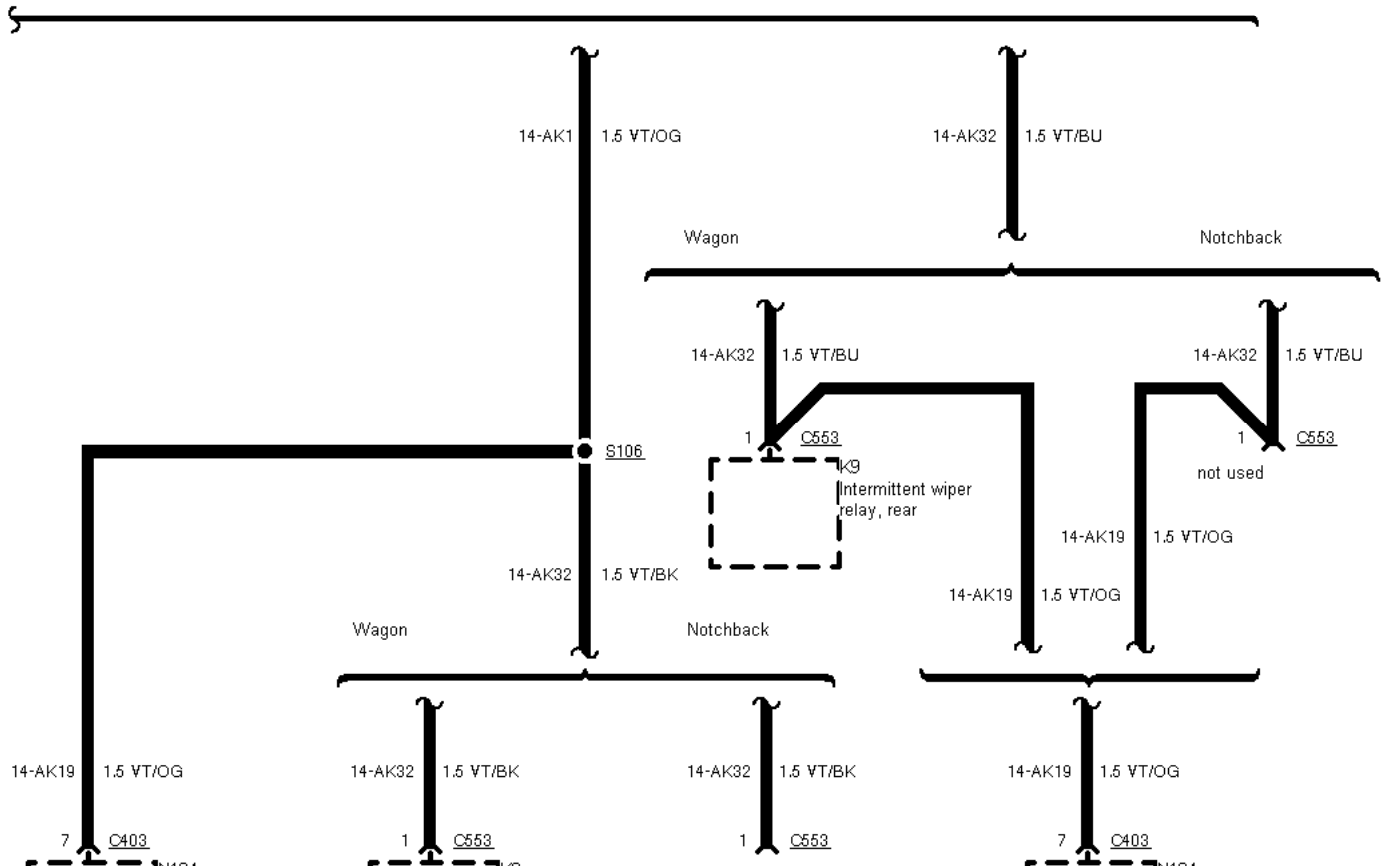

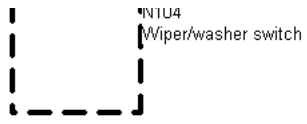


not used

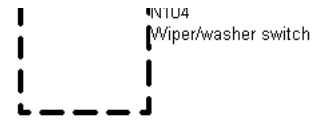 


---

01-03-013 , Fuse Details , Fuse 8

  ---

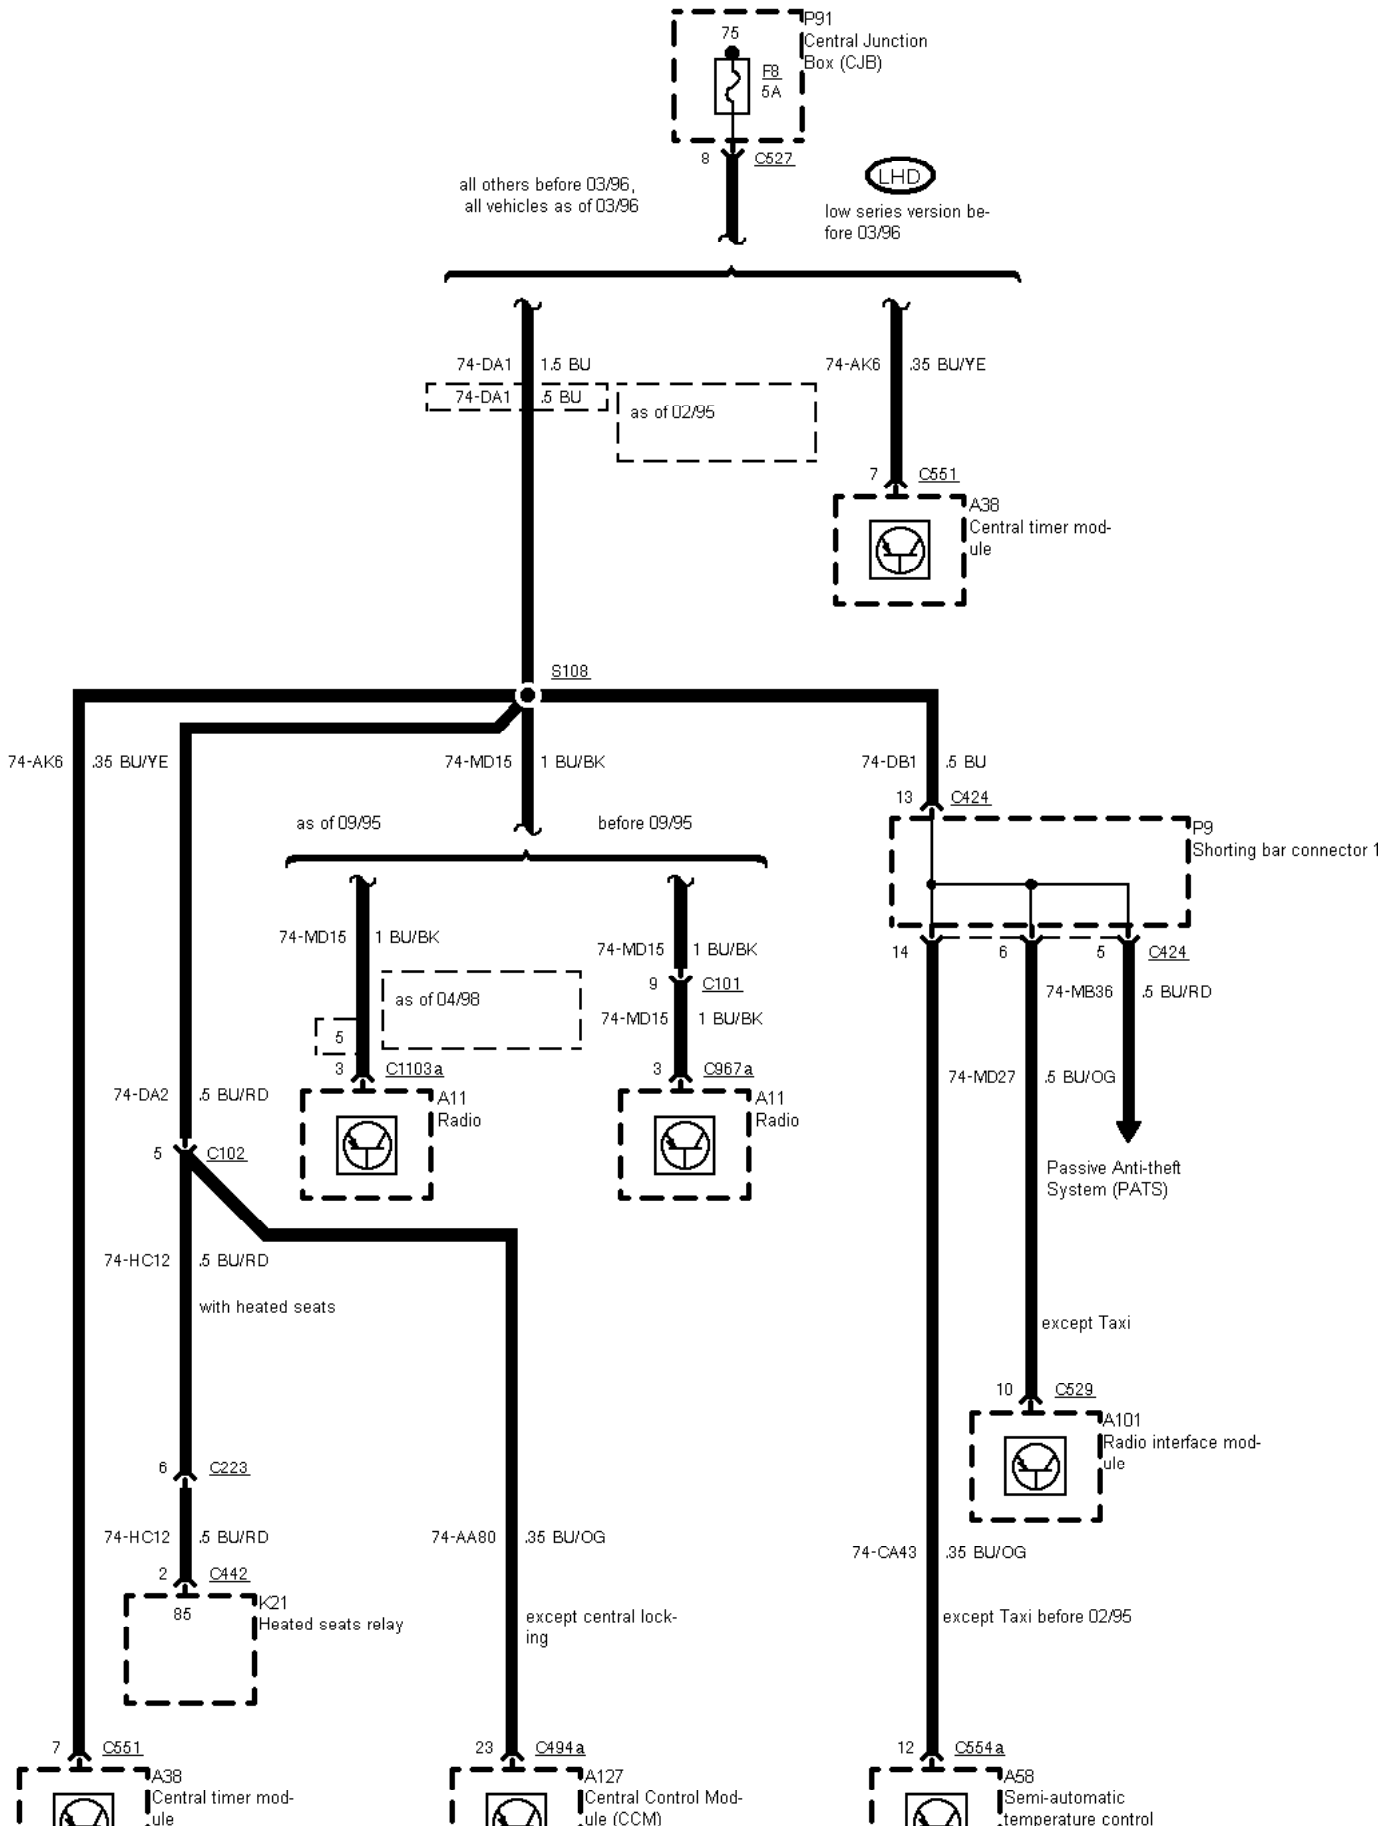






(SATC) module

---


01-03-014 , Fuse Details



---

 Fuse 9

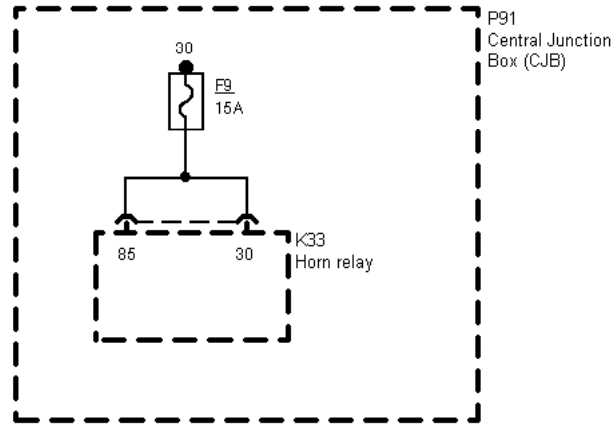

Fuses 10 and 11

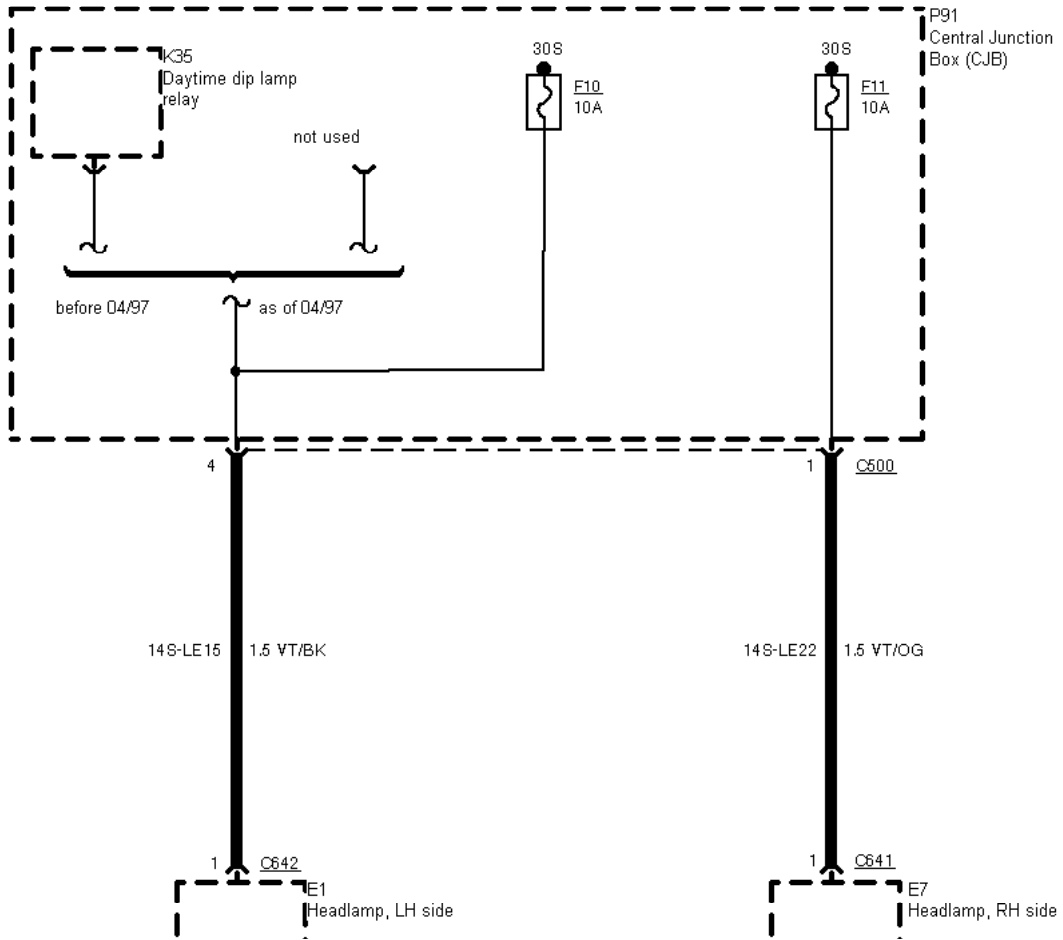 


  

---

01-03-015 , Fuse Details , Fuse 12

 ---

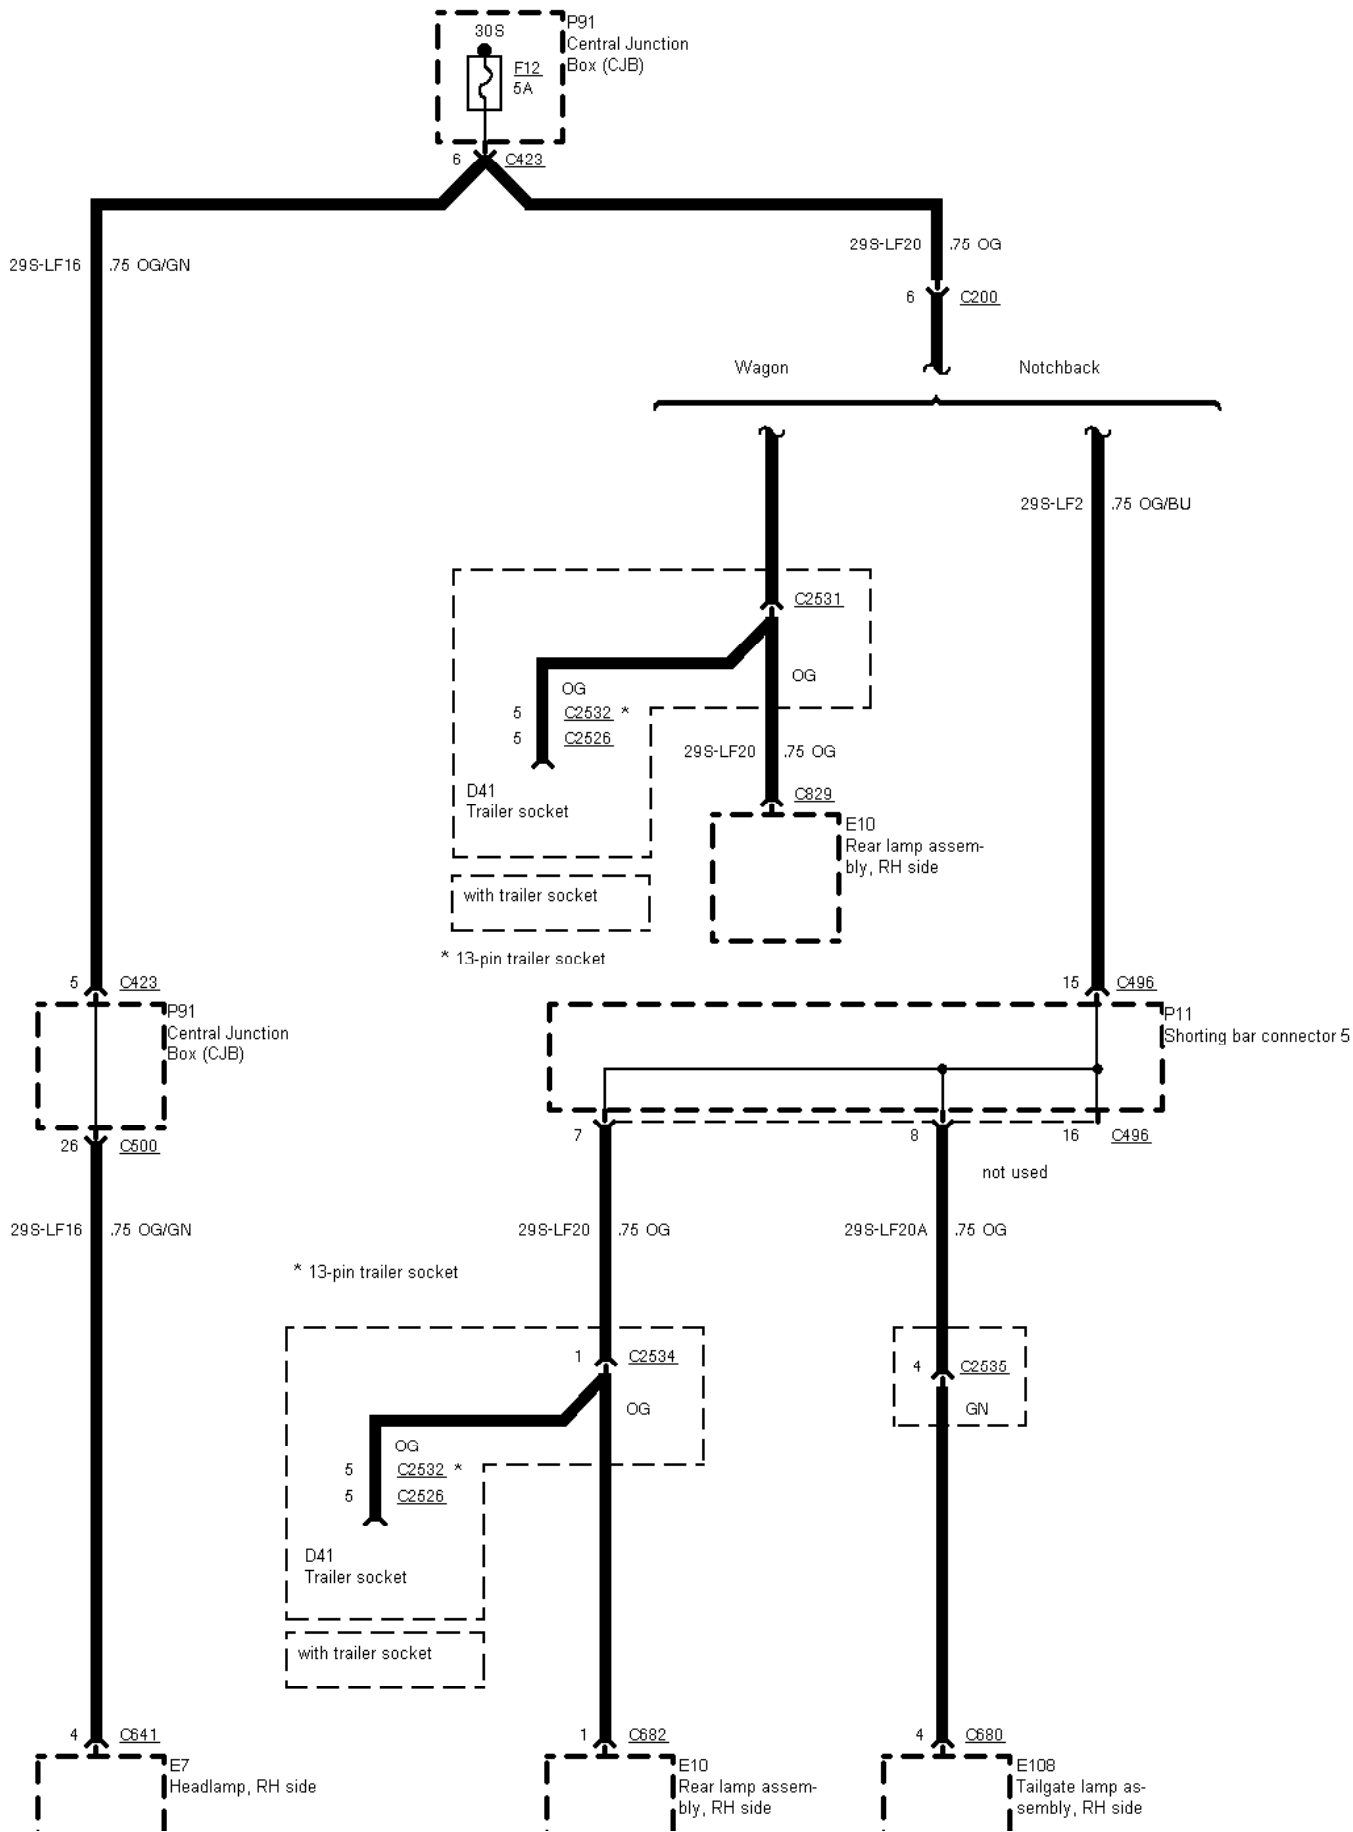

---

 
---

 
 
---

---

01-03-016 , Fuse Details , Fuses 13 and 14, Taxi

---

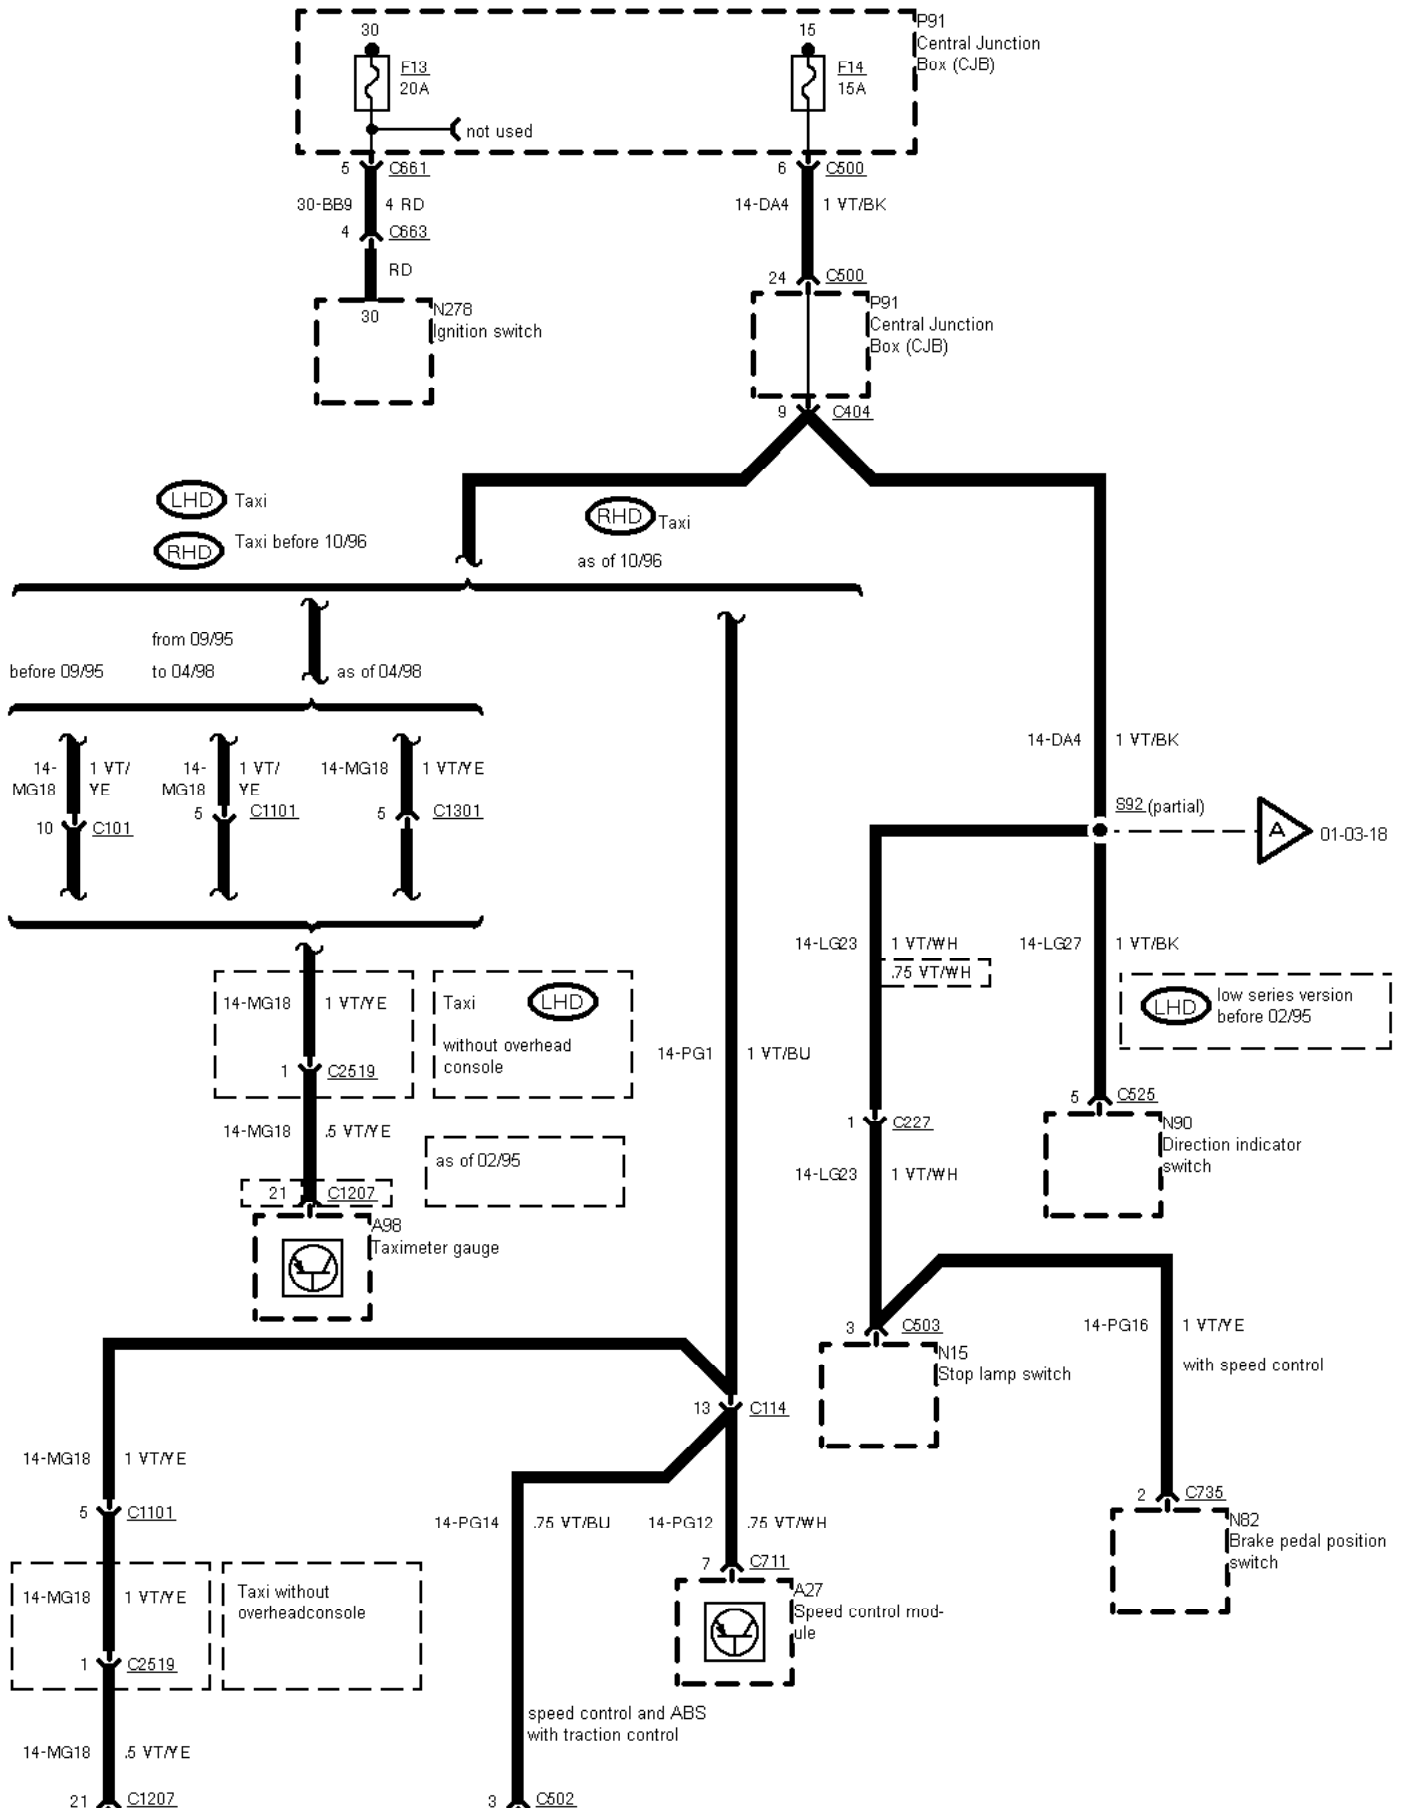


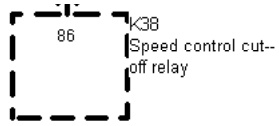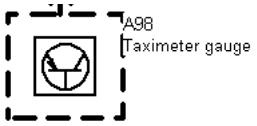



---

**01-03-017 , Fuse Details , Fuses 13 and 14**

   ---

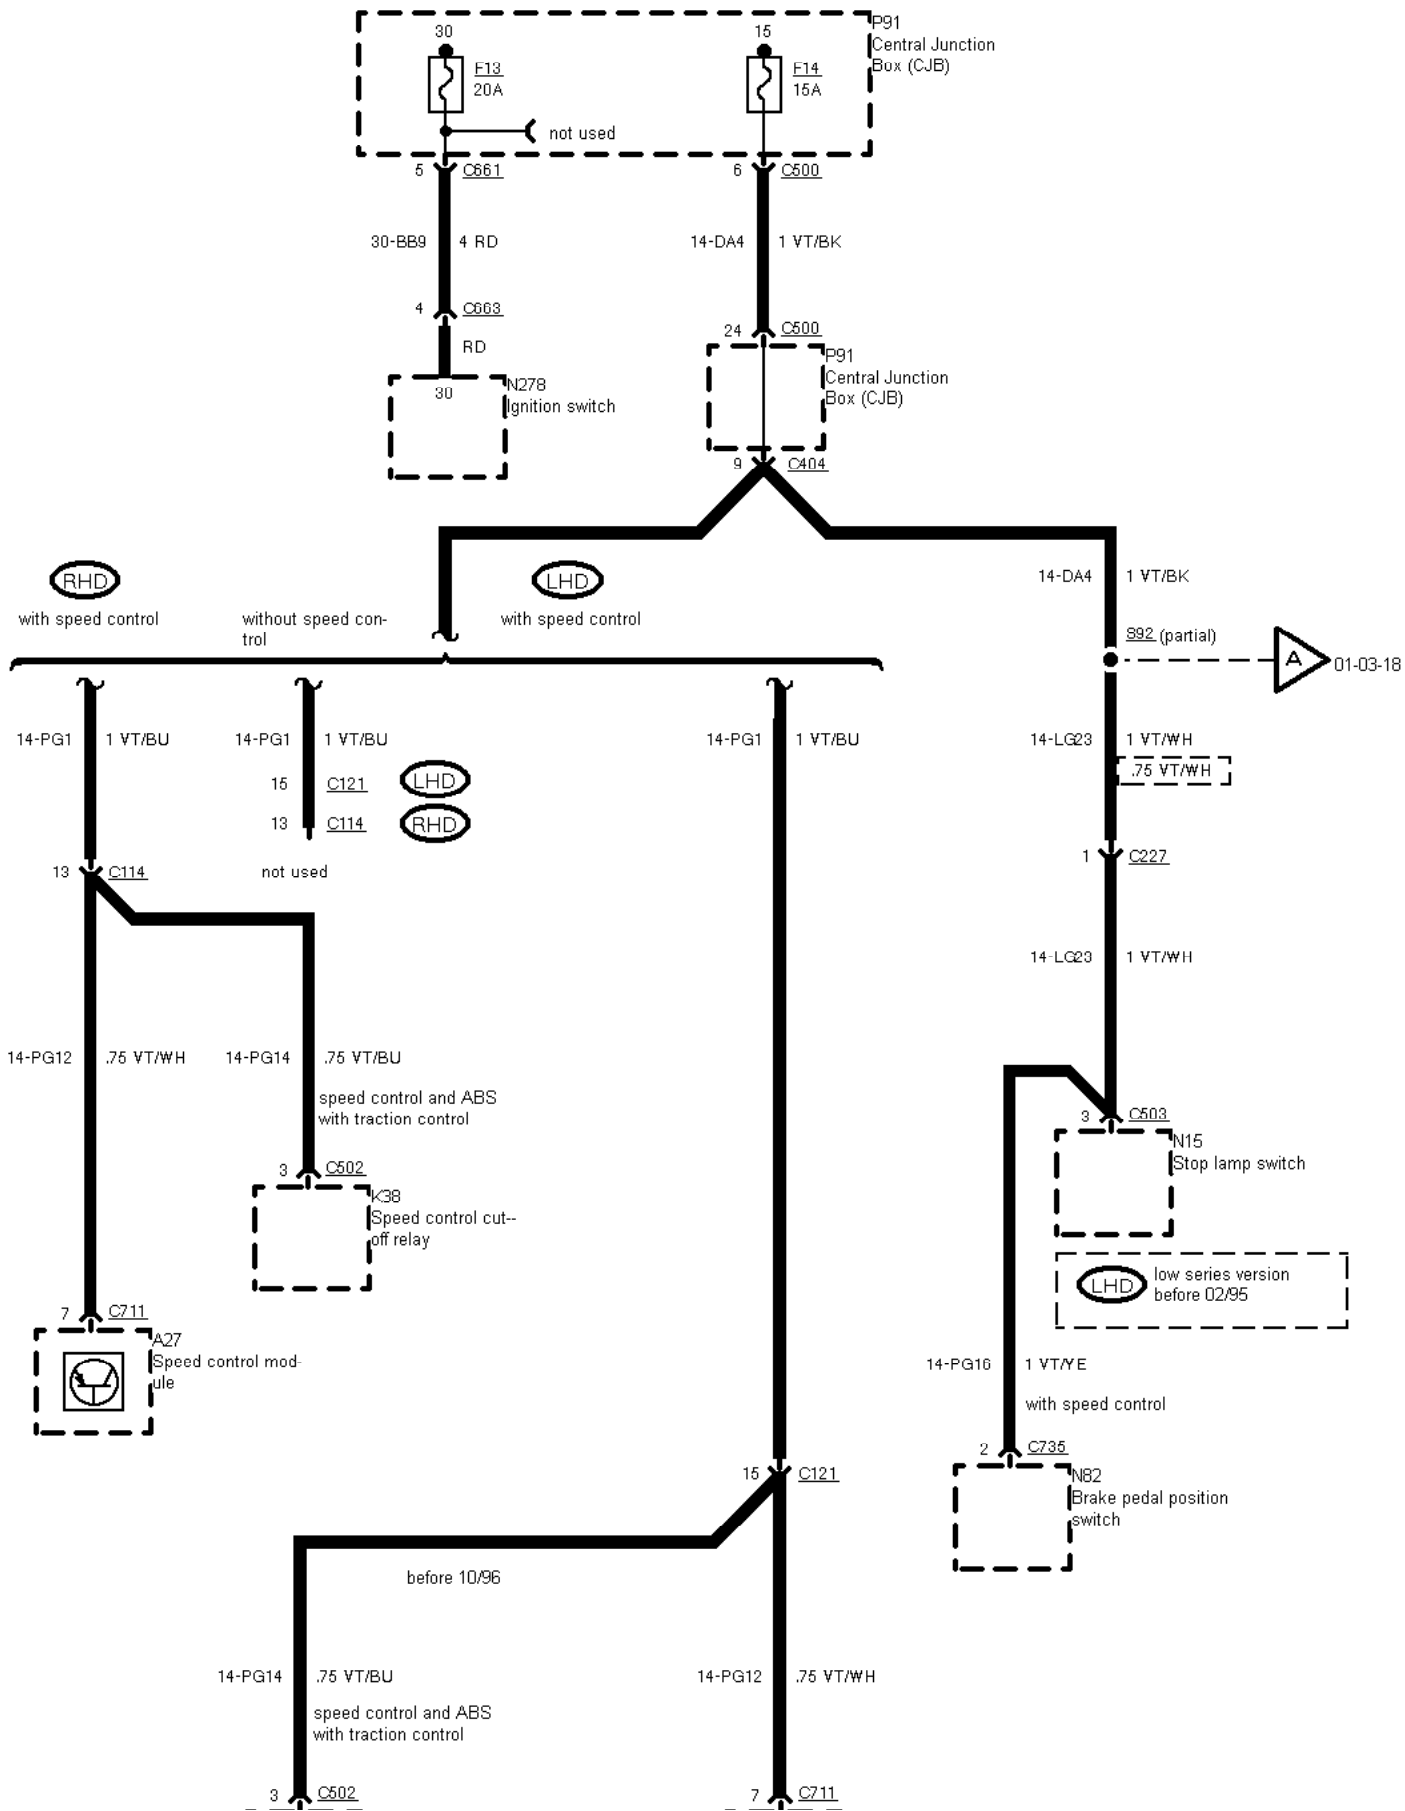




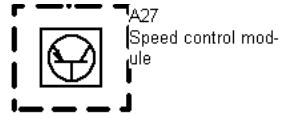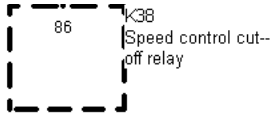


---

**01-03-018 , Fuse Details , Fuse 14**

  ---

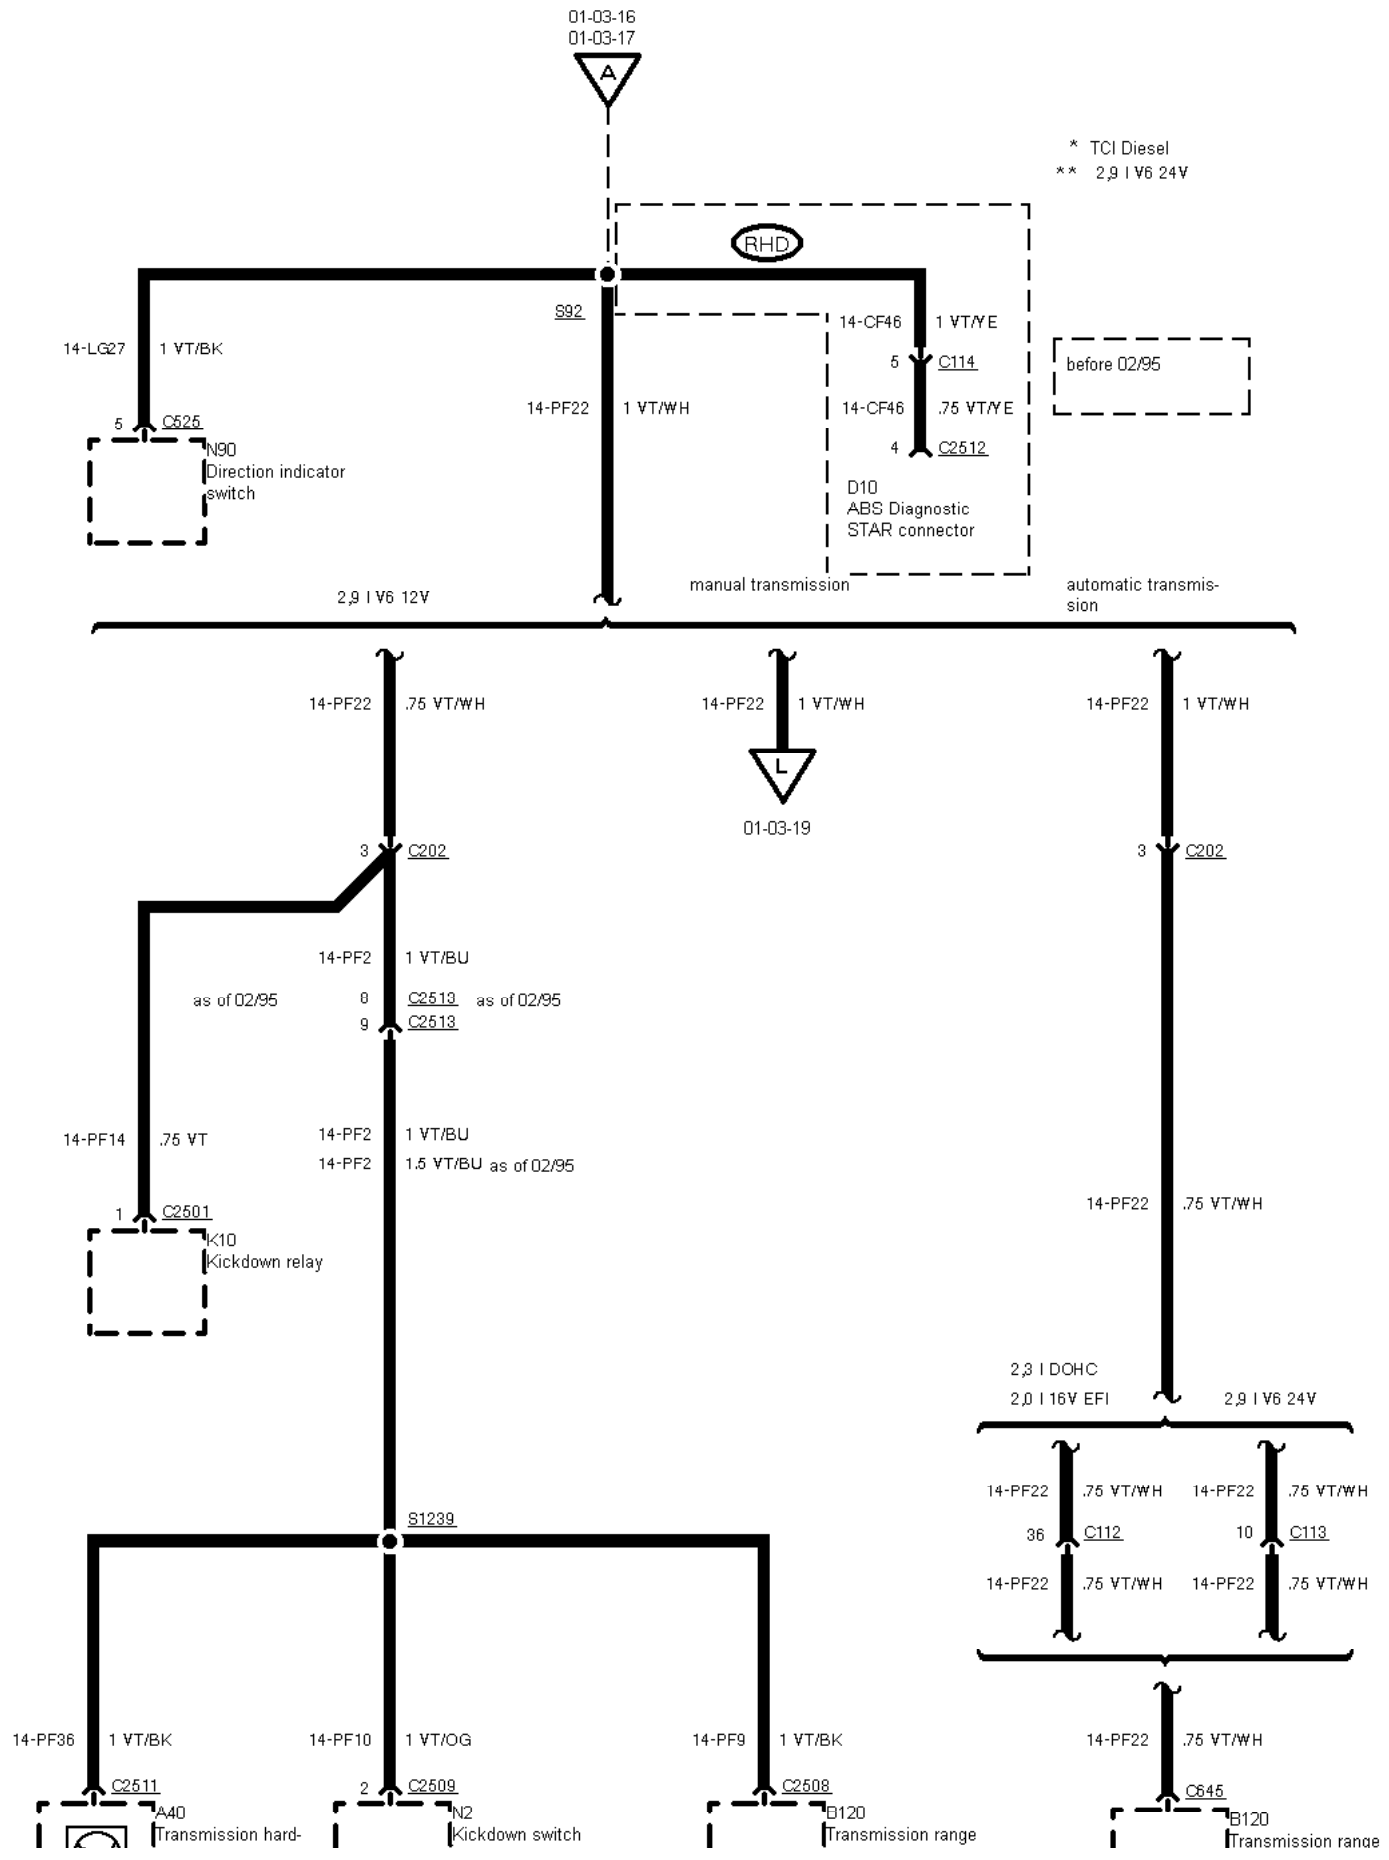



---

01-03-019 , Fuse Details , Fuse 14

---

01-03-18



 
14-PF22 1 VT/WH

 
 
 
manual transmission  
TCI Diesel before  
09/96

manual transmission  
TCI Diesel as of  
09/96

automatic transmission  
TCI Diesel as  
of 11/97

manual transmission  
except TCI Diesel

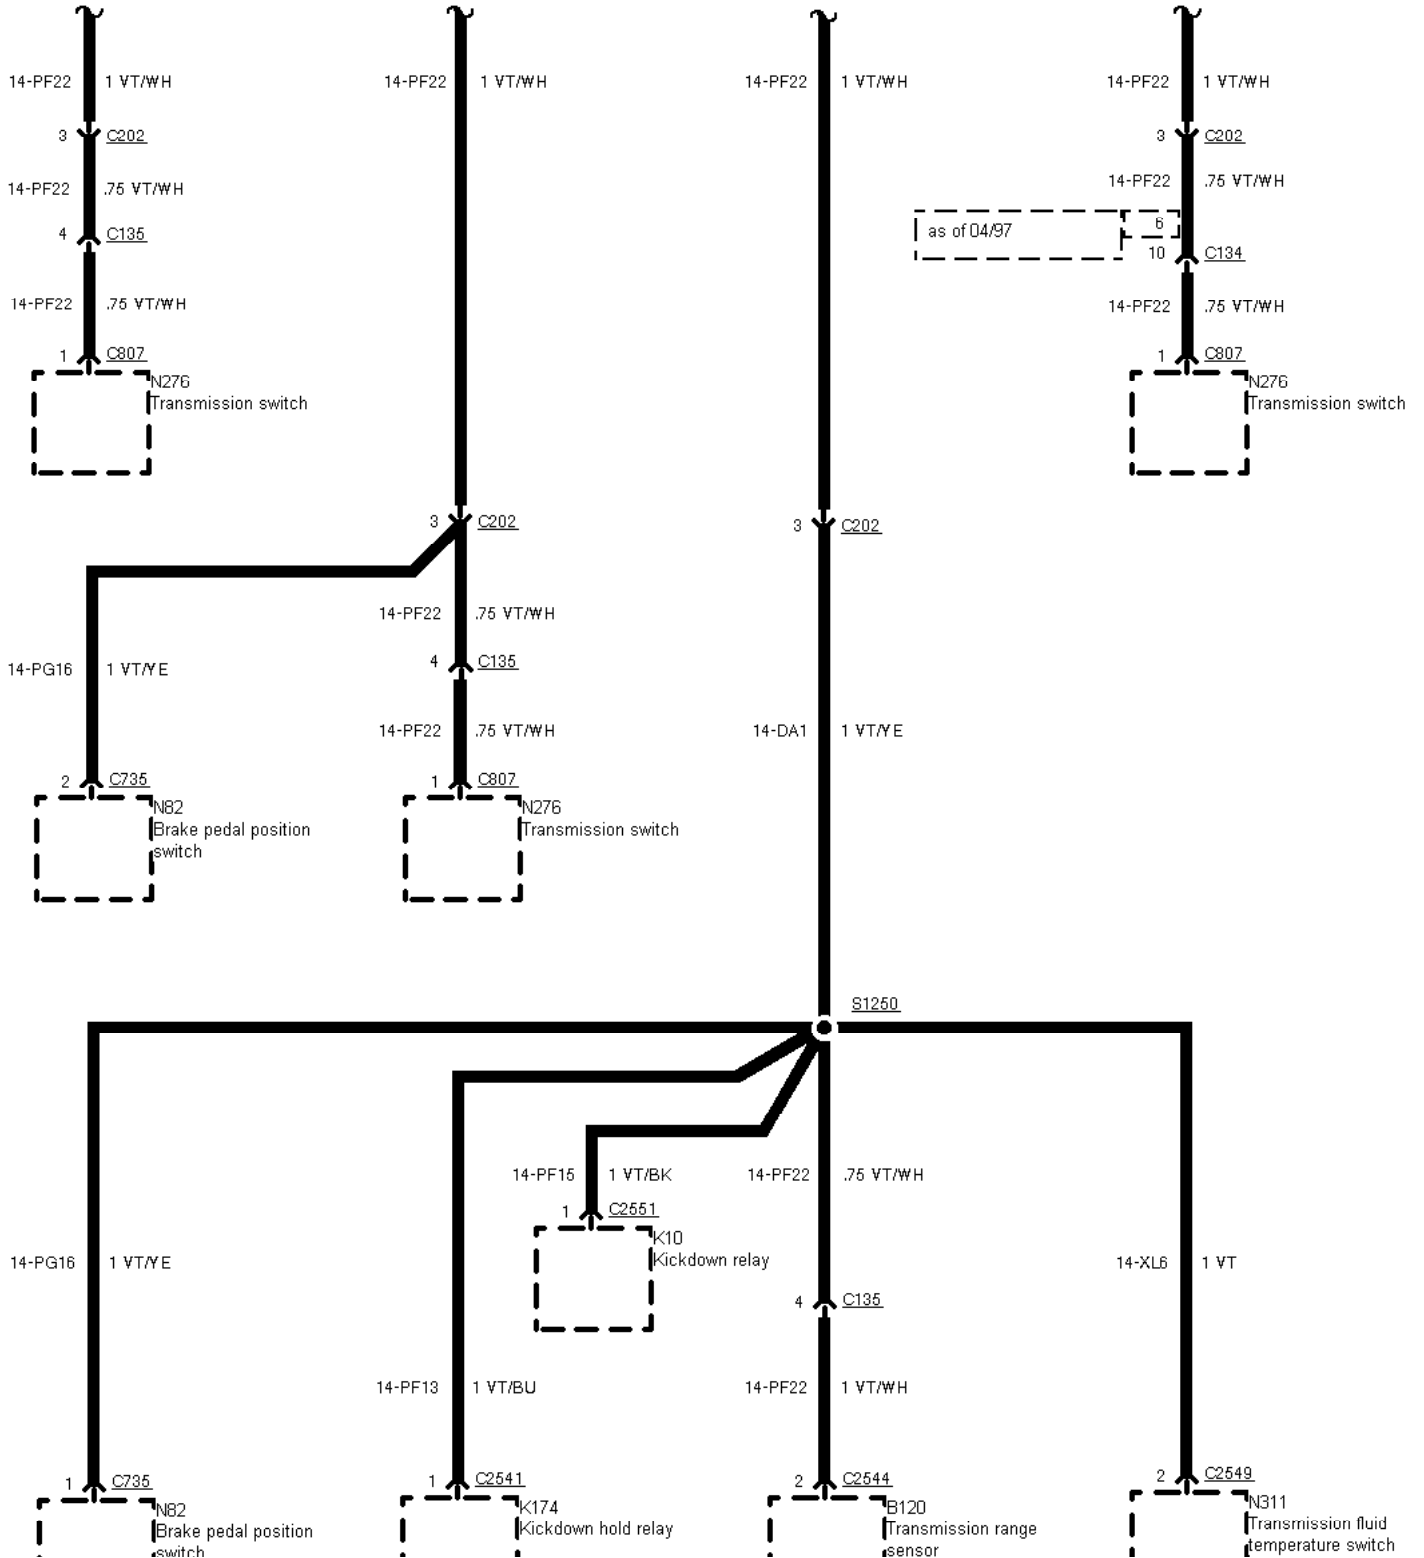




---

01-03-020 , Fuse Details , Fuses 15 and 16

 ---

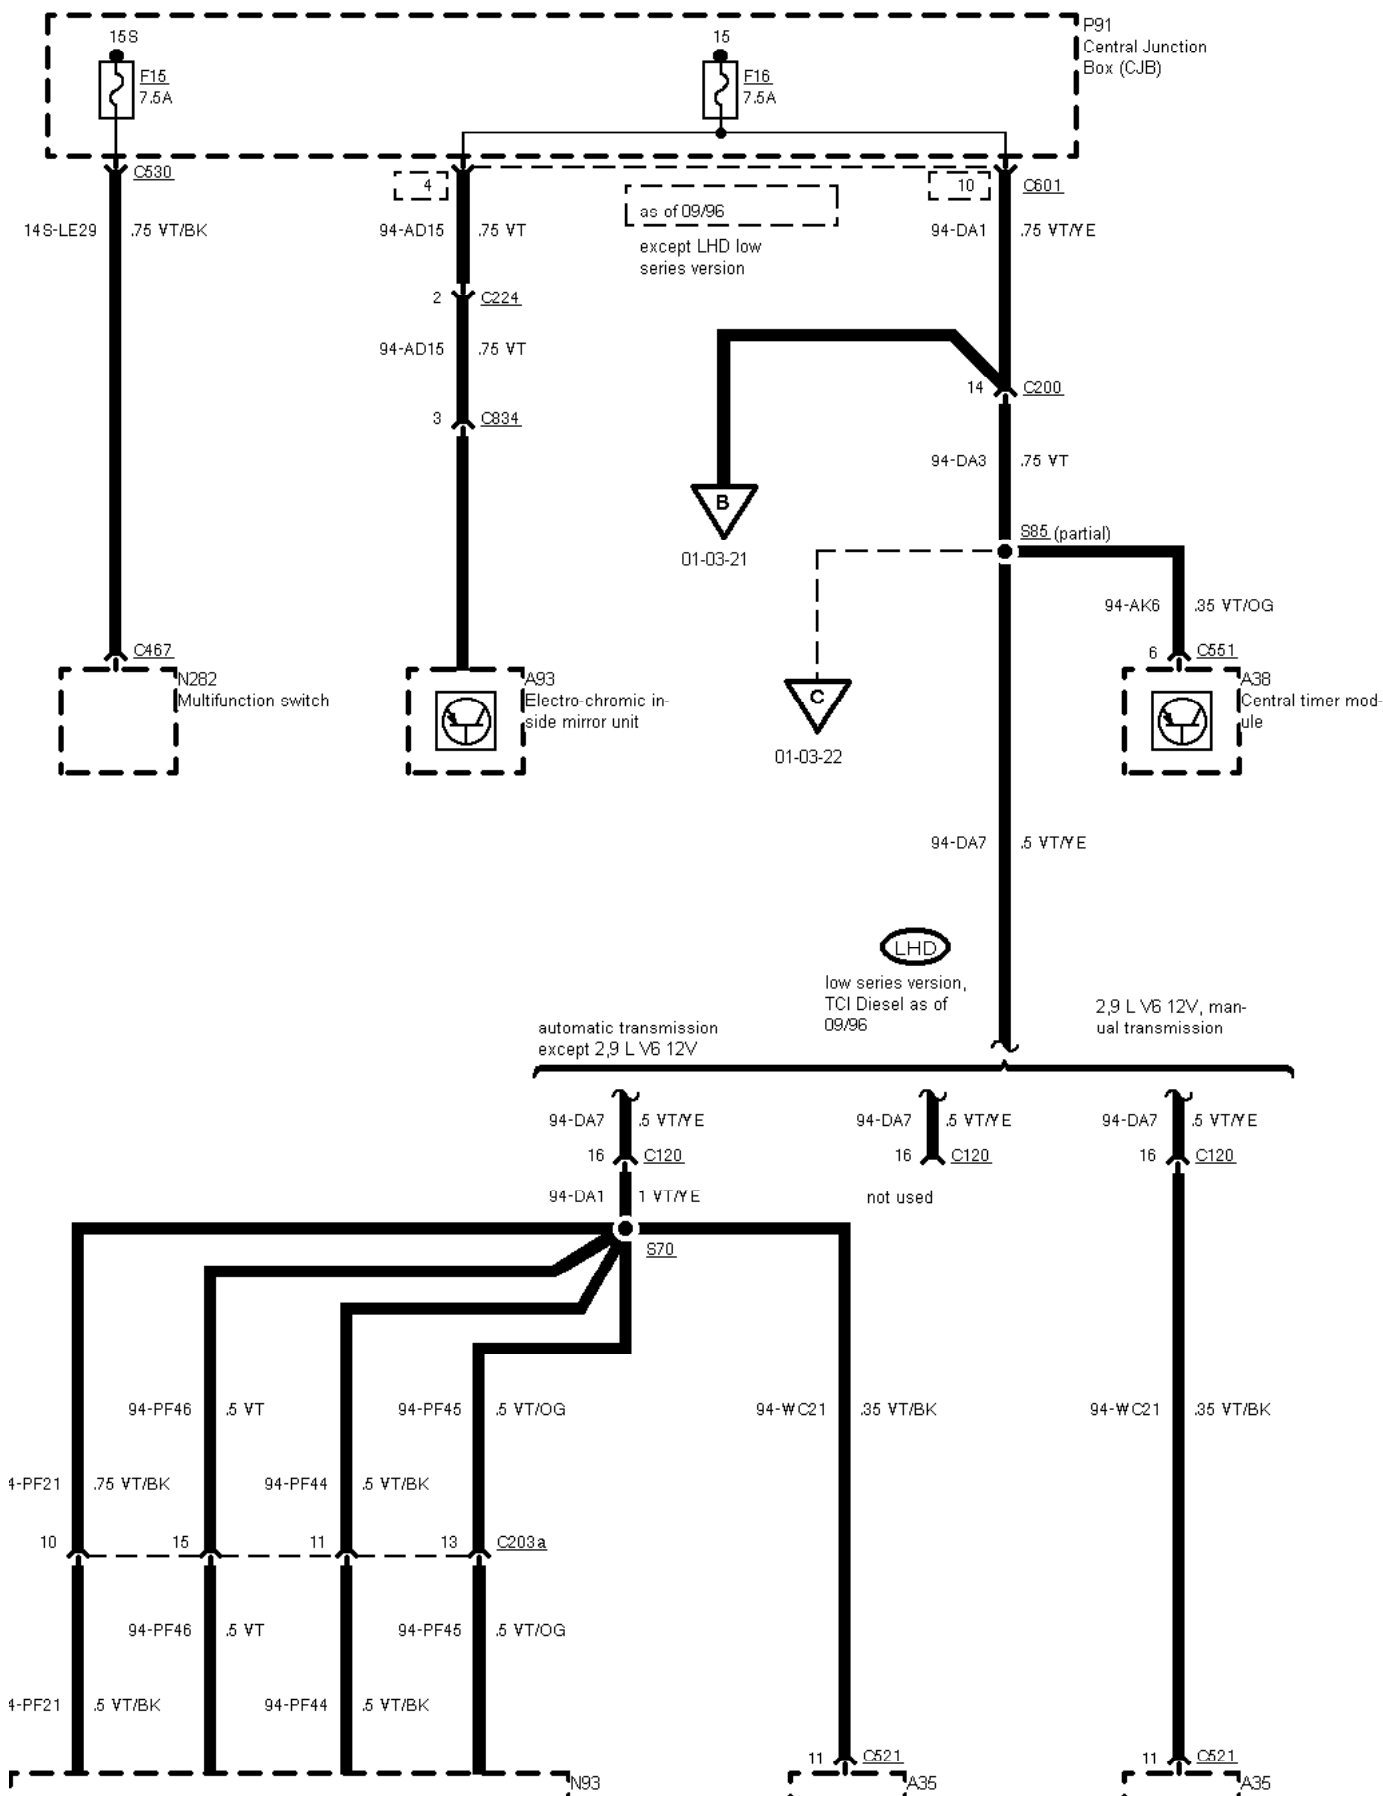



Gearshift lever unit



Instrument interface  
module

 


Instrument interface  
module

---

01-03-021 , Fuse Details , Fuse 16

---

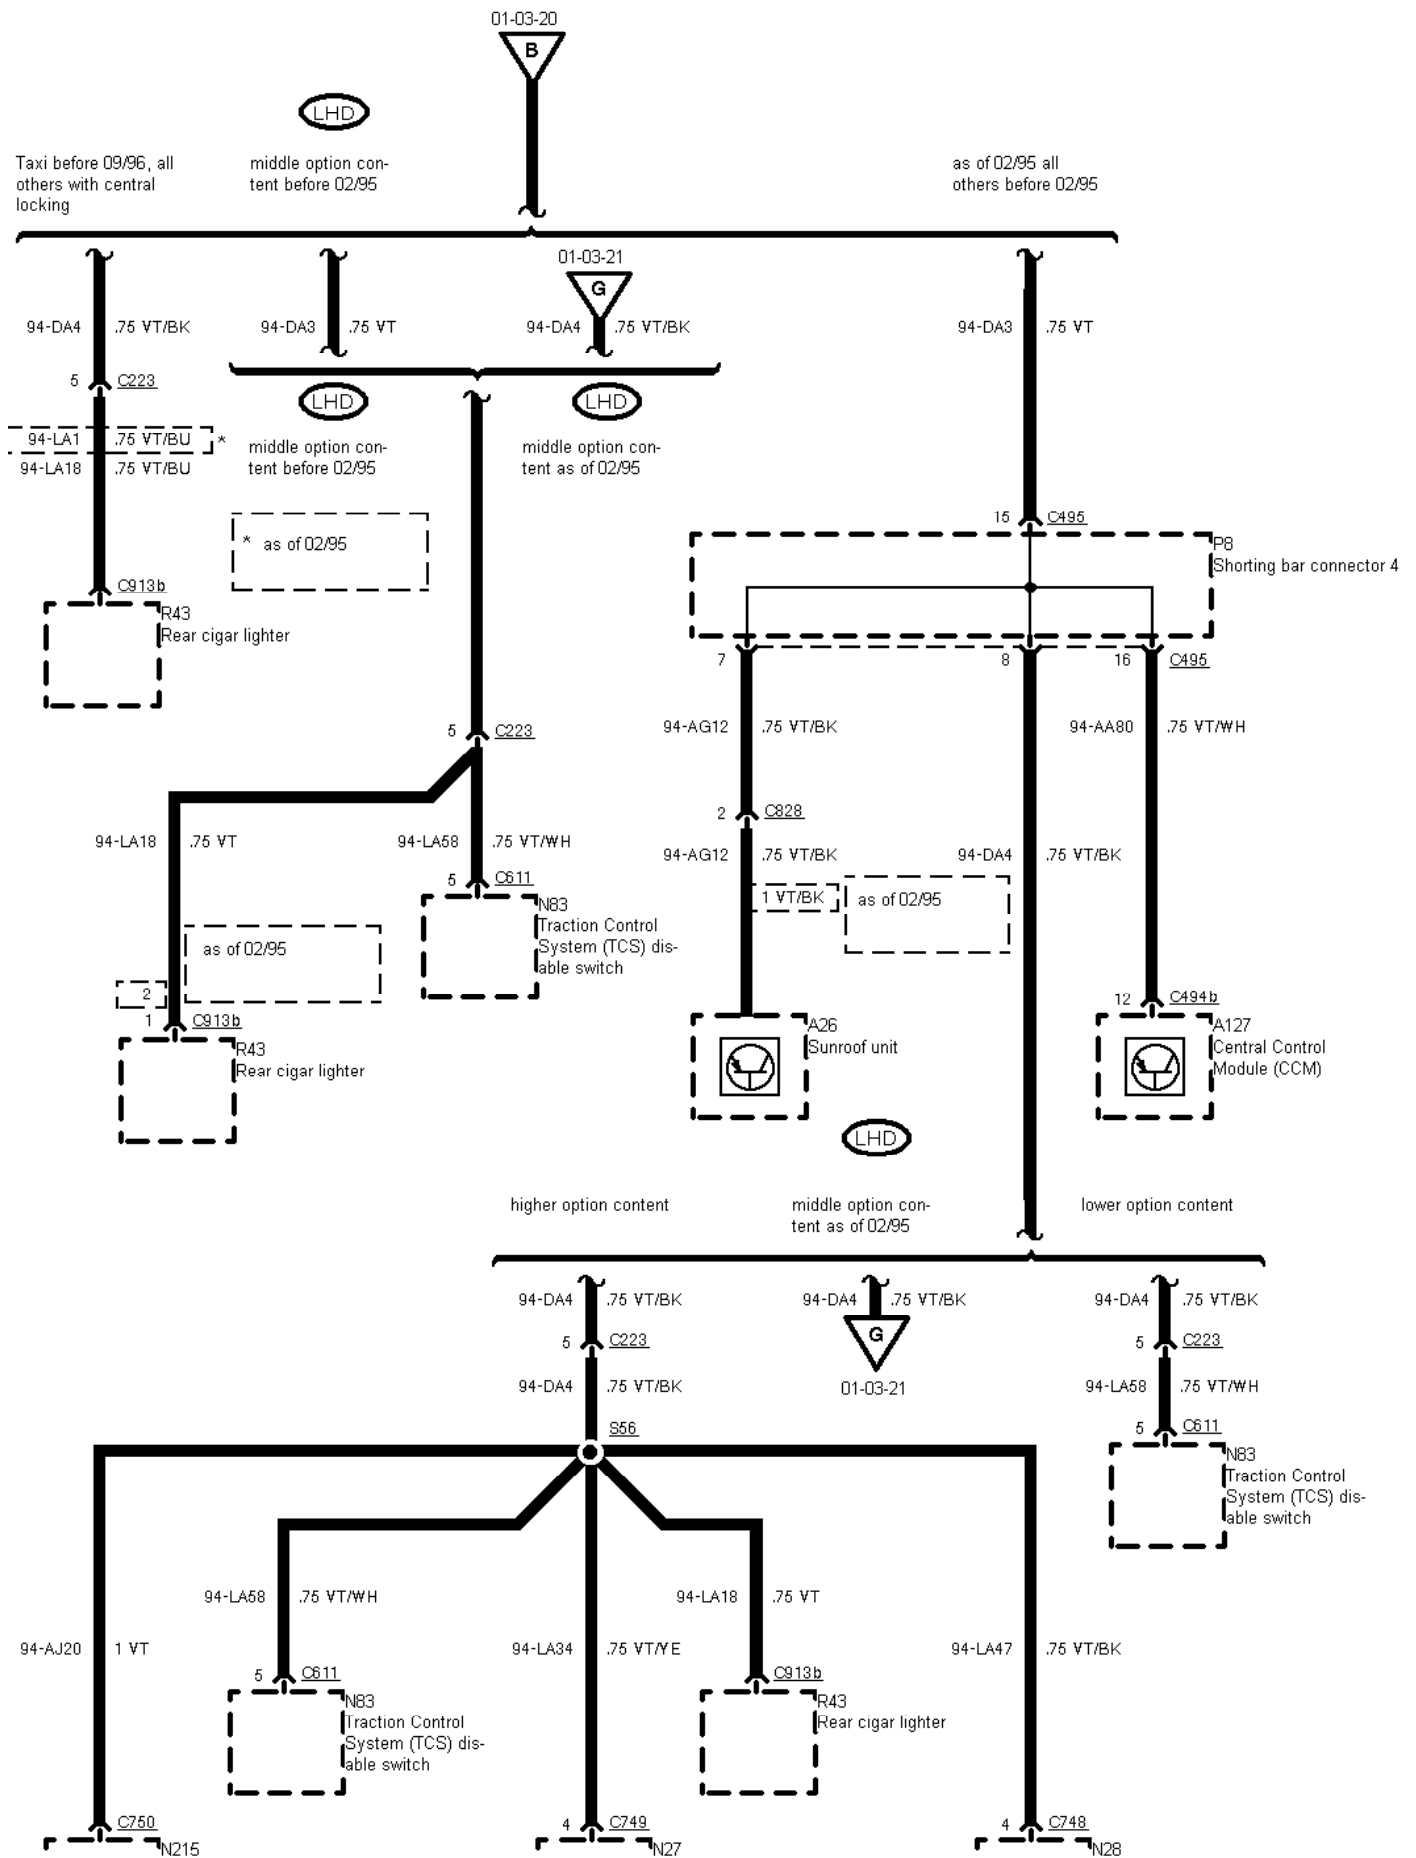



Lock switch, rear windows

Left front seat heater switch

Right front seat heater switch

---


**01-03-022 , Fuse Details , Fuse 16**

 ---

01-03-20



before 02/95

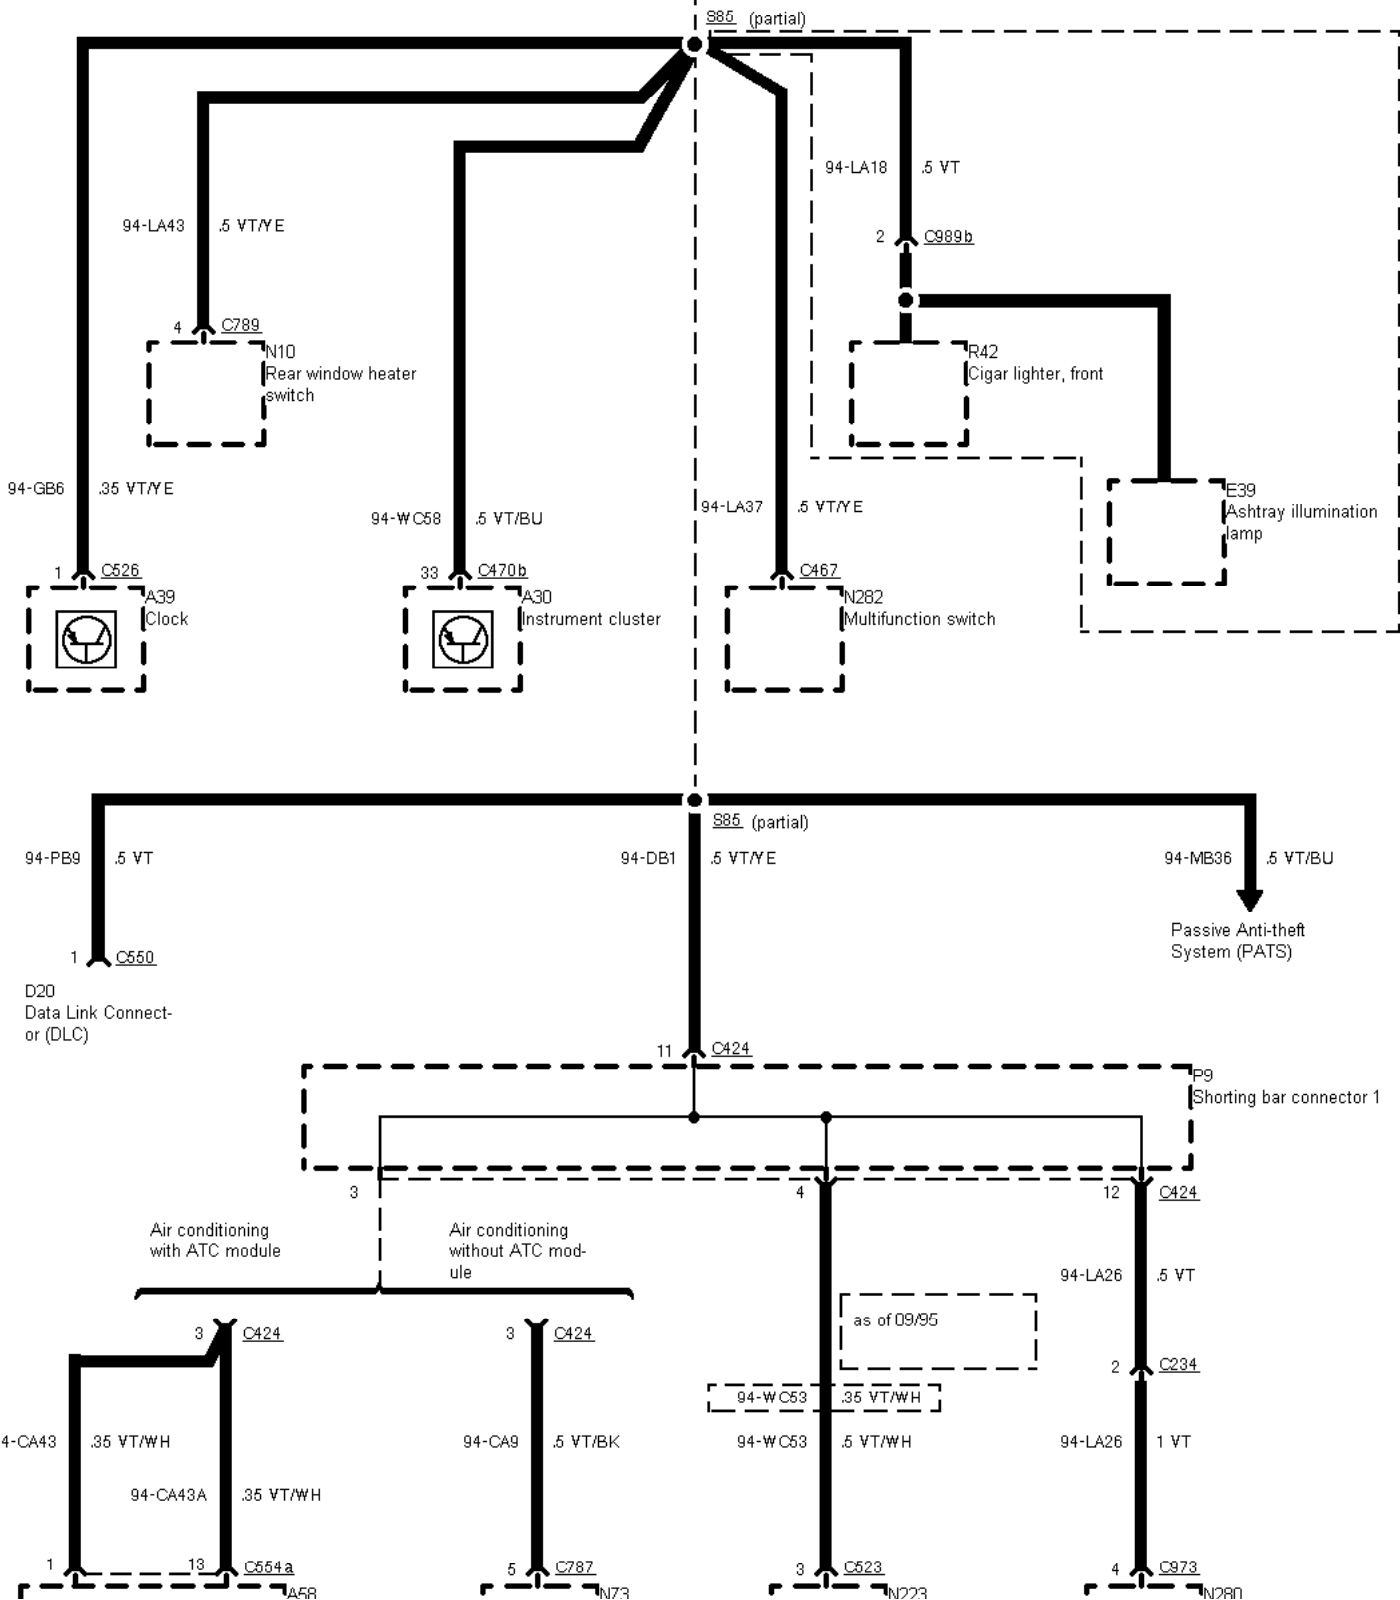



Semi-automatic temperature control (SATC) module



Heater blower switch



Instrument cluster mode switch

 


 
Windshield heater switch

---

01-03-023 , Fuse Details , Fuse 17

---

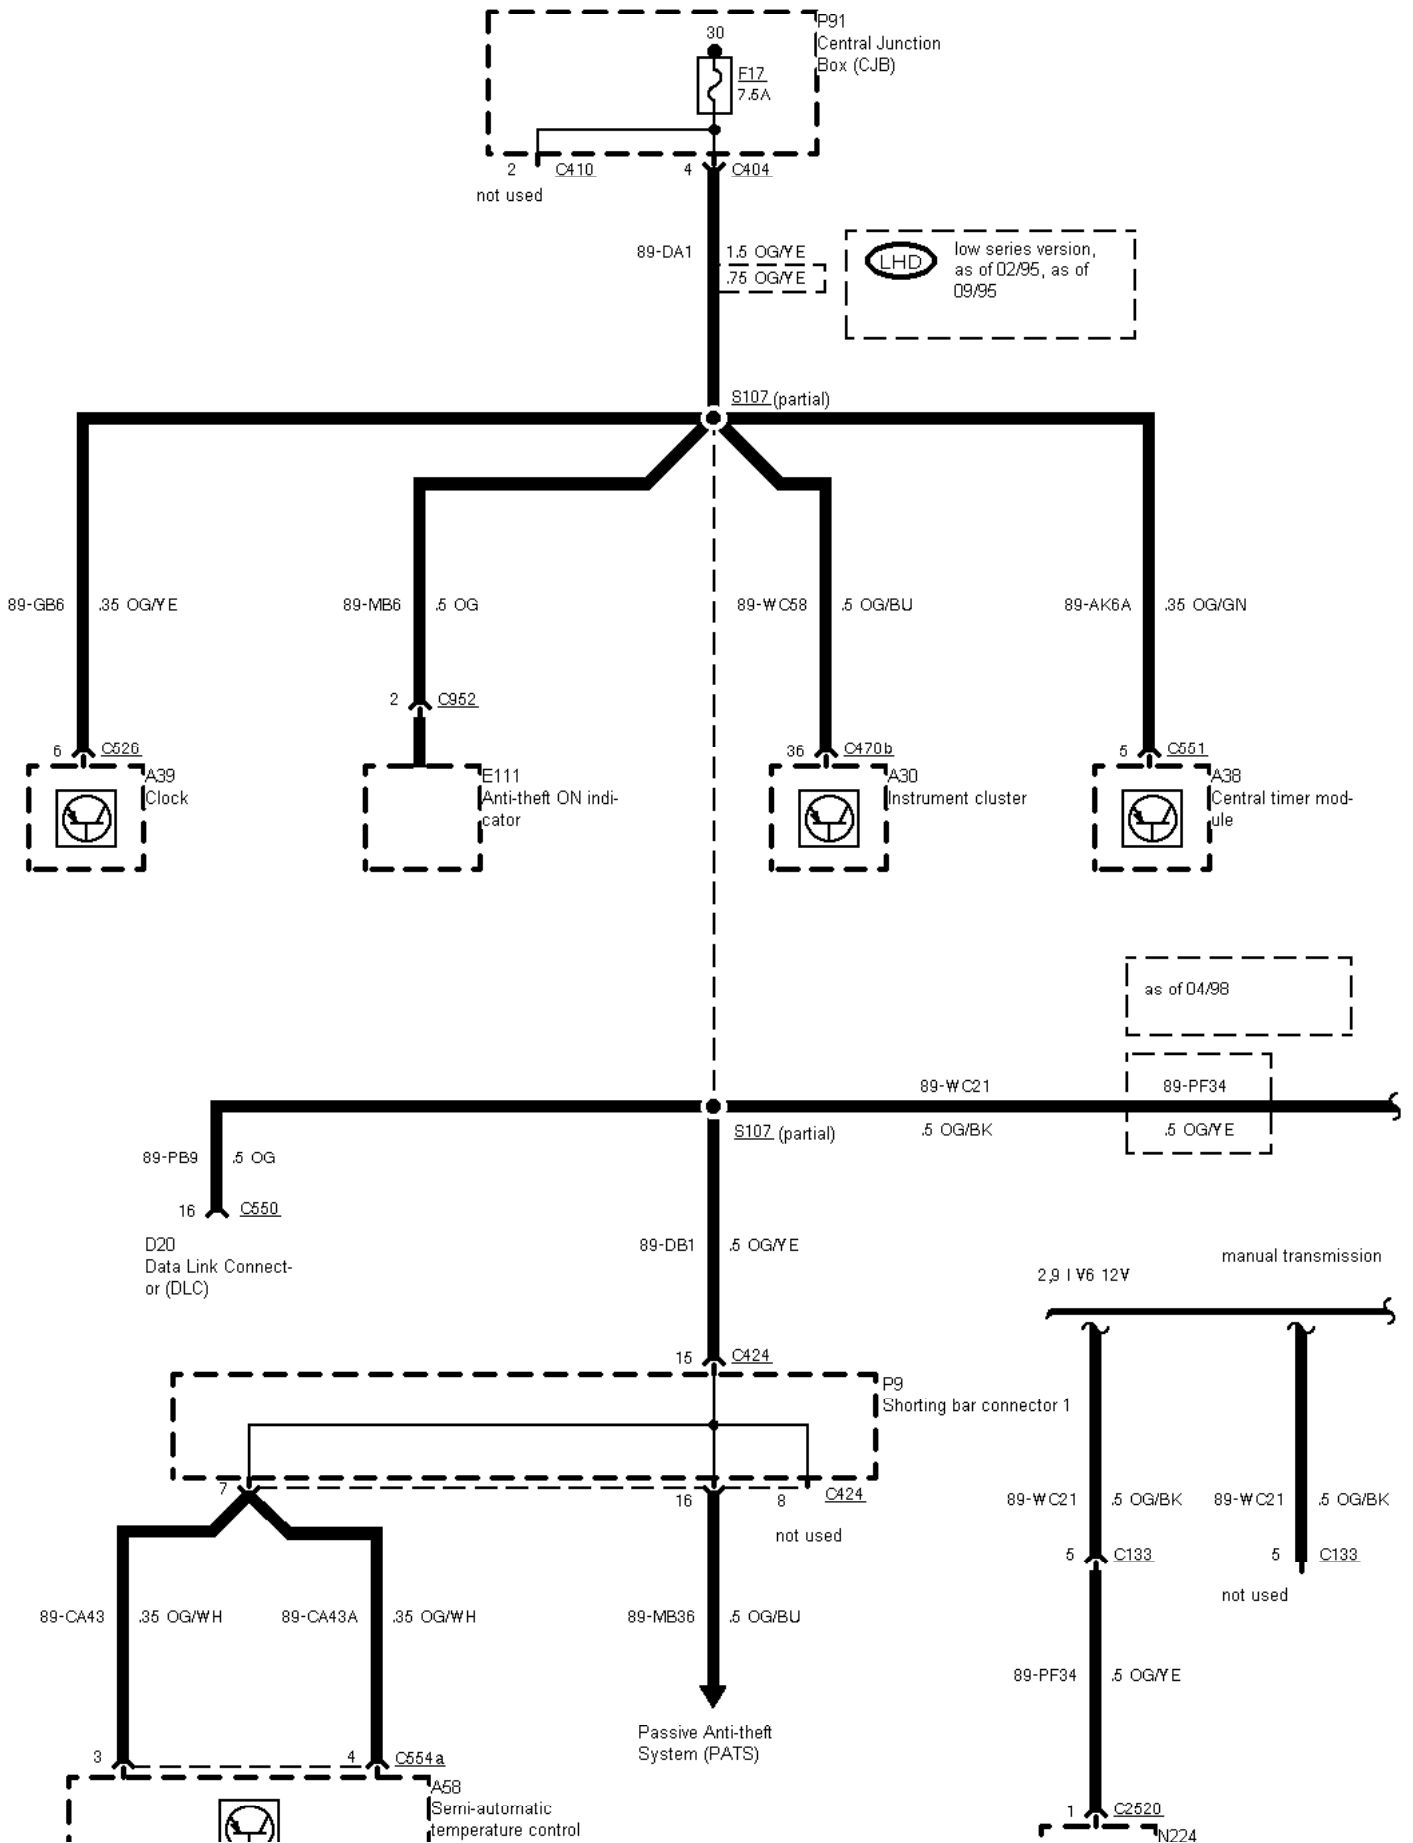




---

**01-03-024 , Fuse Details**

 
---



Fuse 18 before 04/97

RHD

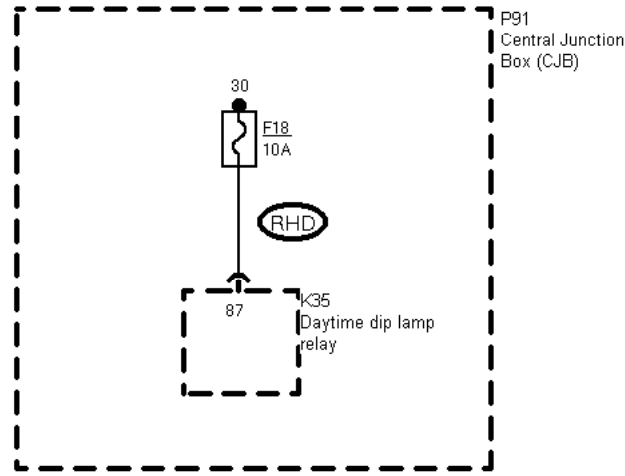

Fuse 17

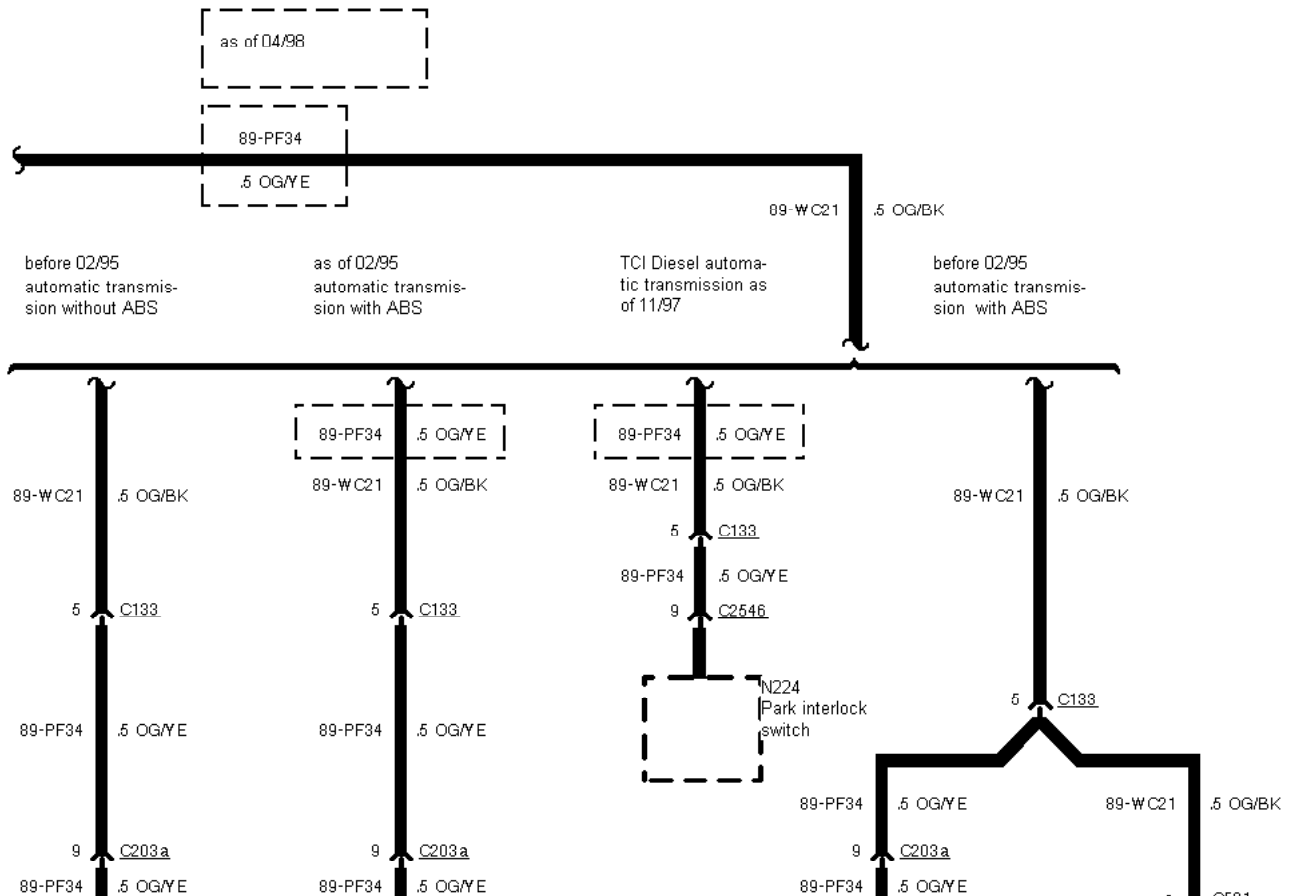 


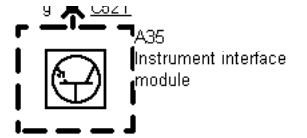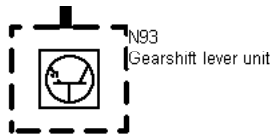  

---

01-03-025 , Fuse Details , Fuses 19 and 20

 ---

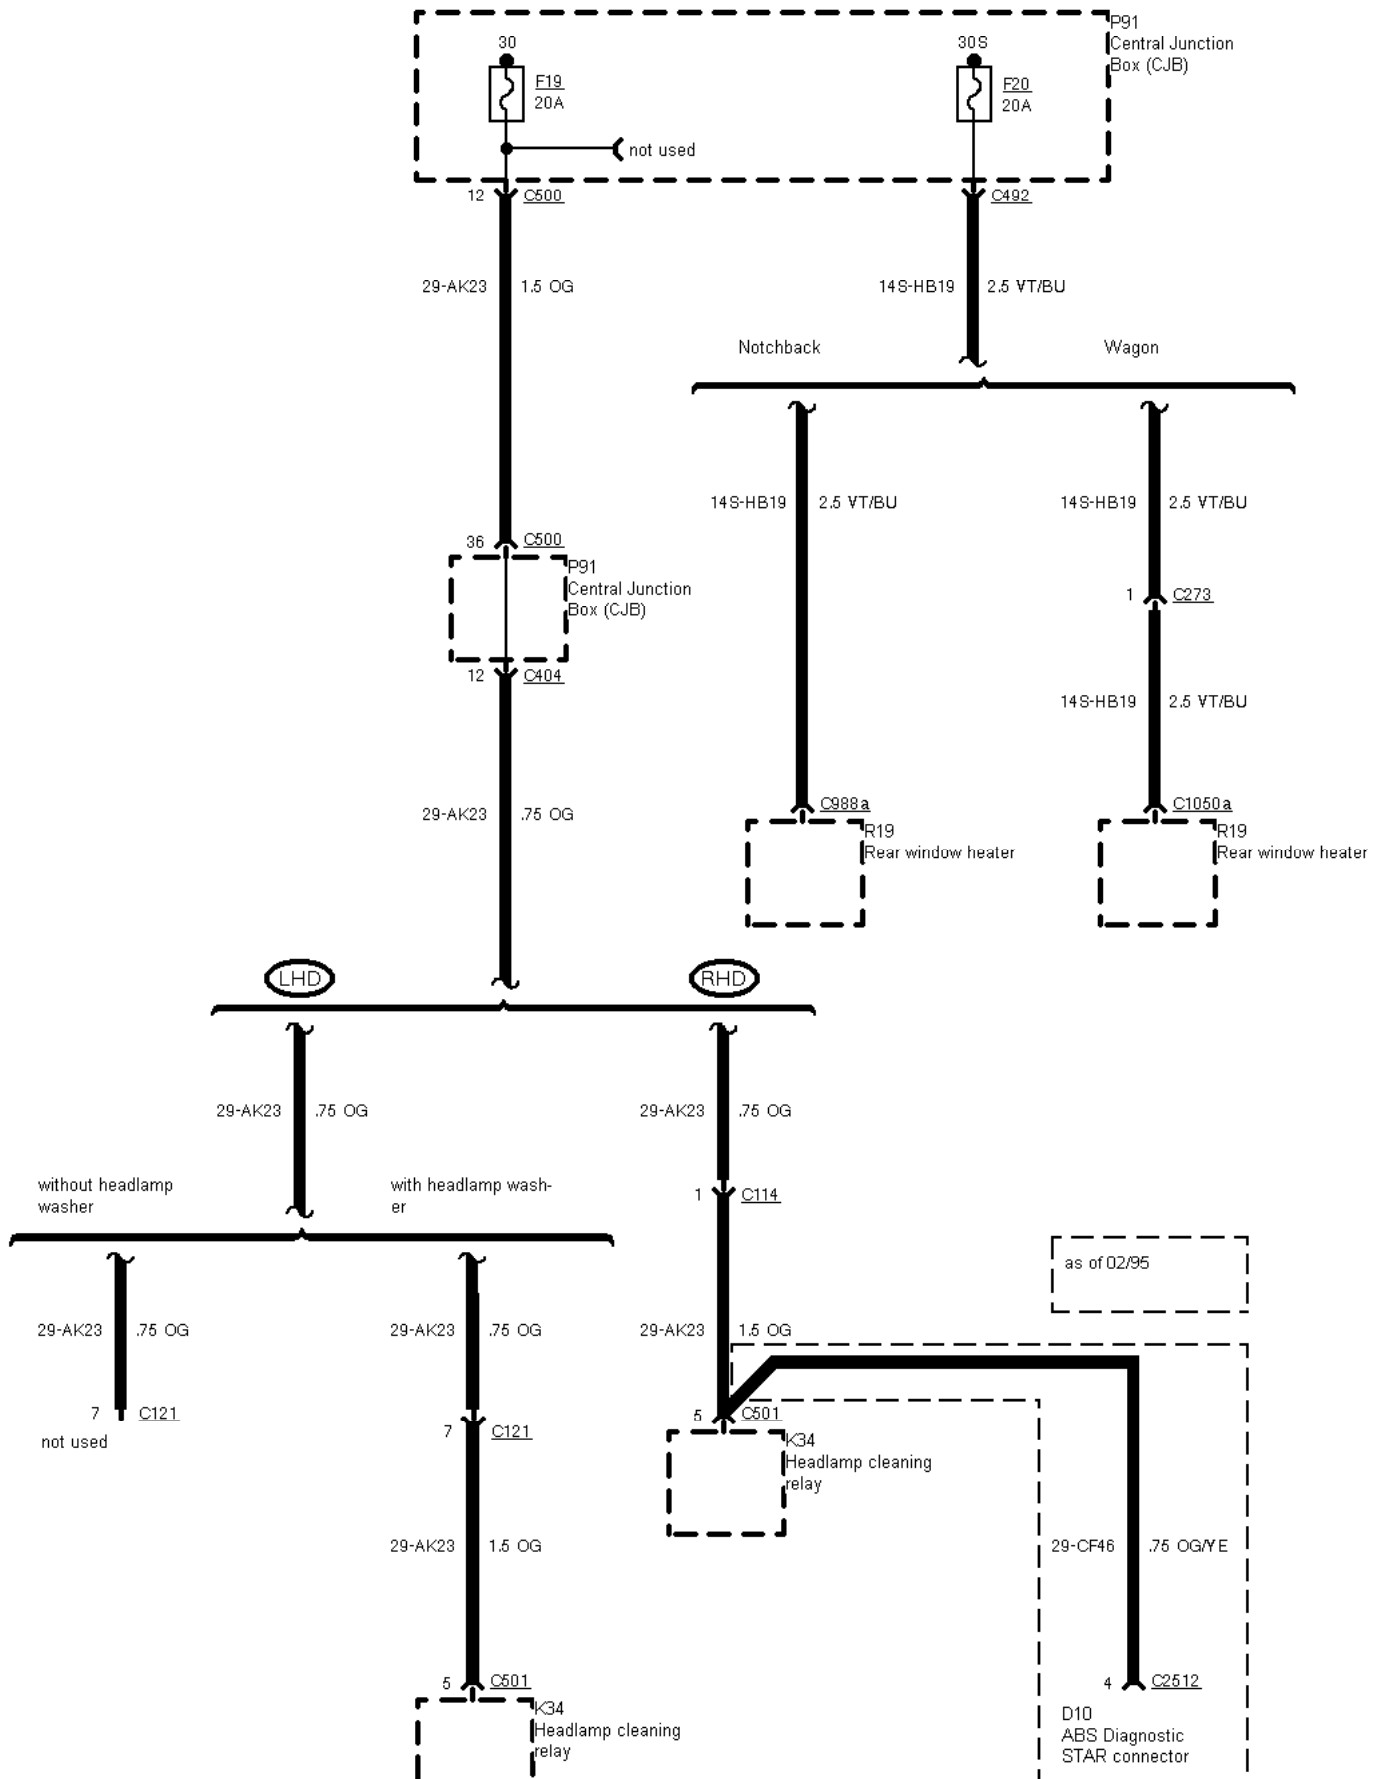




-----J


-----I

---

01-03-026 , Fuse Details , Fuse 21

  ---

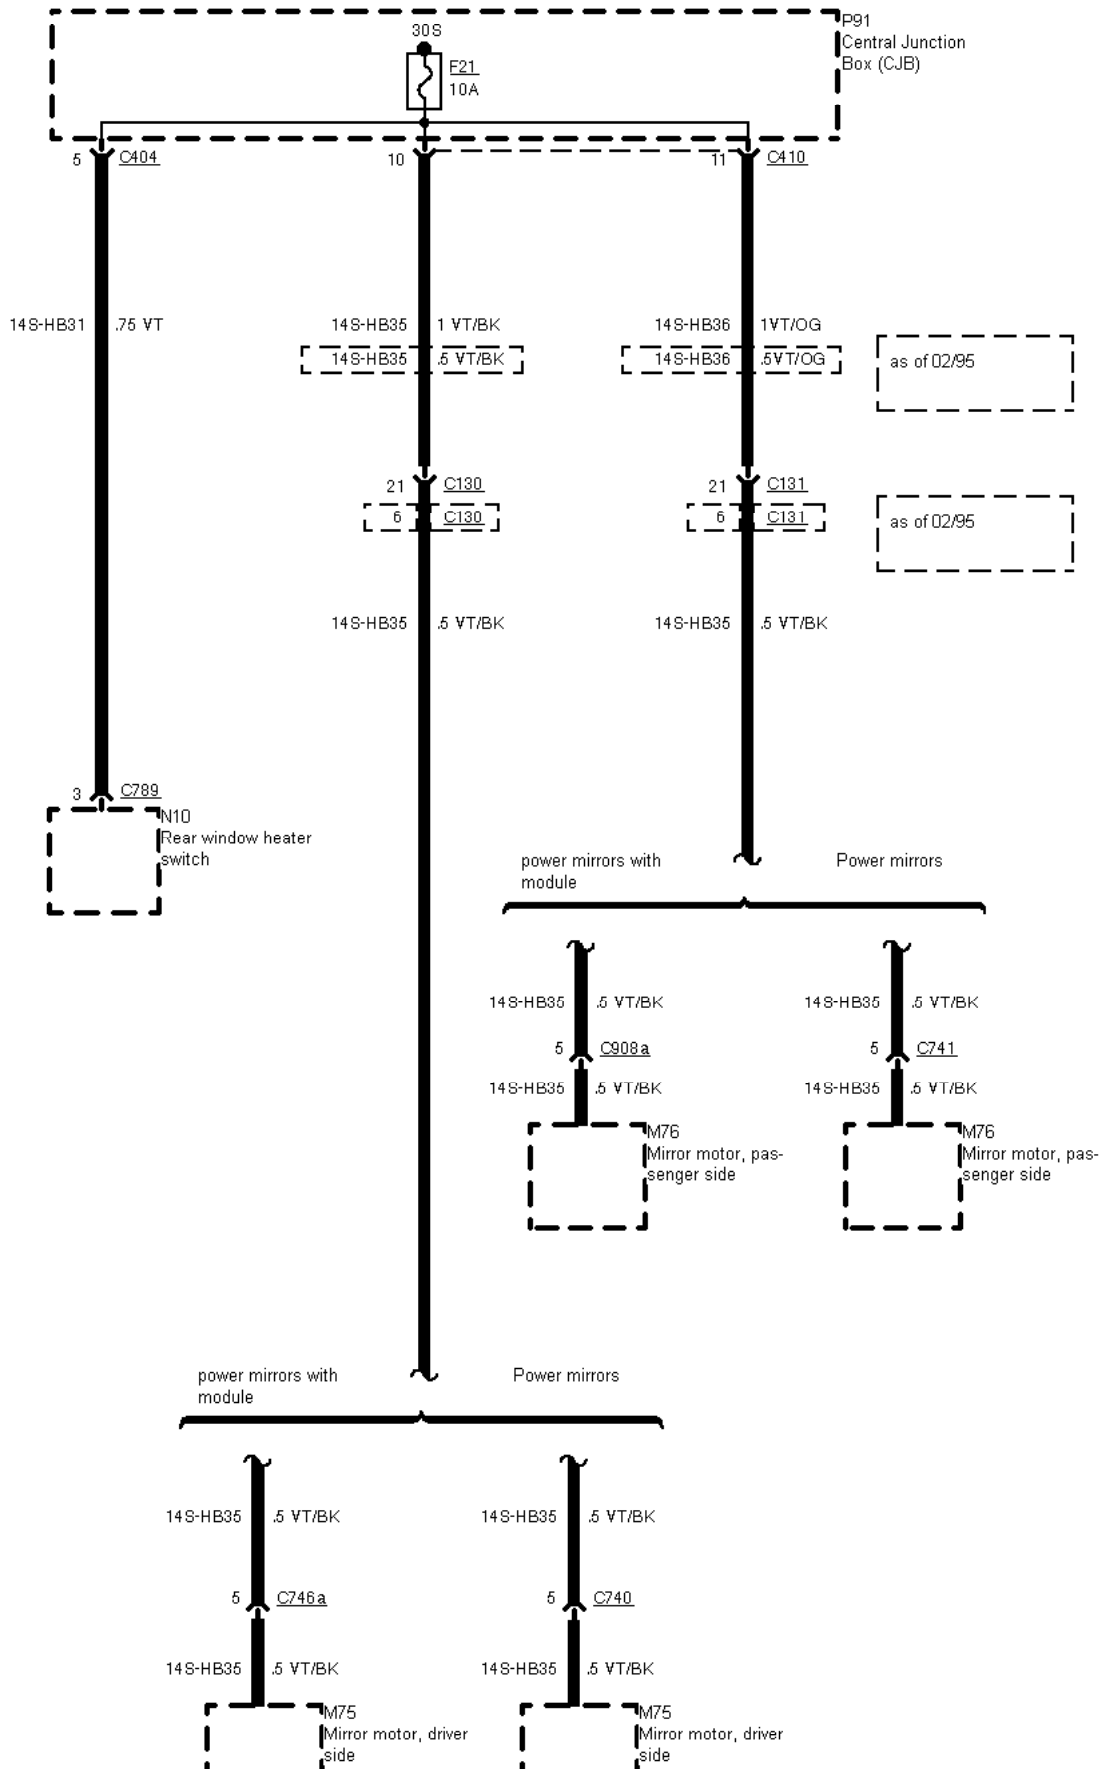







---

01-03-027 , Fuse Details , Fuse 22

    ---

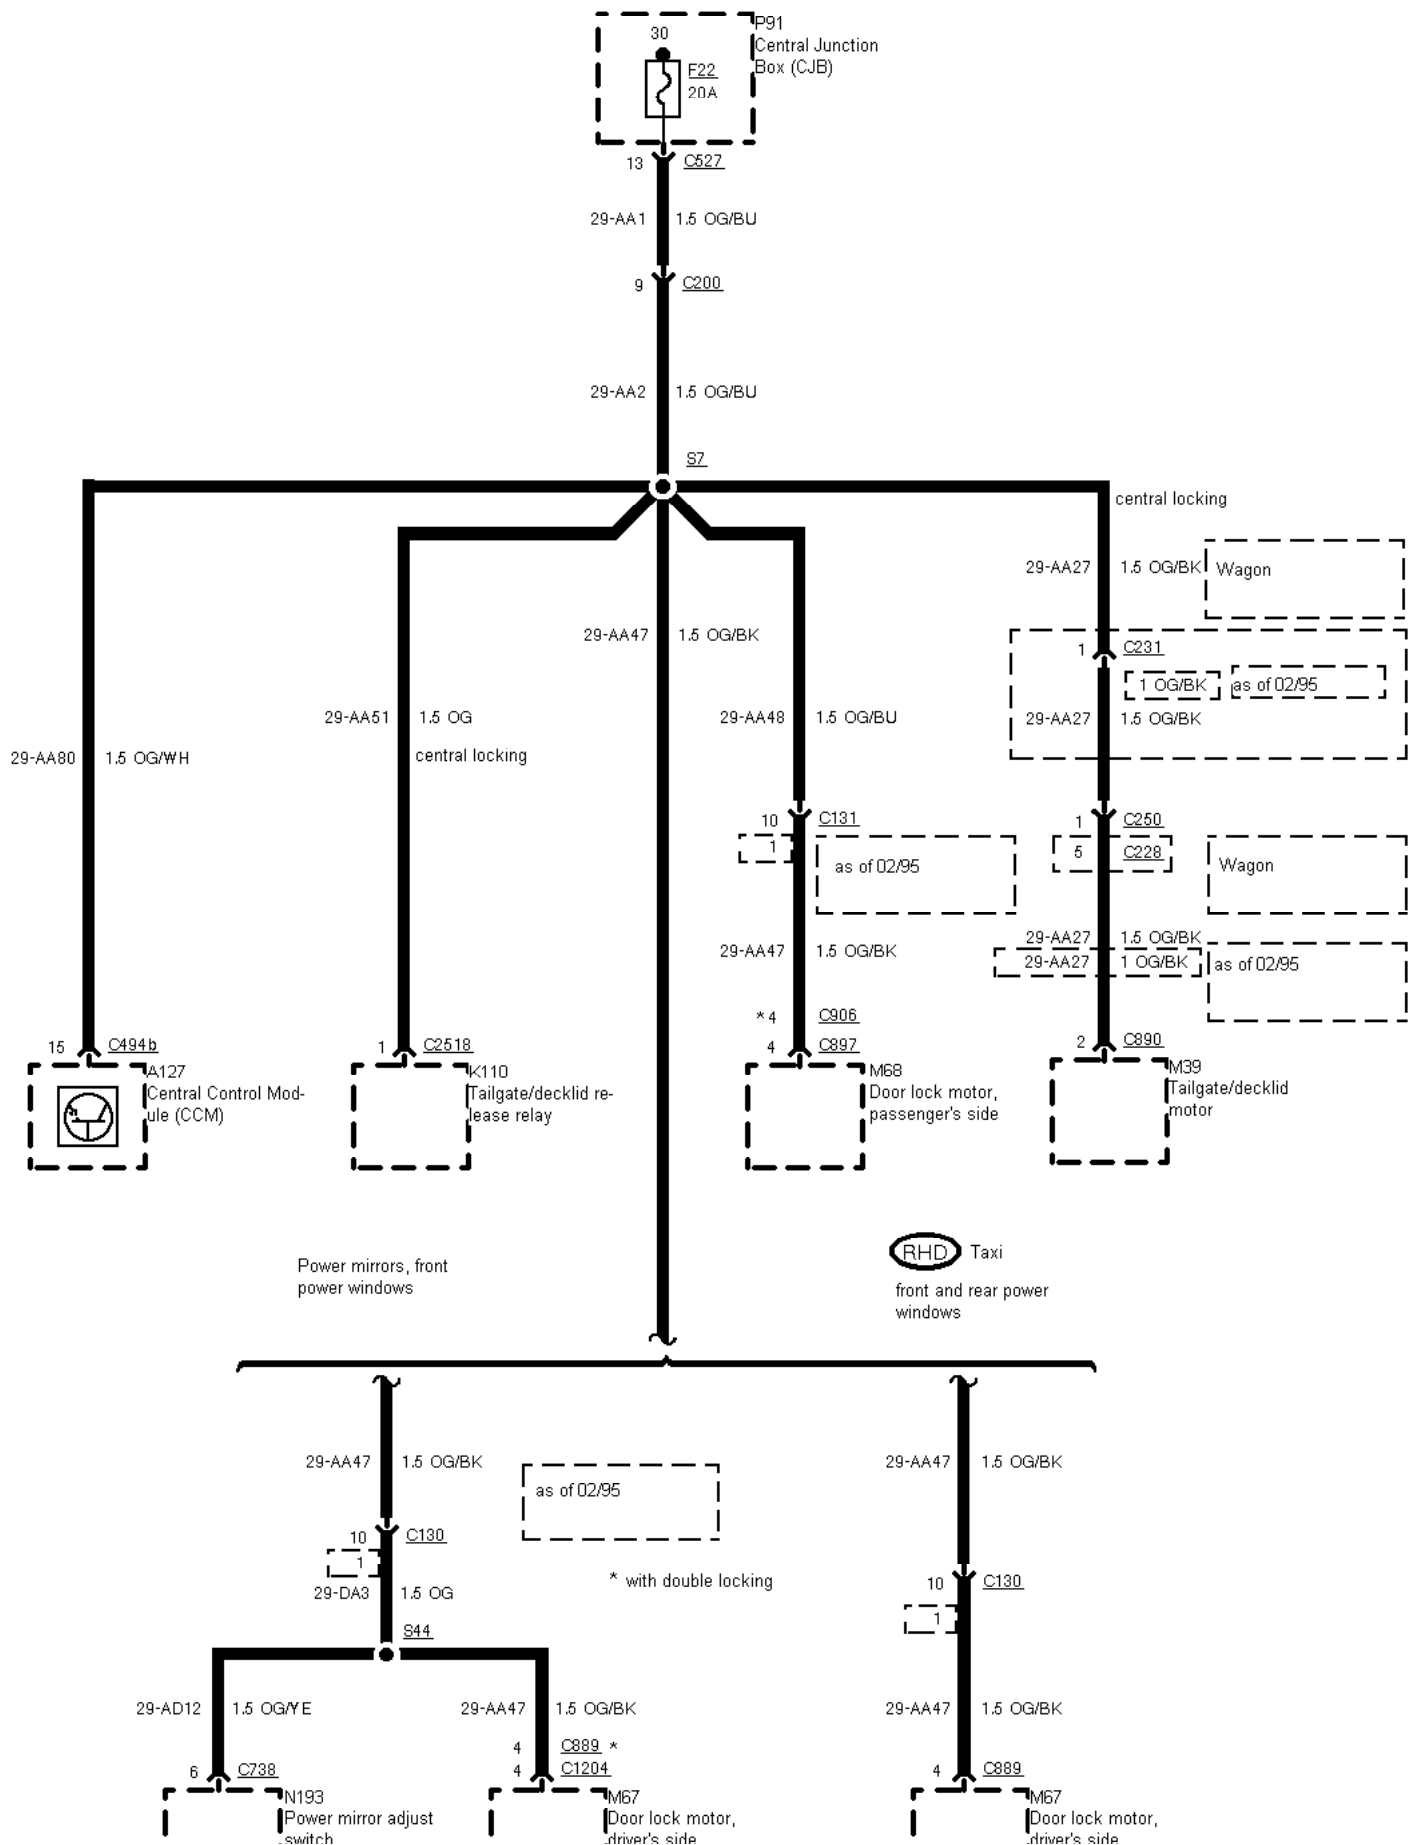






---

01-03-028 , Fuse Details , Fuse 23

   ---




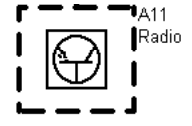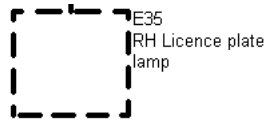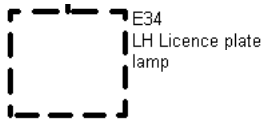

---

01-03-029 , Fuse Details , Fuse 23

 ---

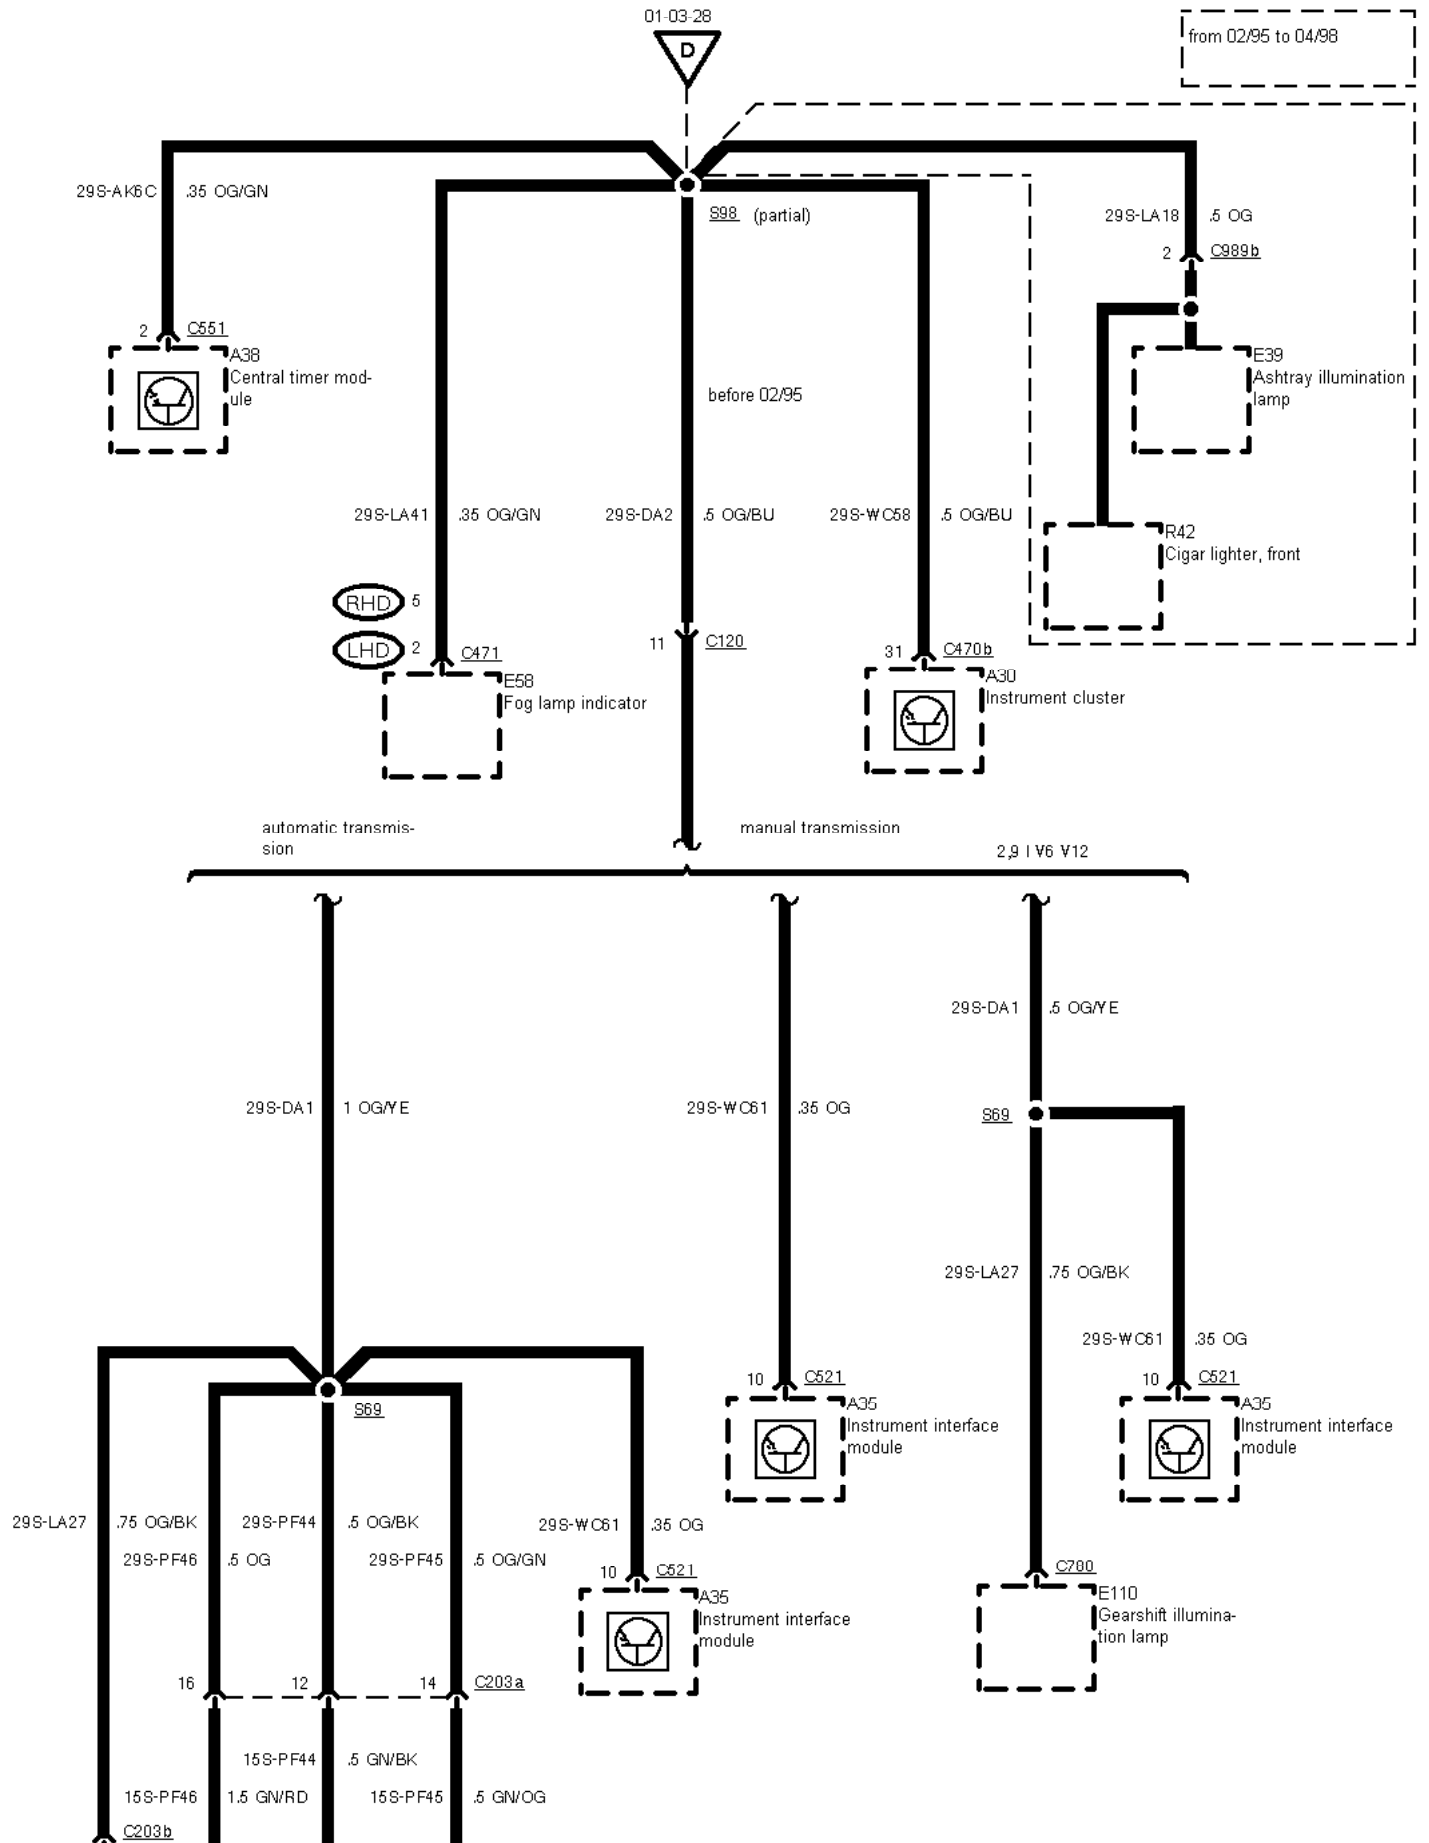







---

01-03-030 , Fuse Details , Fuse 24

  ---

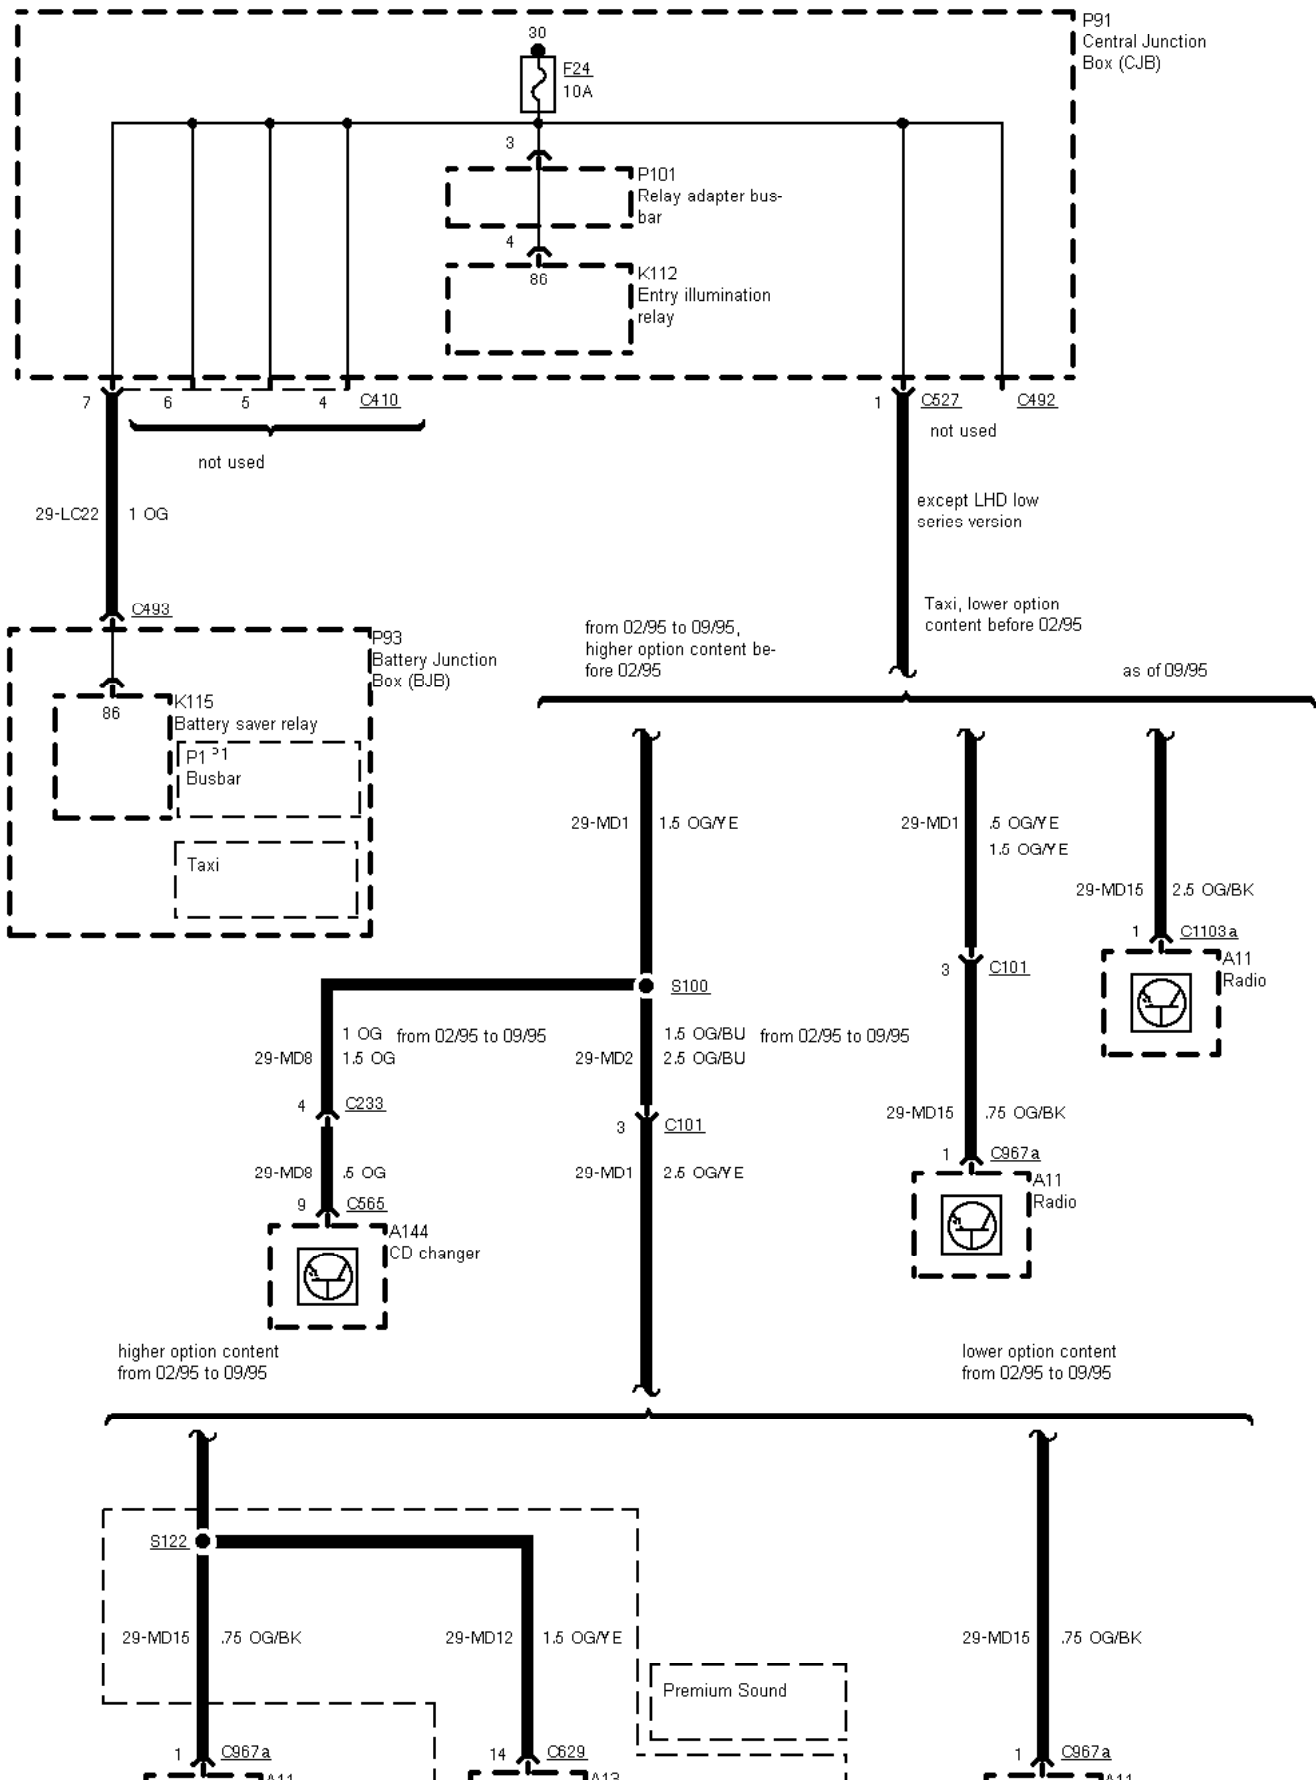

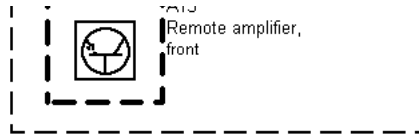


---


01-03-031 , Fuse Details , Fuse 25


---

 Lower option content, Taxi

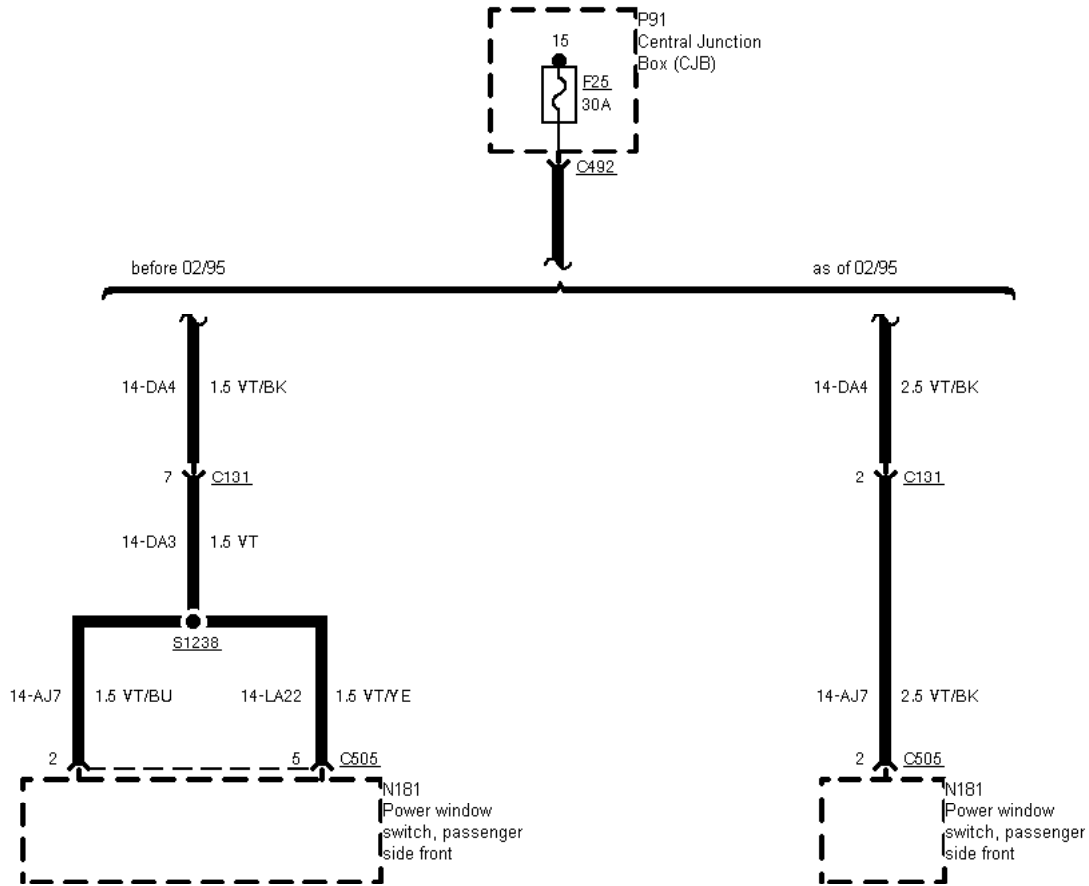

Higher option content

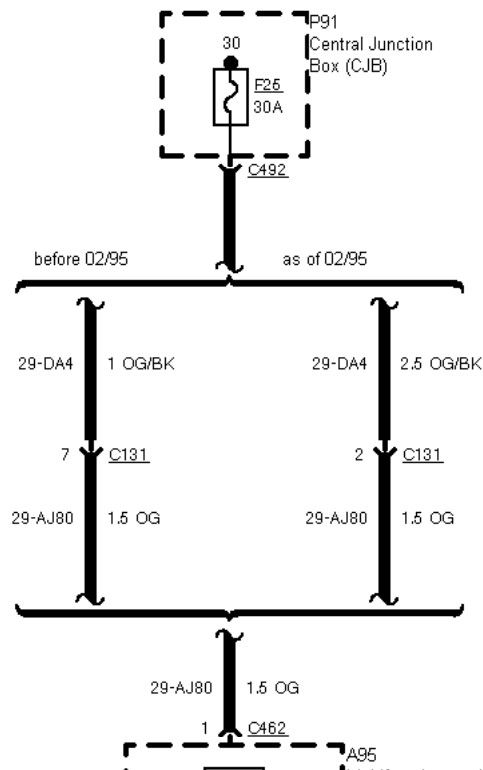 

 


---


01-03-032 , Fuse Details , Fuse 26




---

 Lower option content, Taxi

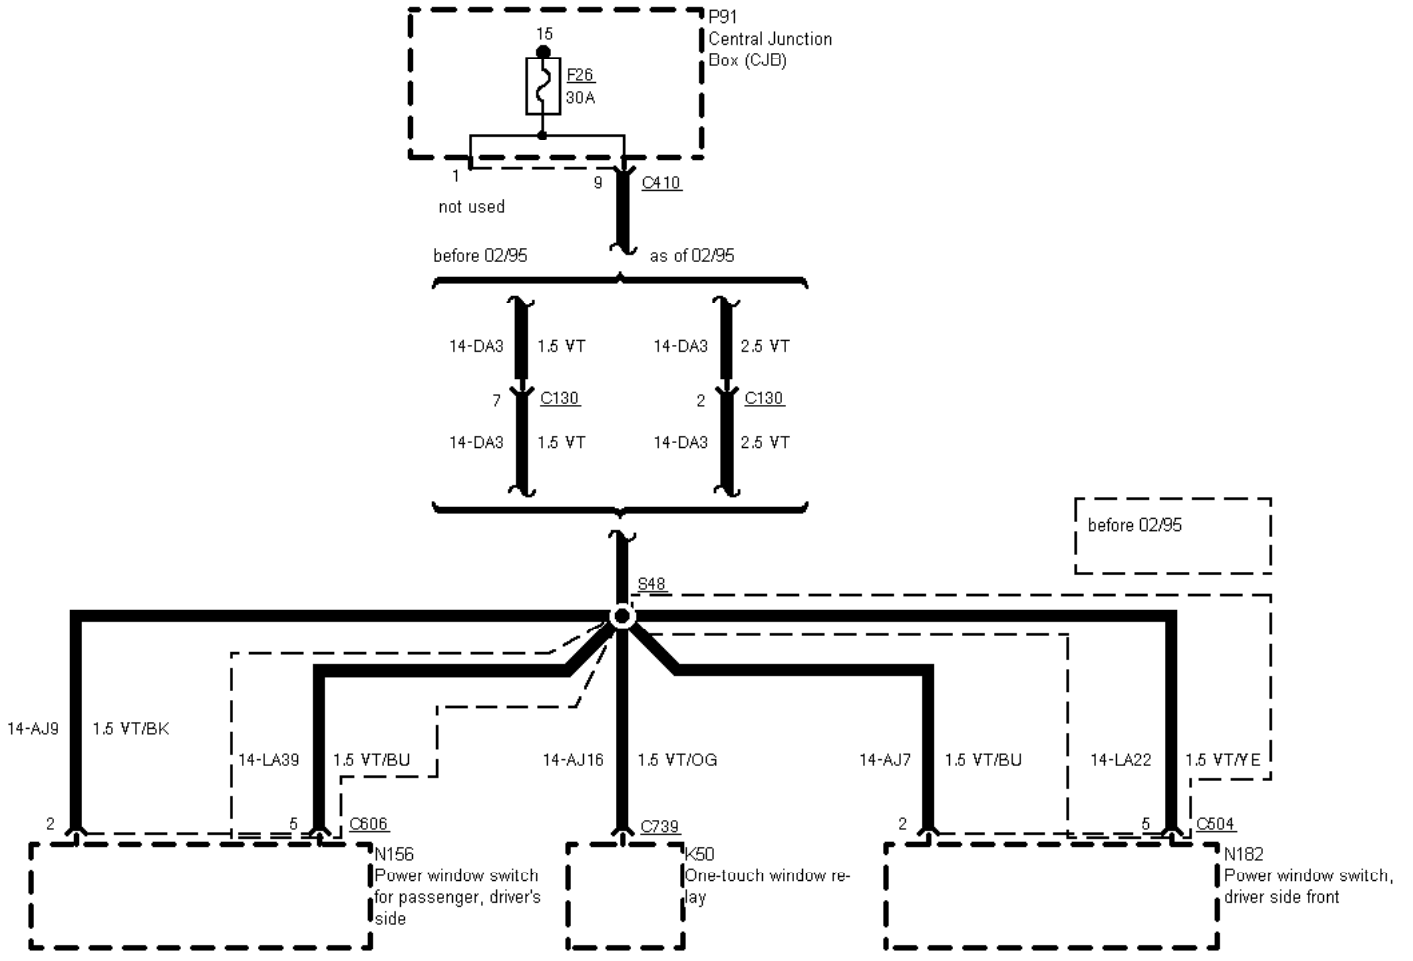

Higher option content

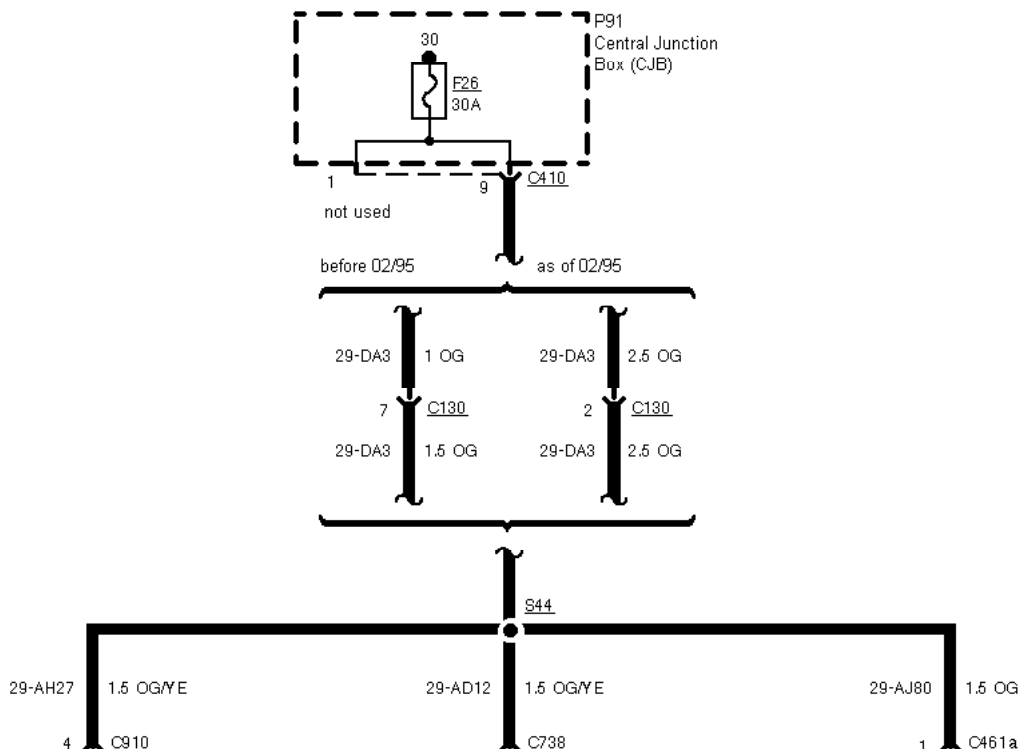 

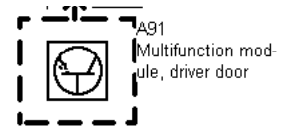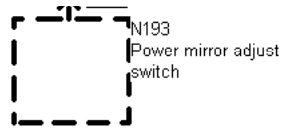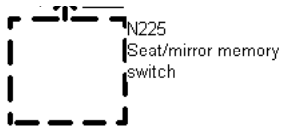   


---


**01-03-033 , Fuse Details**

---

 Fuse 27

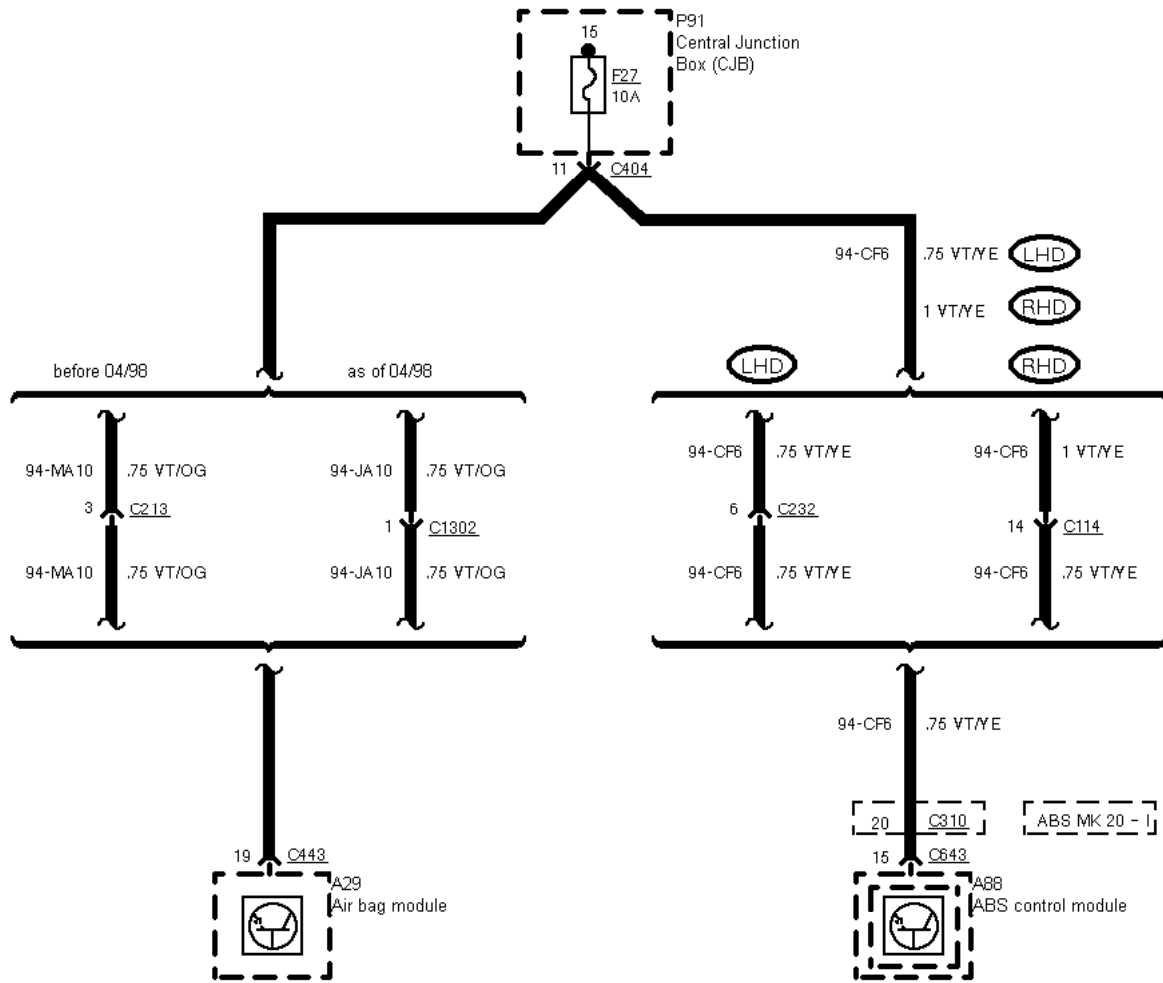

Fuse 28 Lower option content

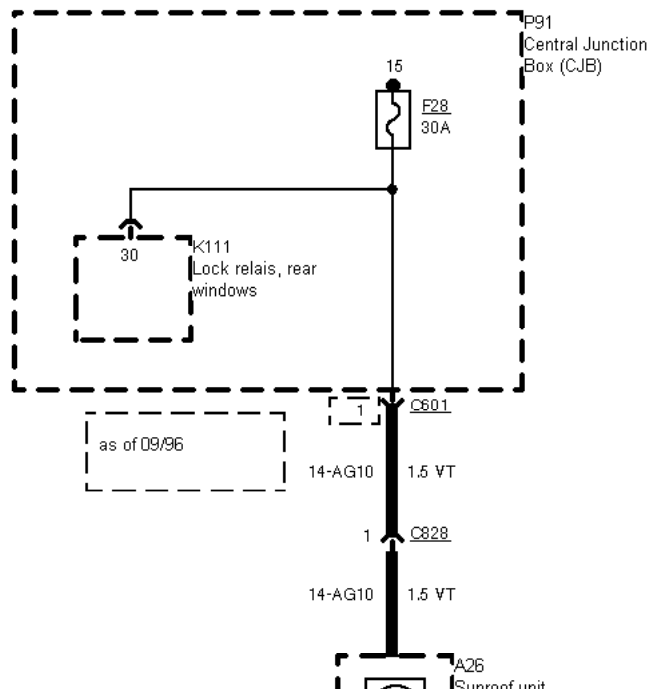 






---


**01-03-034 , Fuse Details**

 
---

Fuse 28, Higher option content

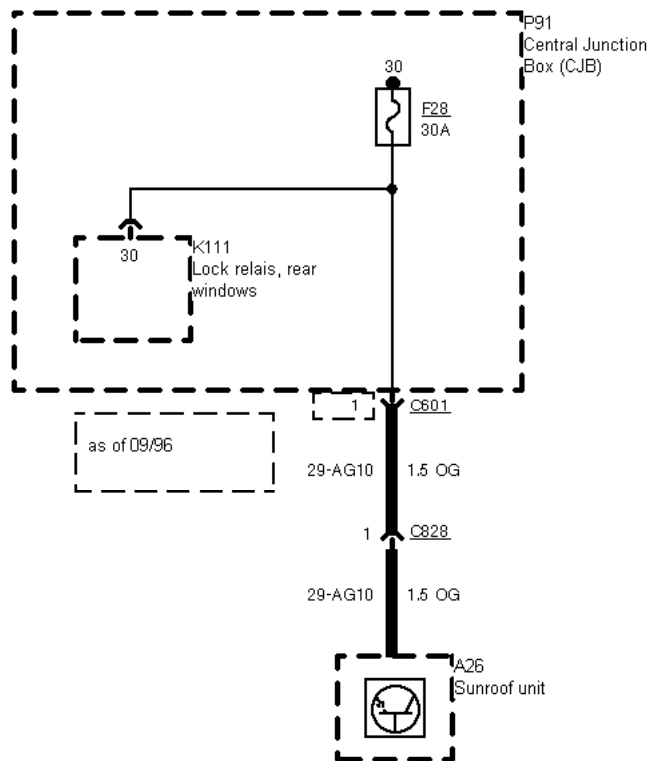

Fuse 29

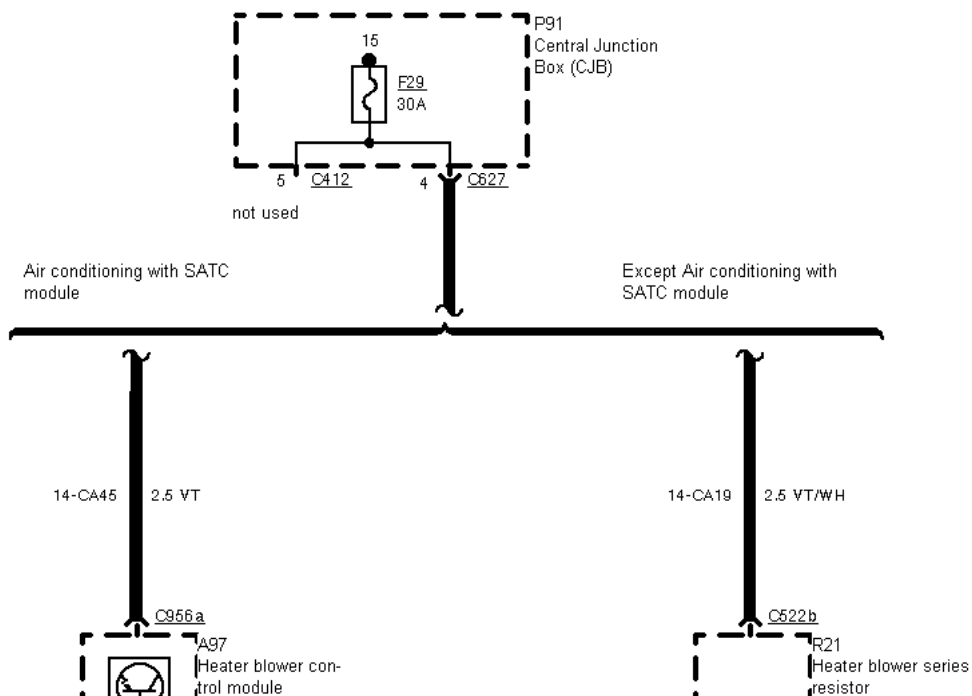 


 

---

01-03-035 , Fuse Details , Fuses 30 and 31

 
---

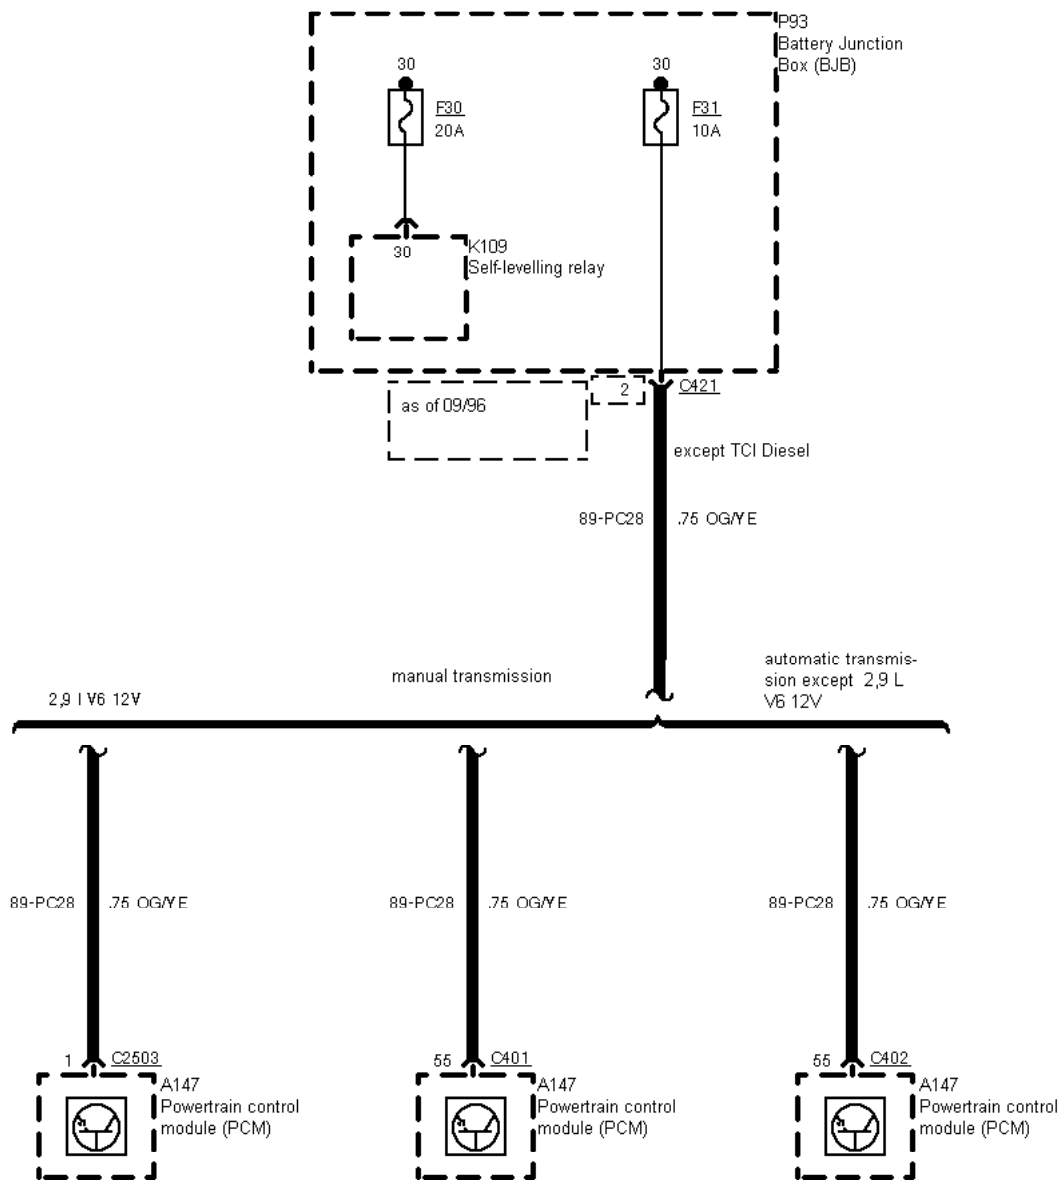

---

01-03-036 , Fuse Details , Fuse 33


 
---

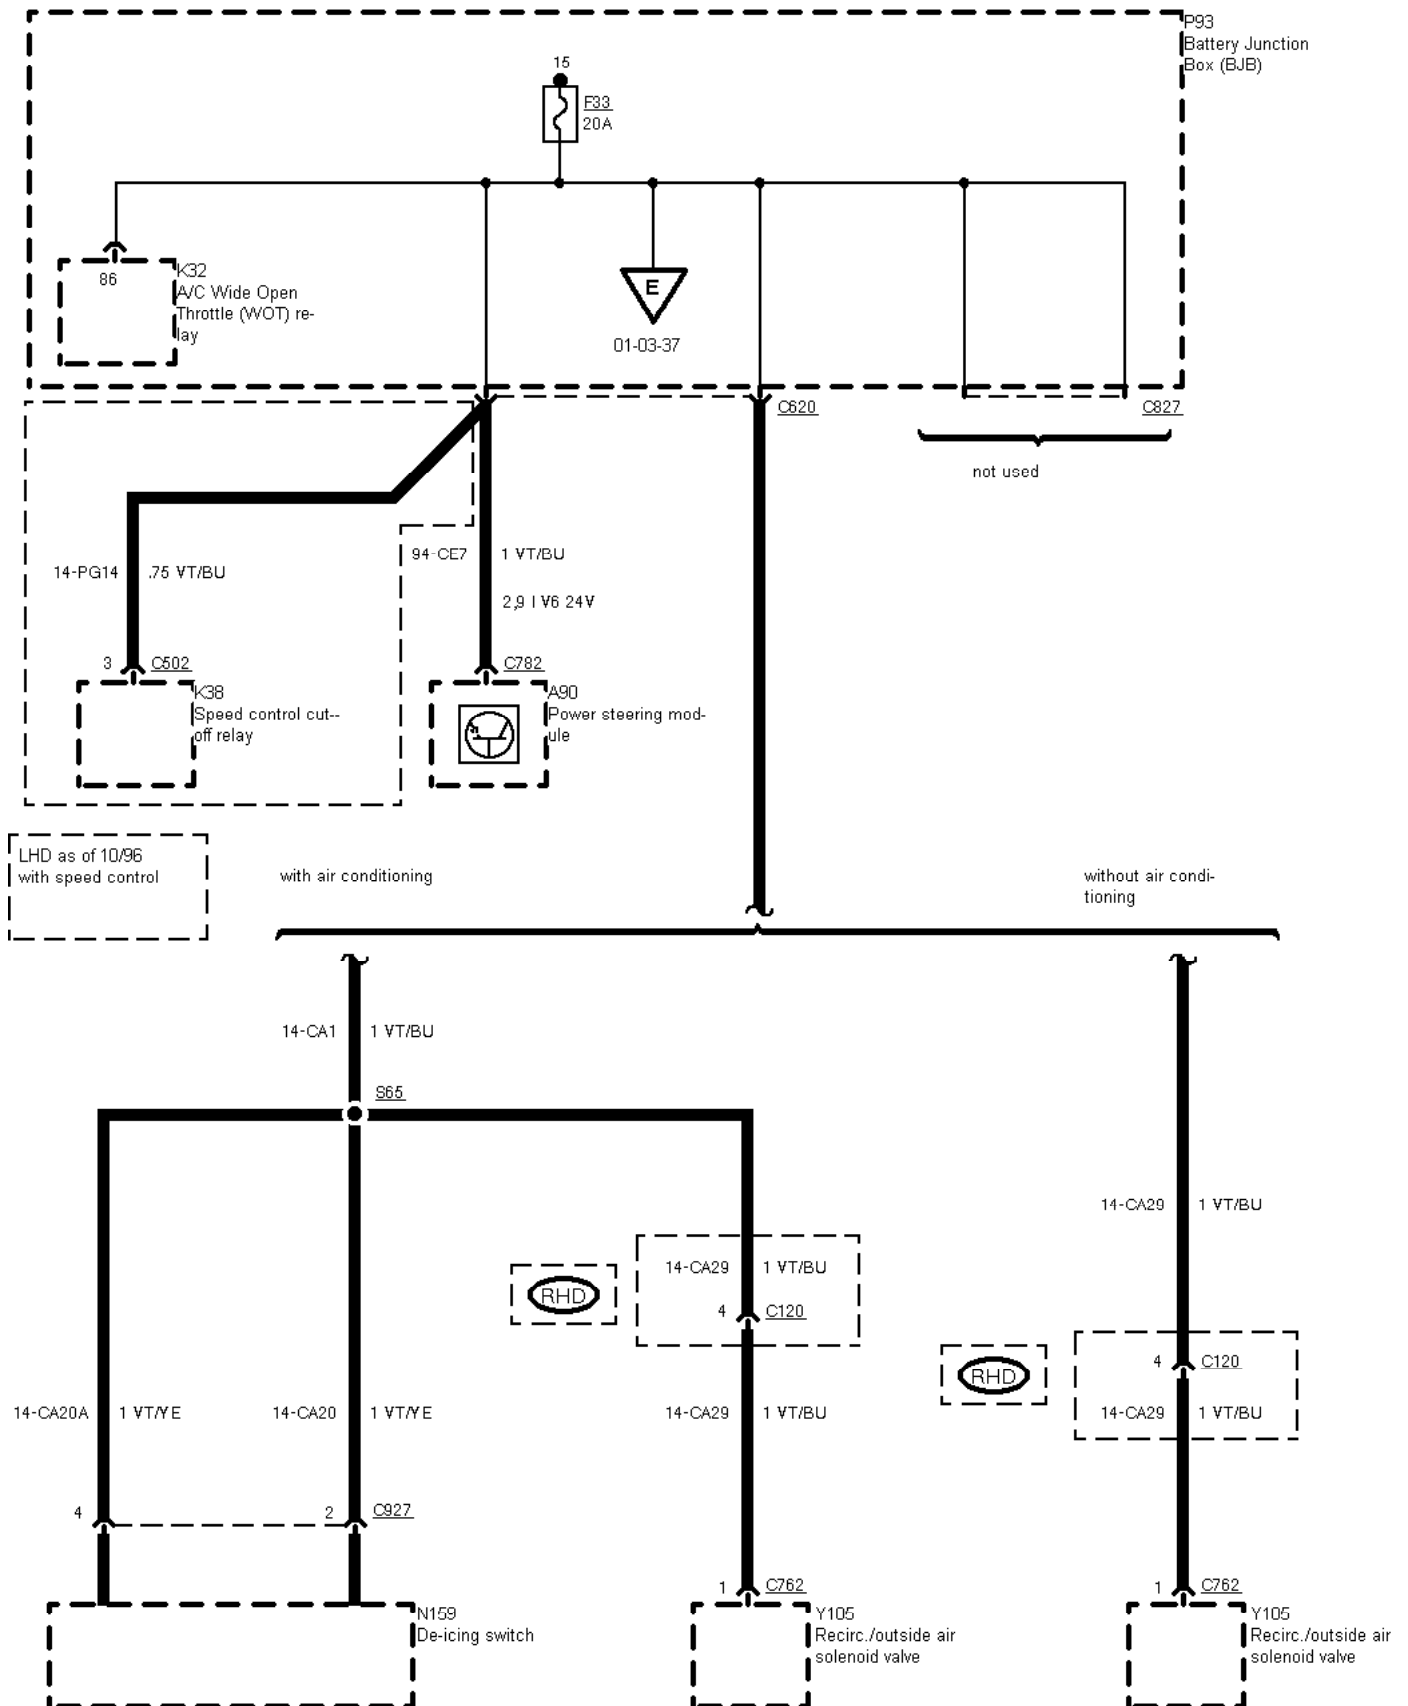


---

01-03-037 , Fuse Details

   ---

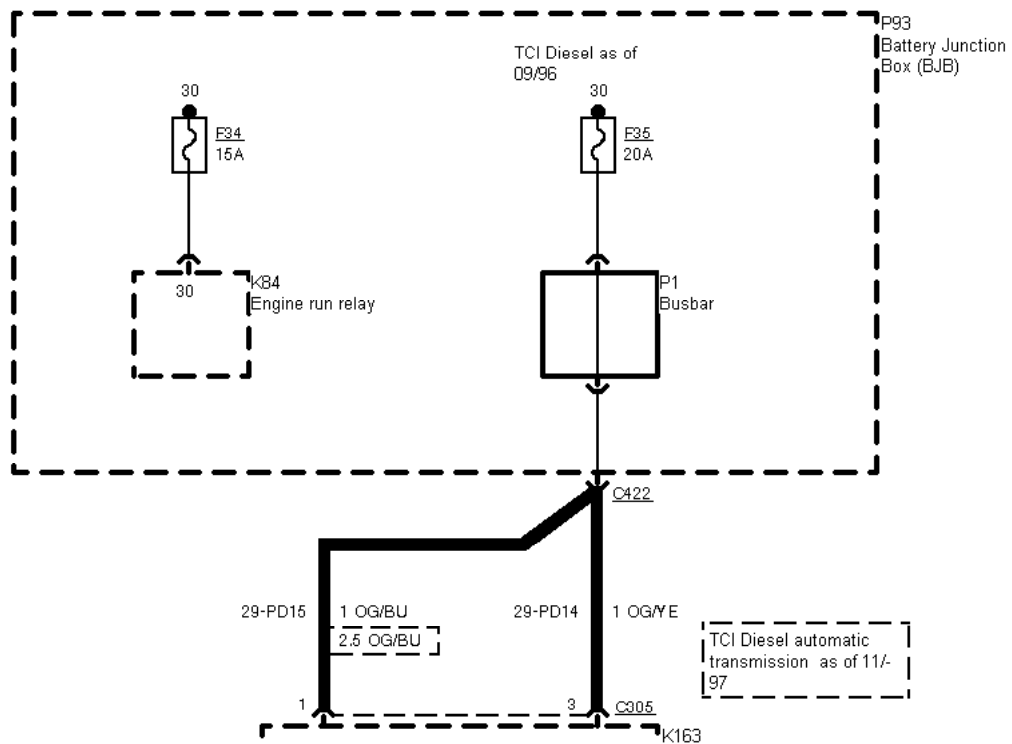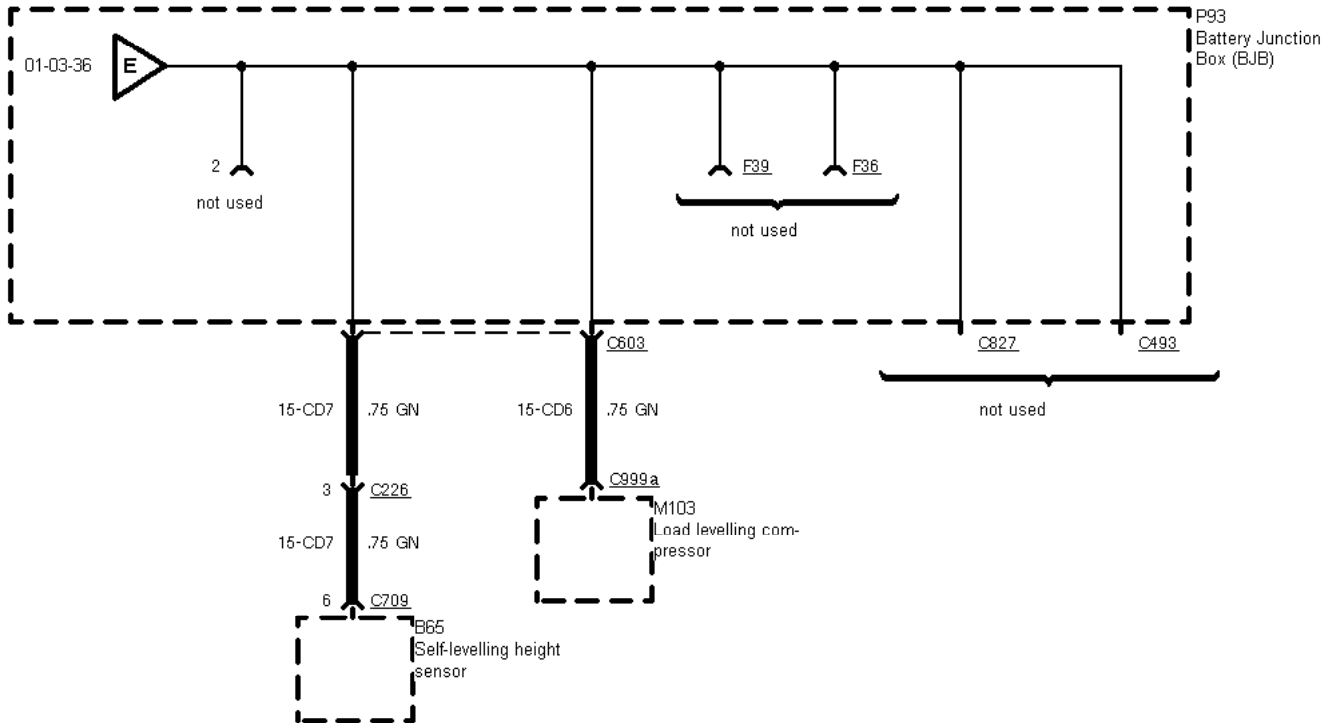









---

**01-03-038 , Fuse Details , Fuse 36**

    ---

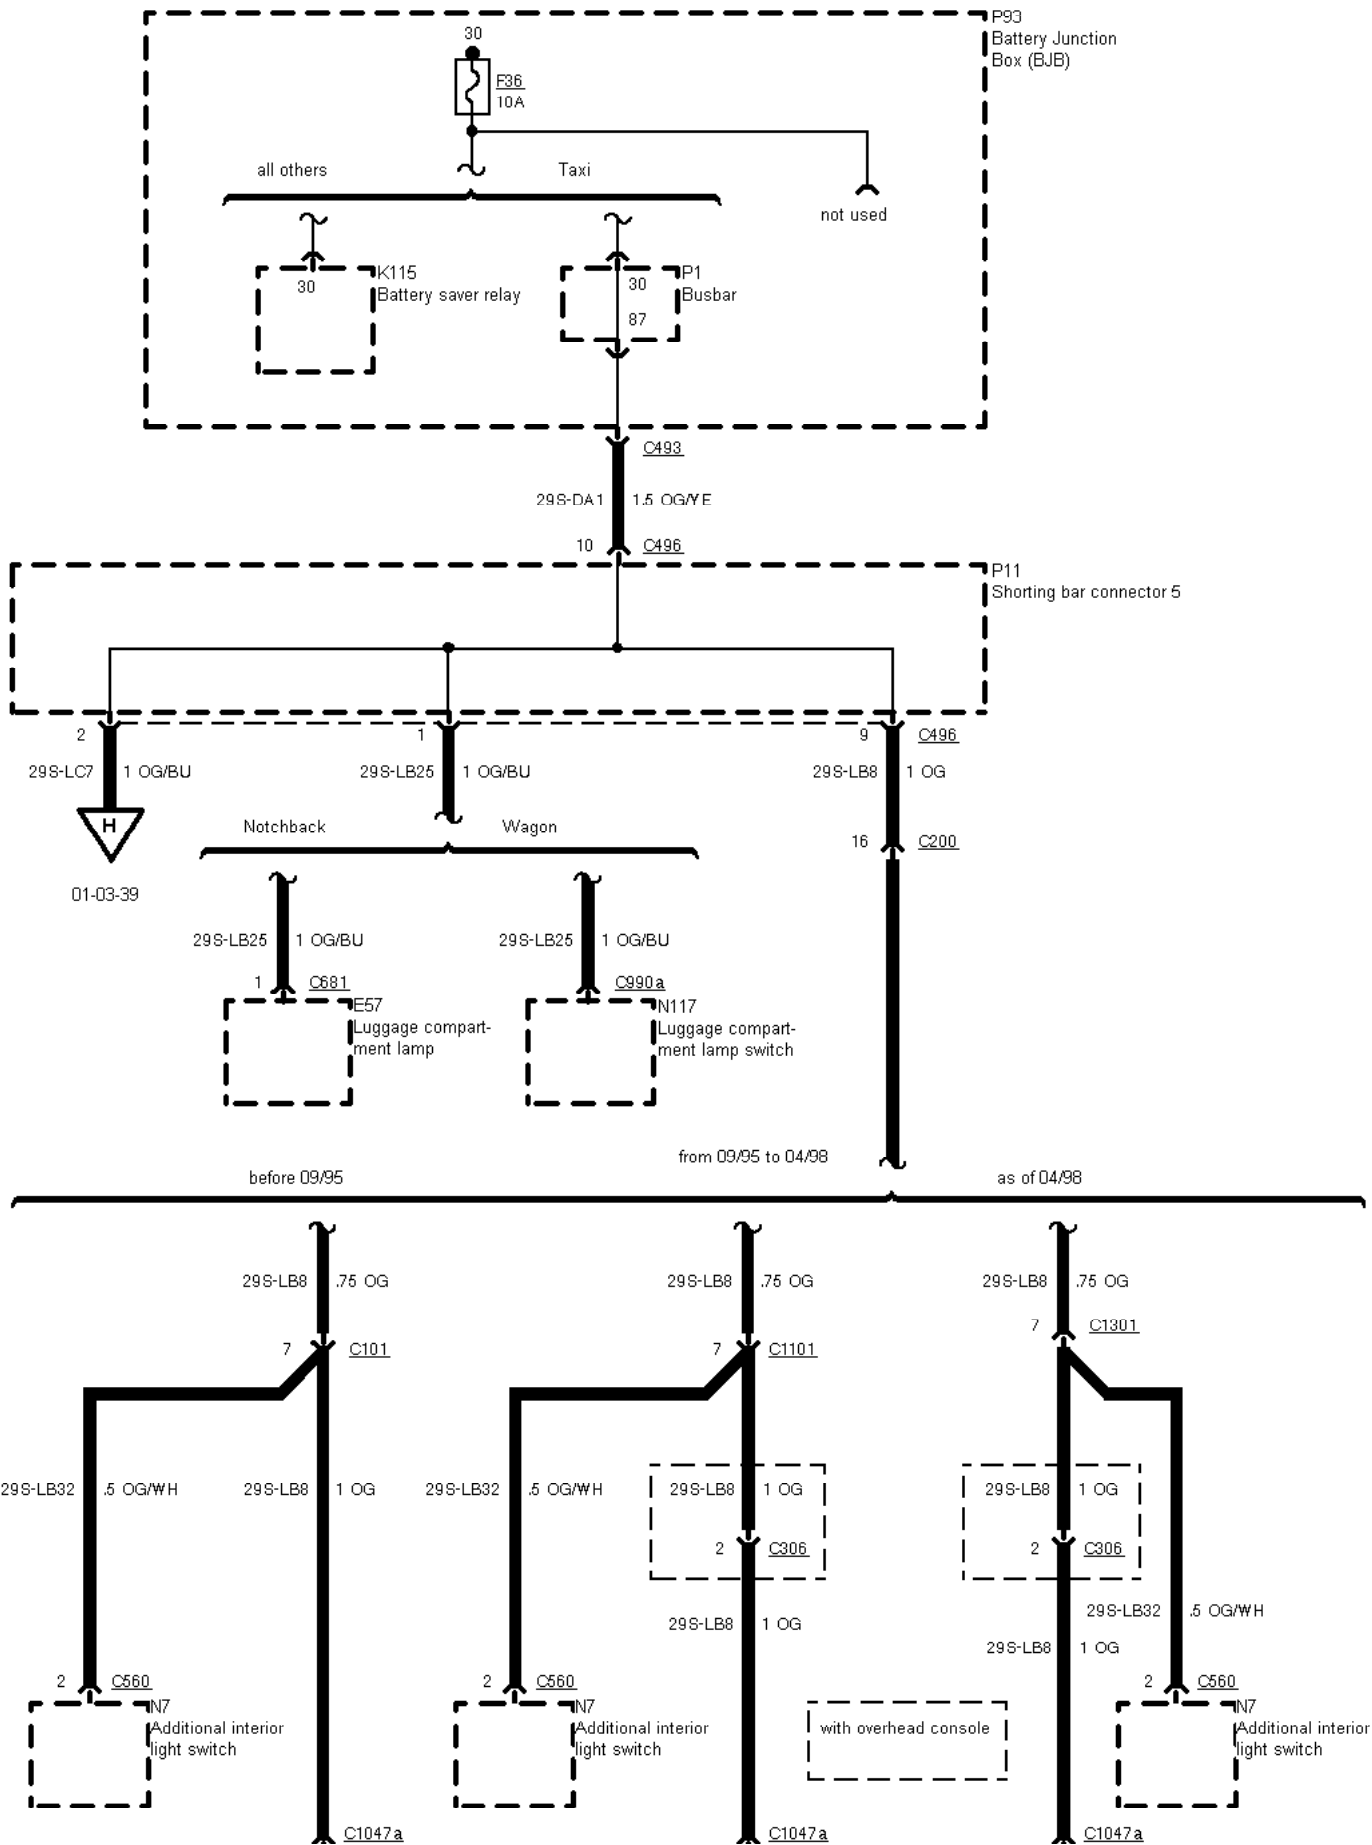

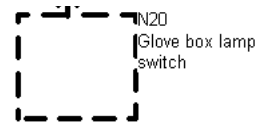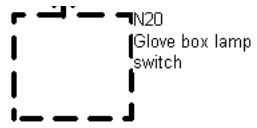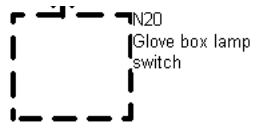


---


01-03-039 , Fuse Details , Fuse 36


---

 Higher option content

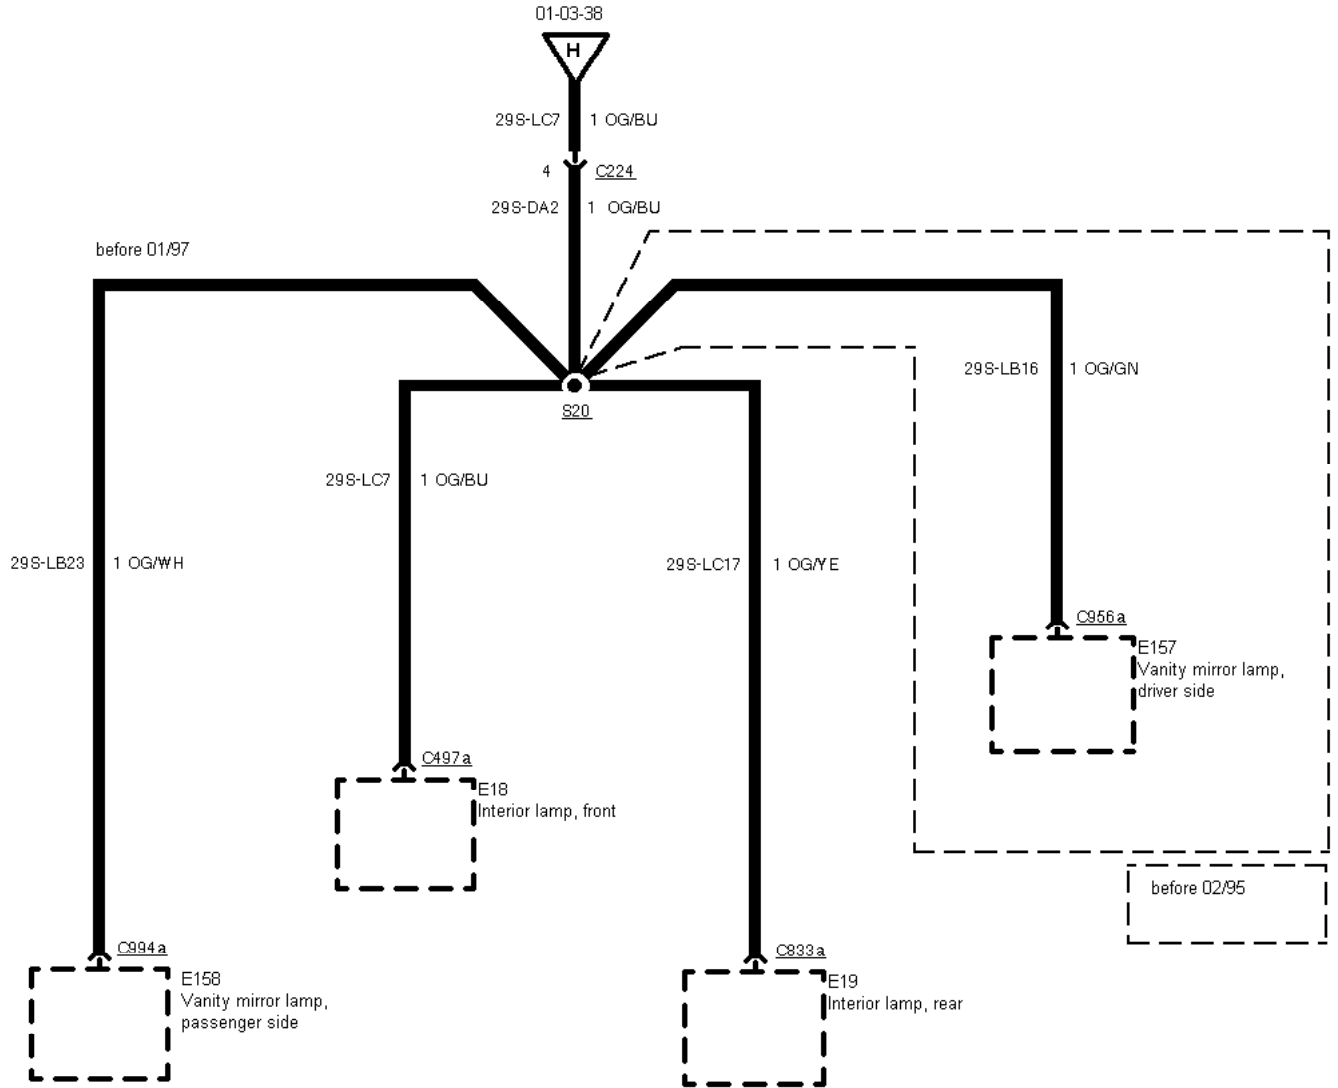

Lower option content

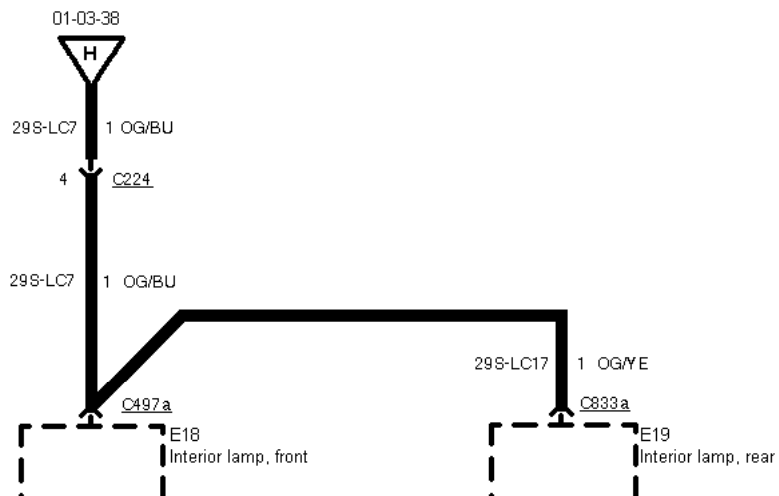 


 

---

01-03-040 , Fuse Details , Fuse 37, 2,0 | EFI

 ---

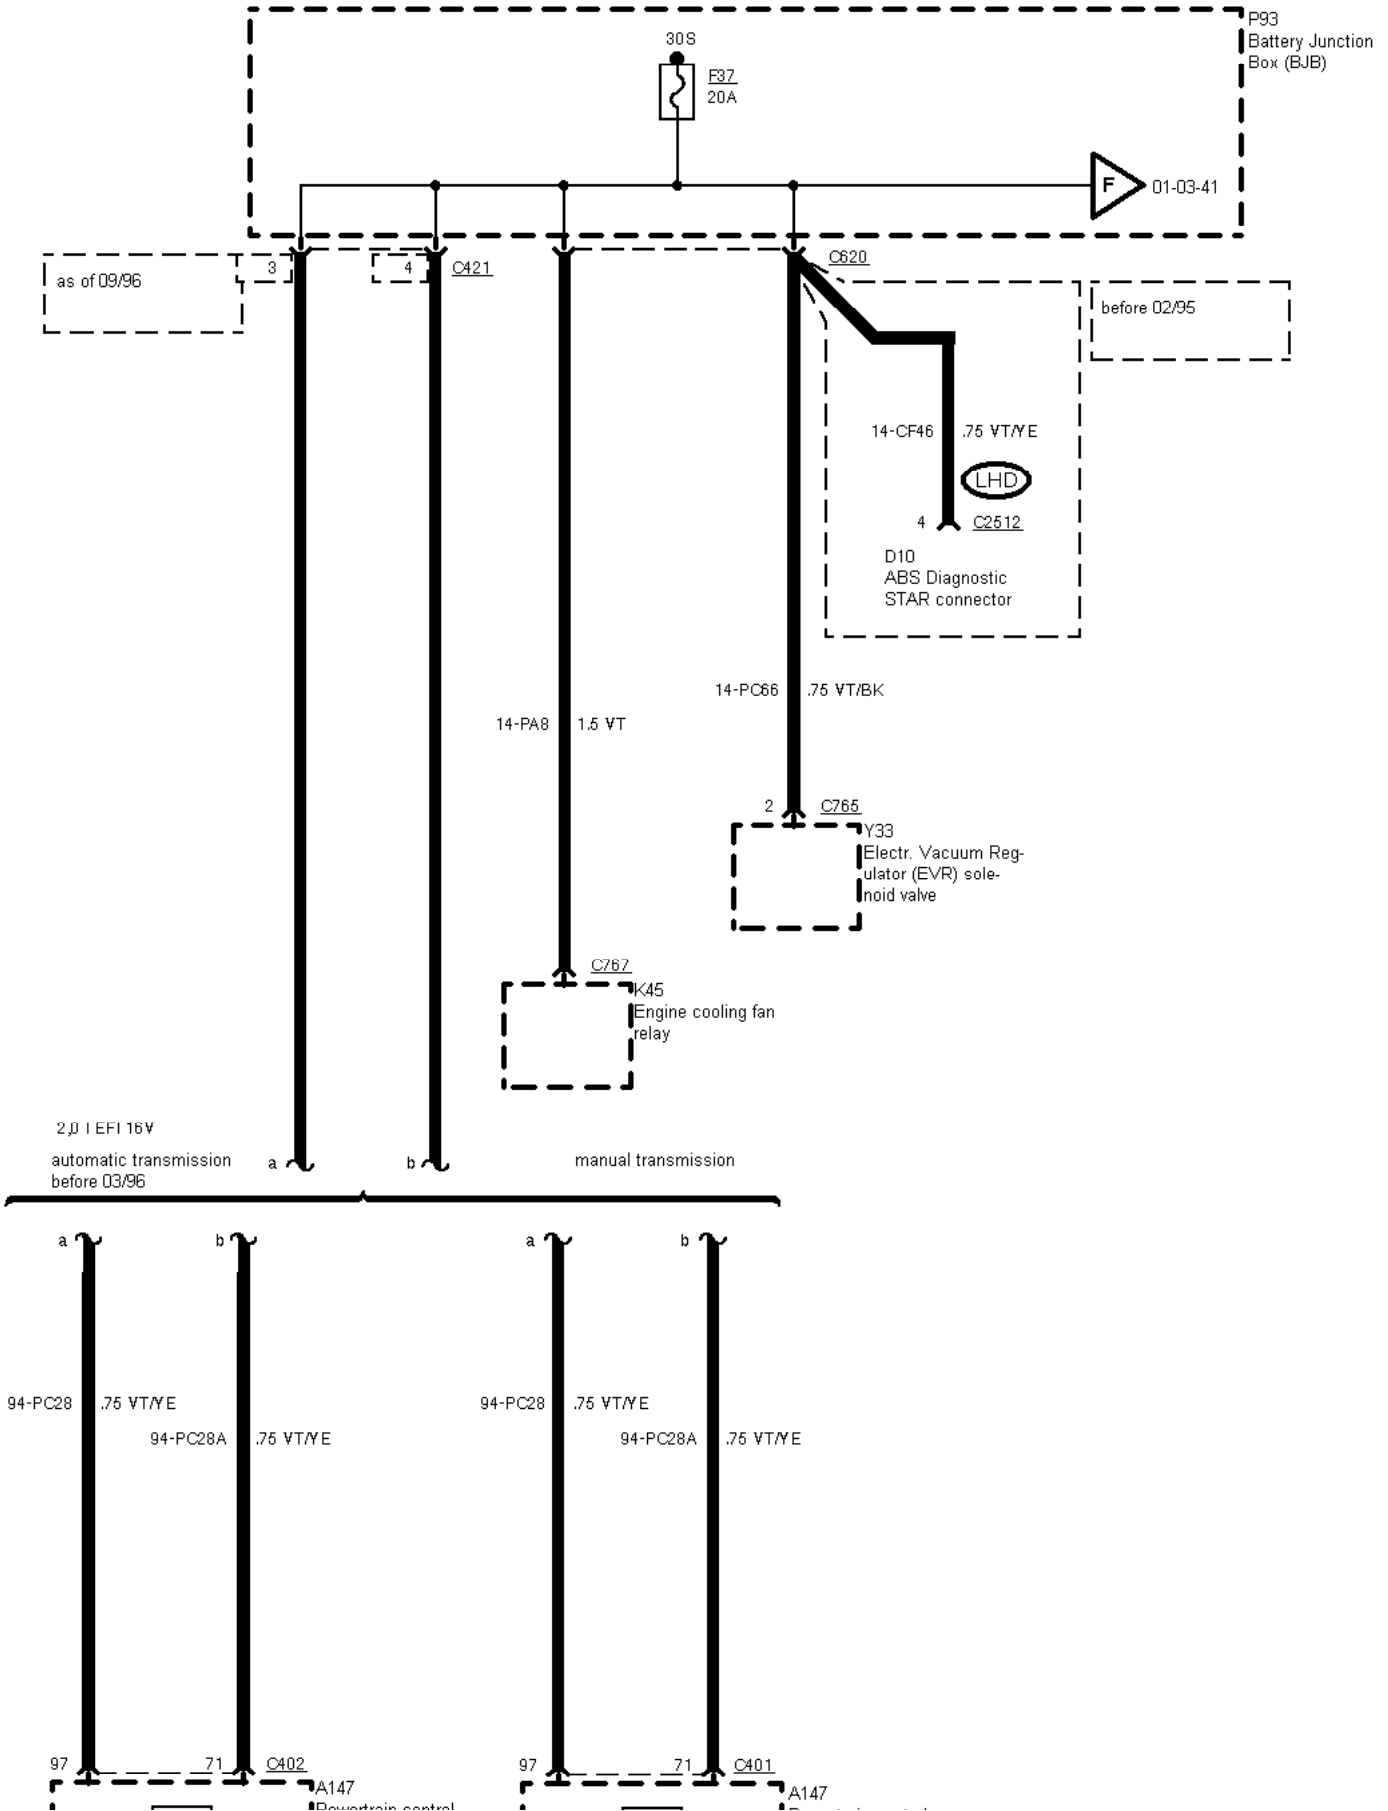




---

01-03-041 , Fuse Details , Fuse 37, 2,0 I EFI

 ---

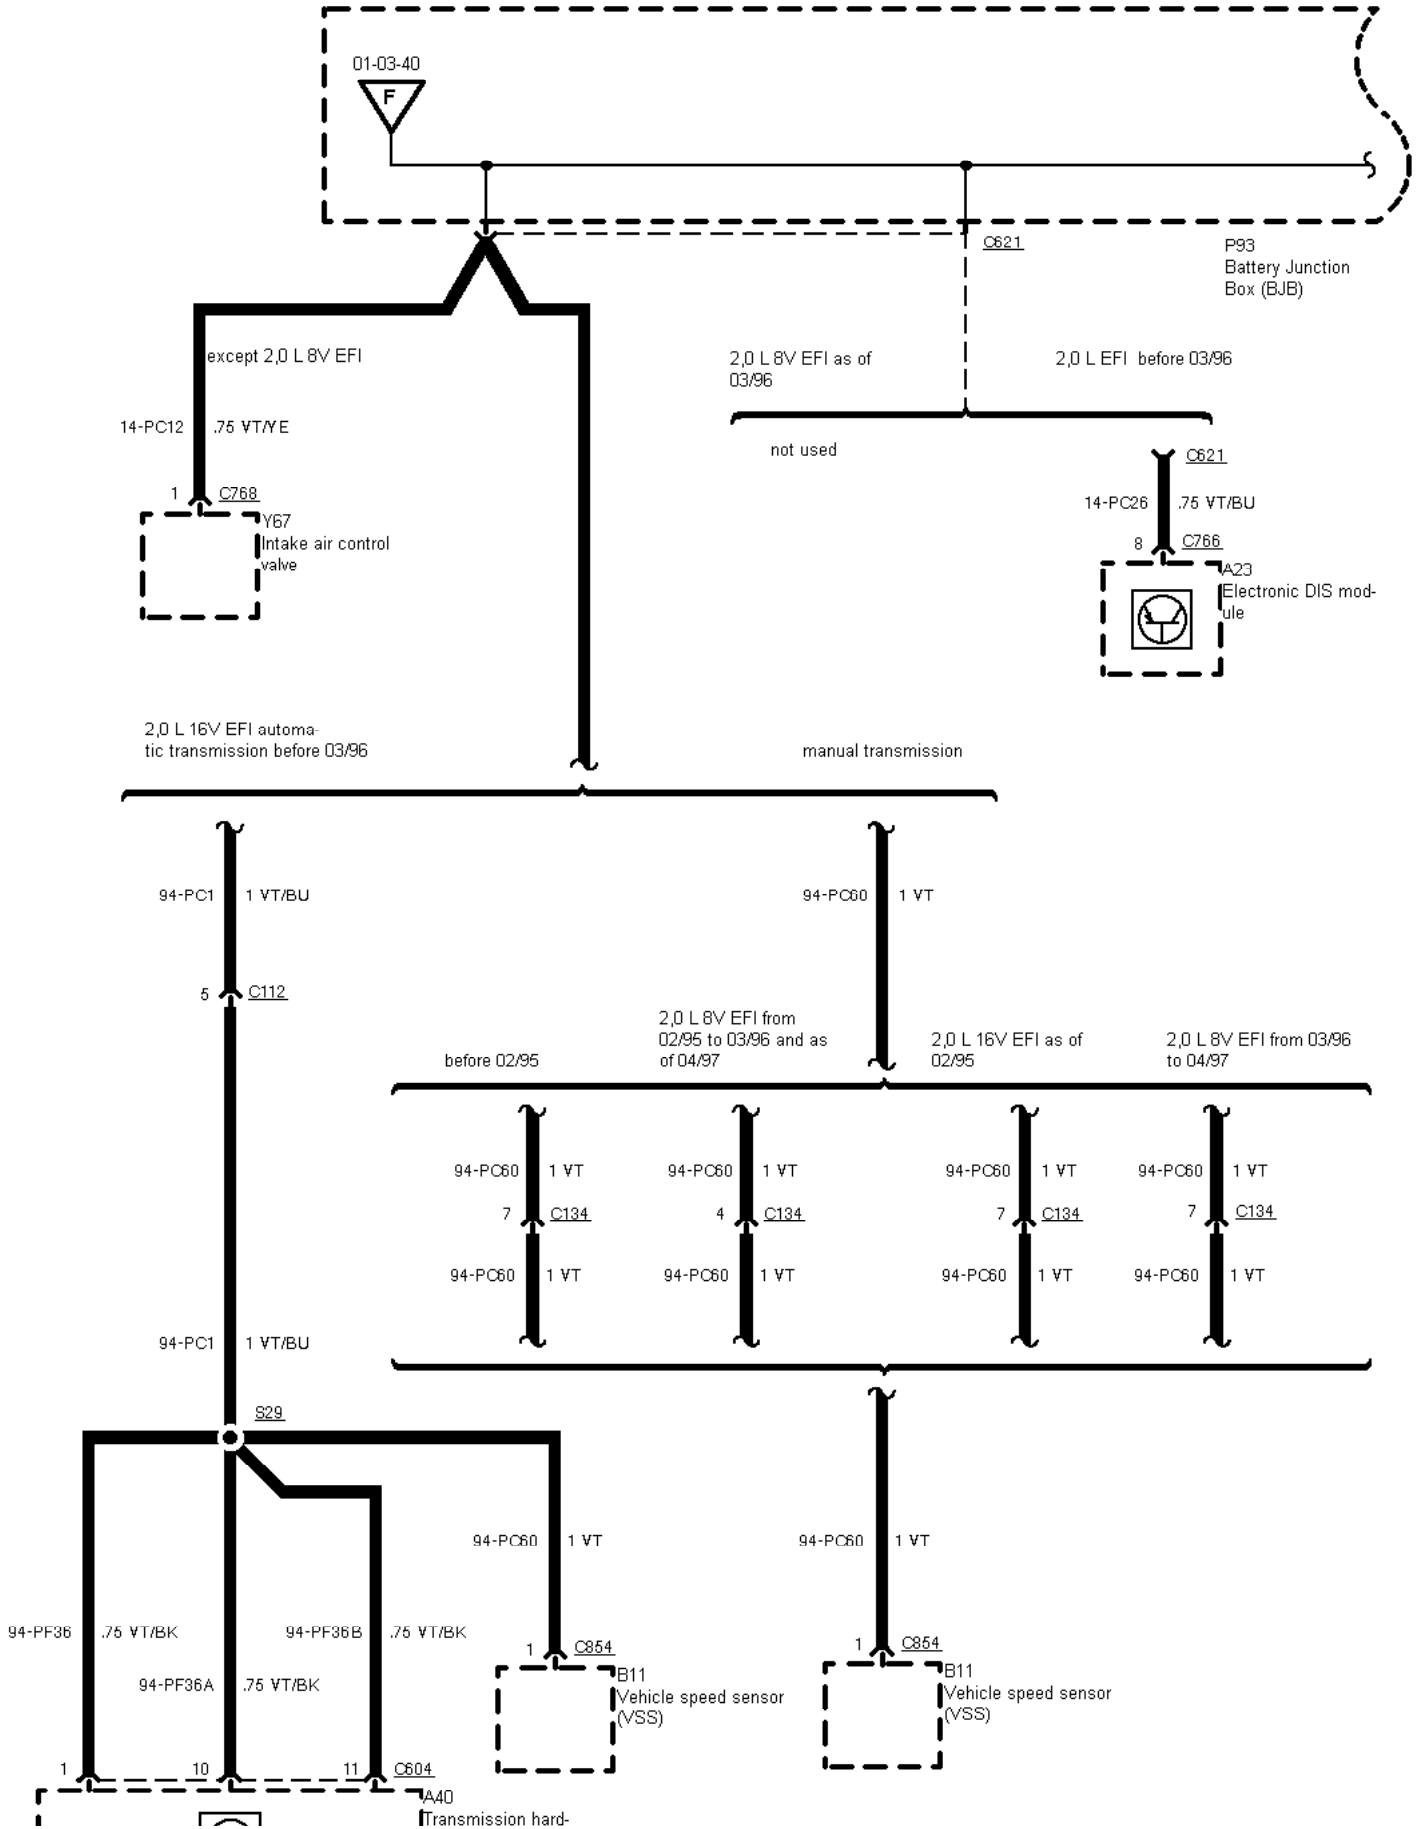






---

01-03-042 , Fuse Details , Fuse 37, 2,0 I EFI

 
---

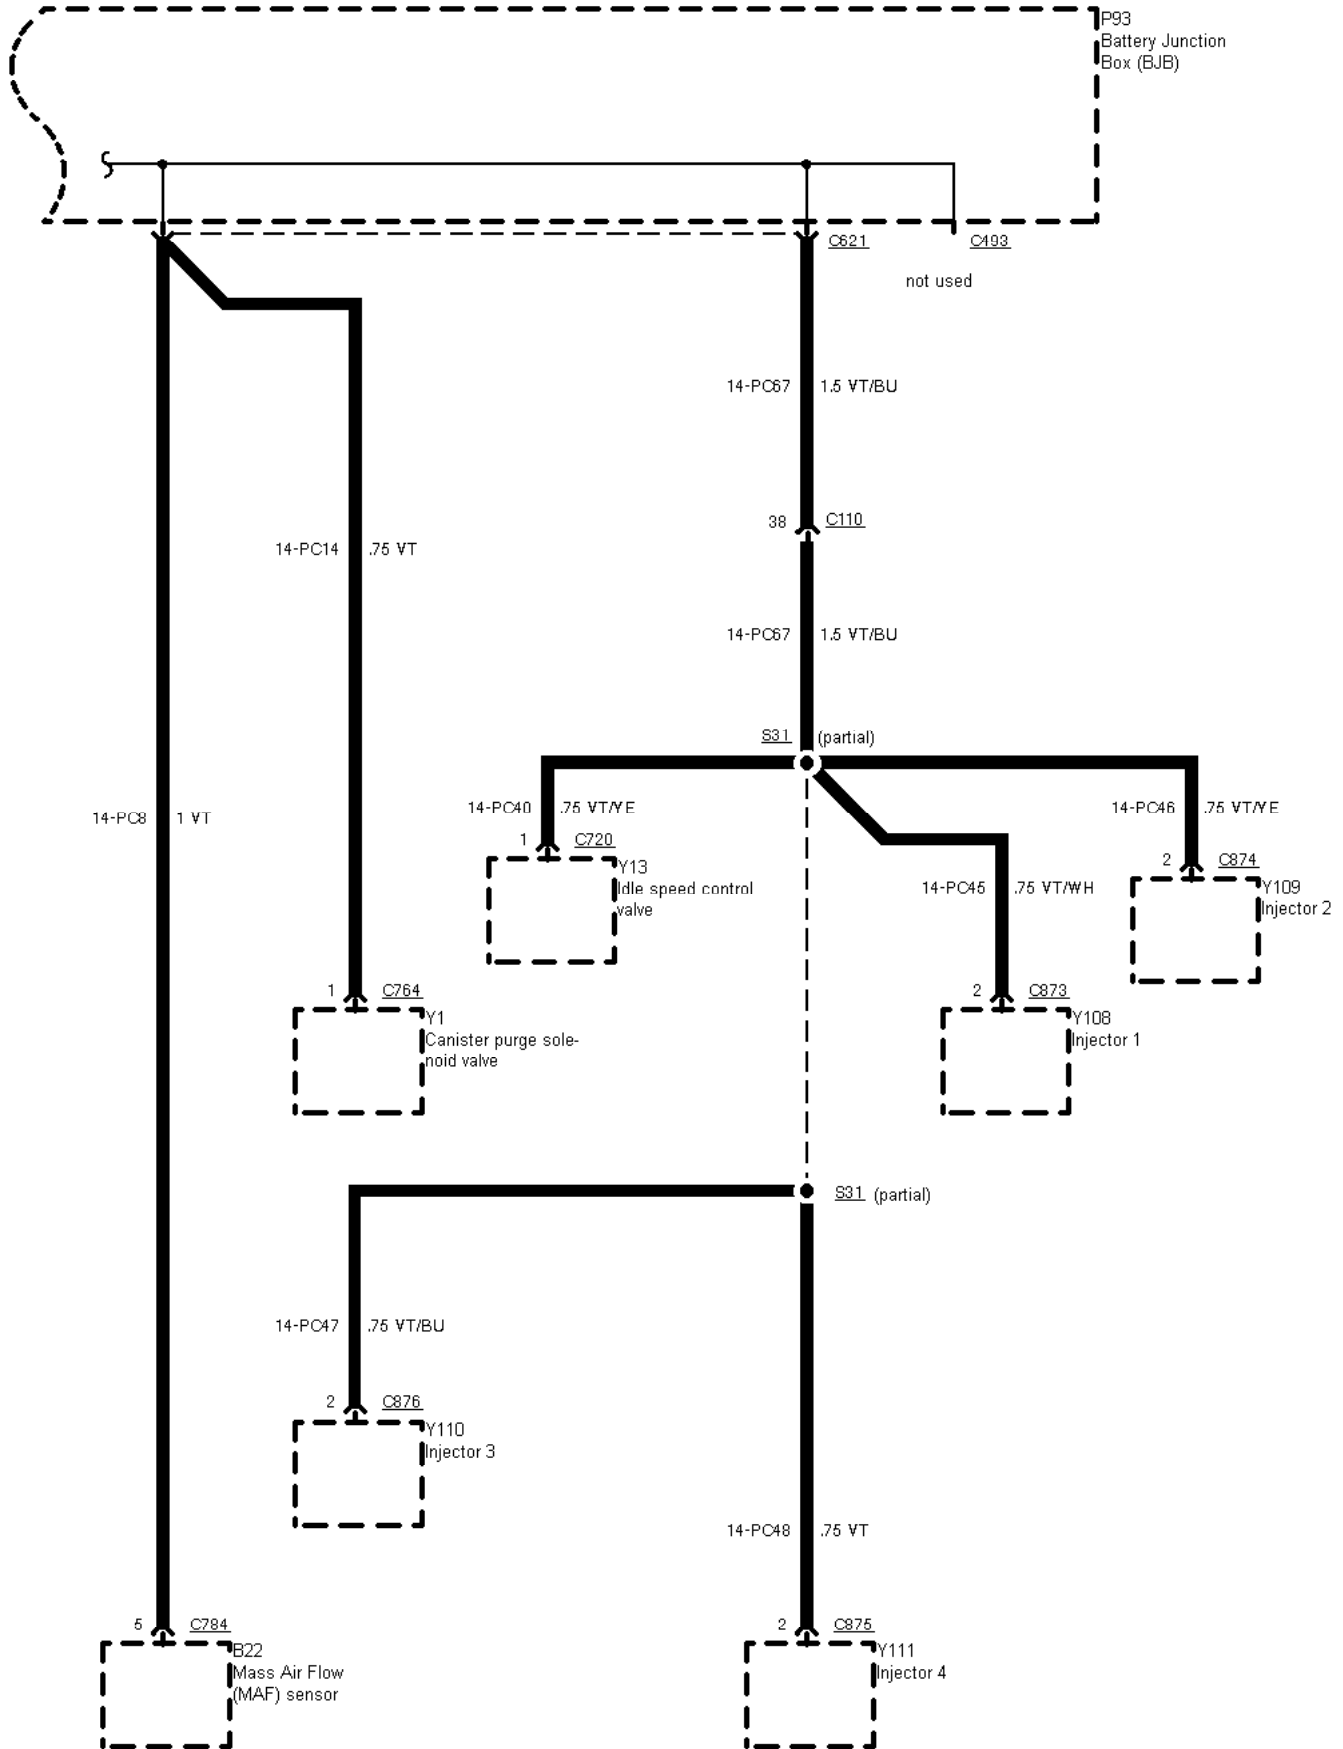



---

01-03-043 , Fuse Details , Fuse 37, 2,3 I DOHC

 ---

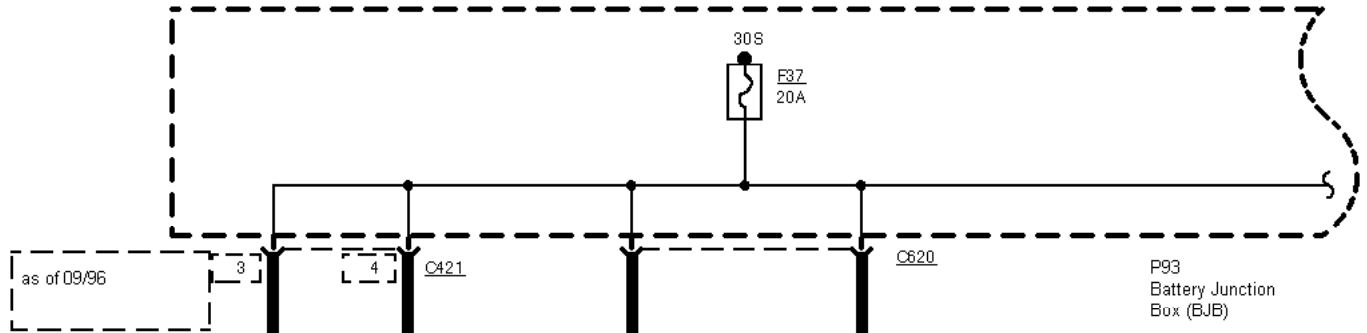




14-PA8 1.5 VT      14-PC66 .75 VT/BK

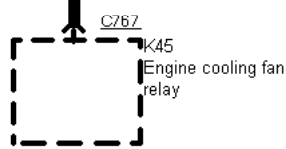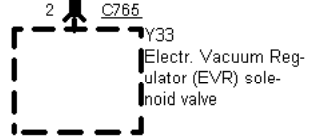  

2.3 I DOHC automatic transmission

   2.3 I DOHC manual transmission

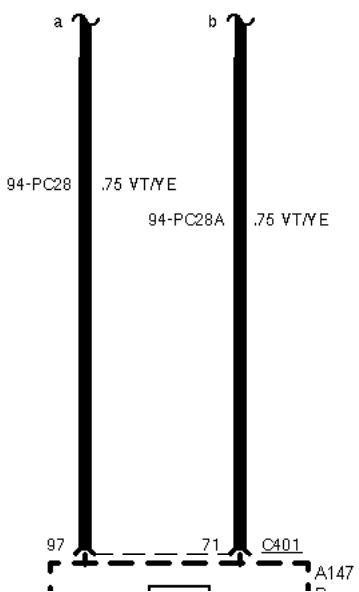




---

**01-03-044 , Fuse Details , Fuse 37, 2,3 | DOHC**

 ---

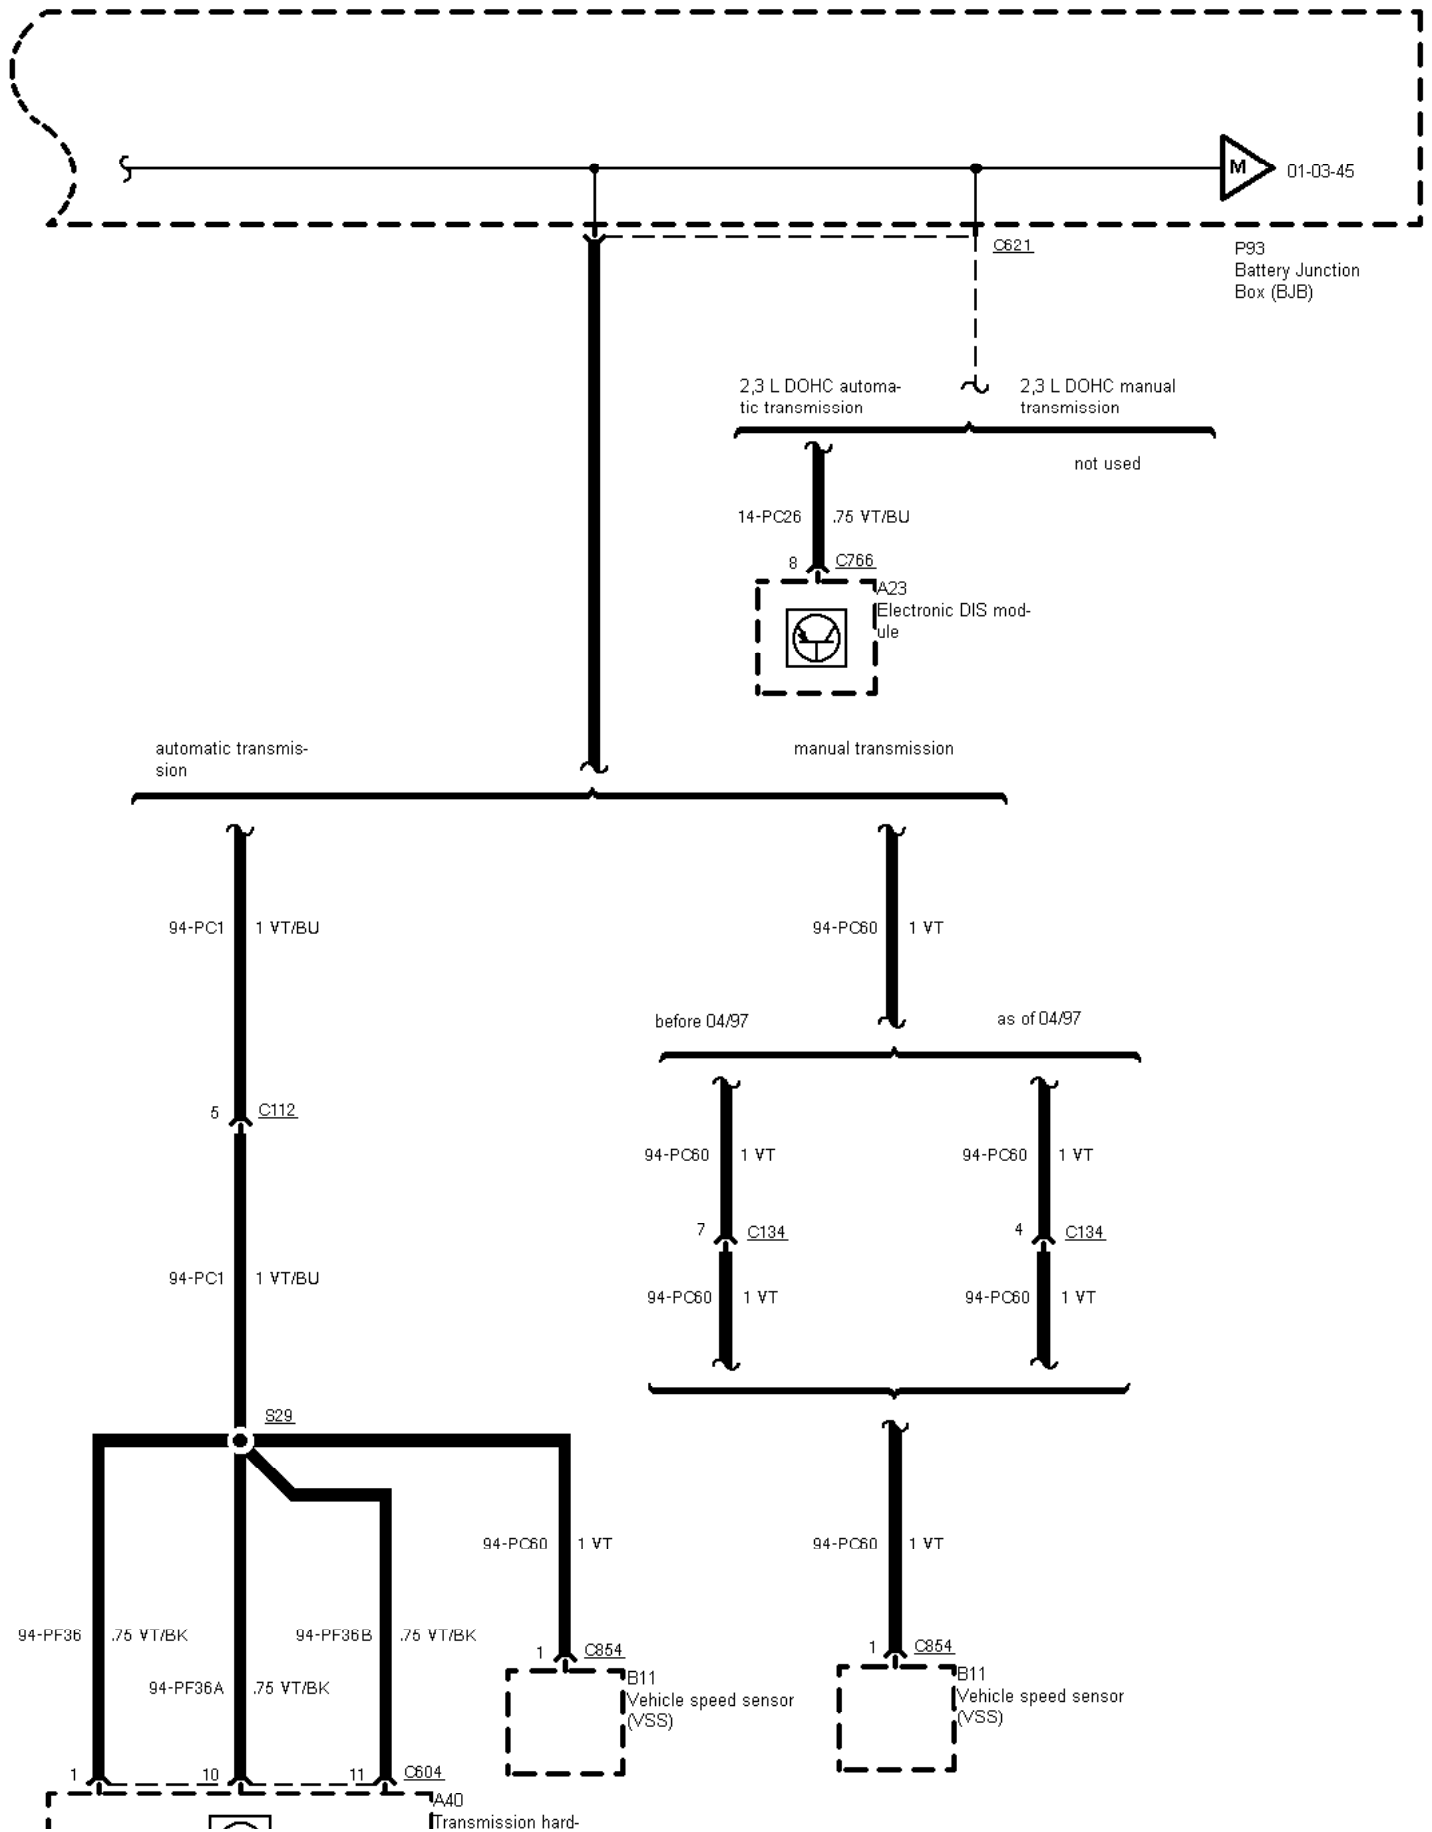




---

01-03-045 , Fuse Details , Fuse 37, 2,3 I DOHC

 ---

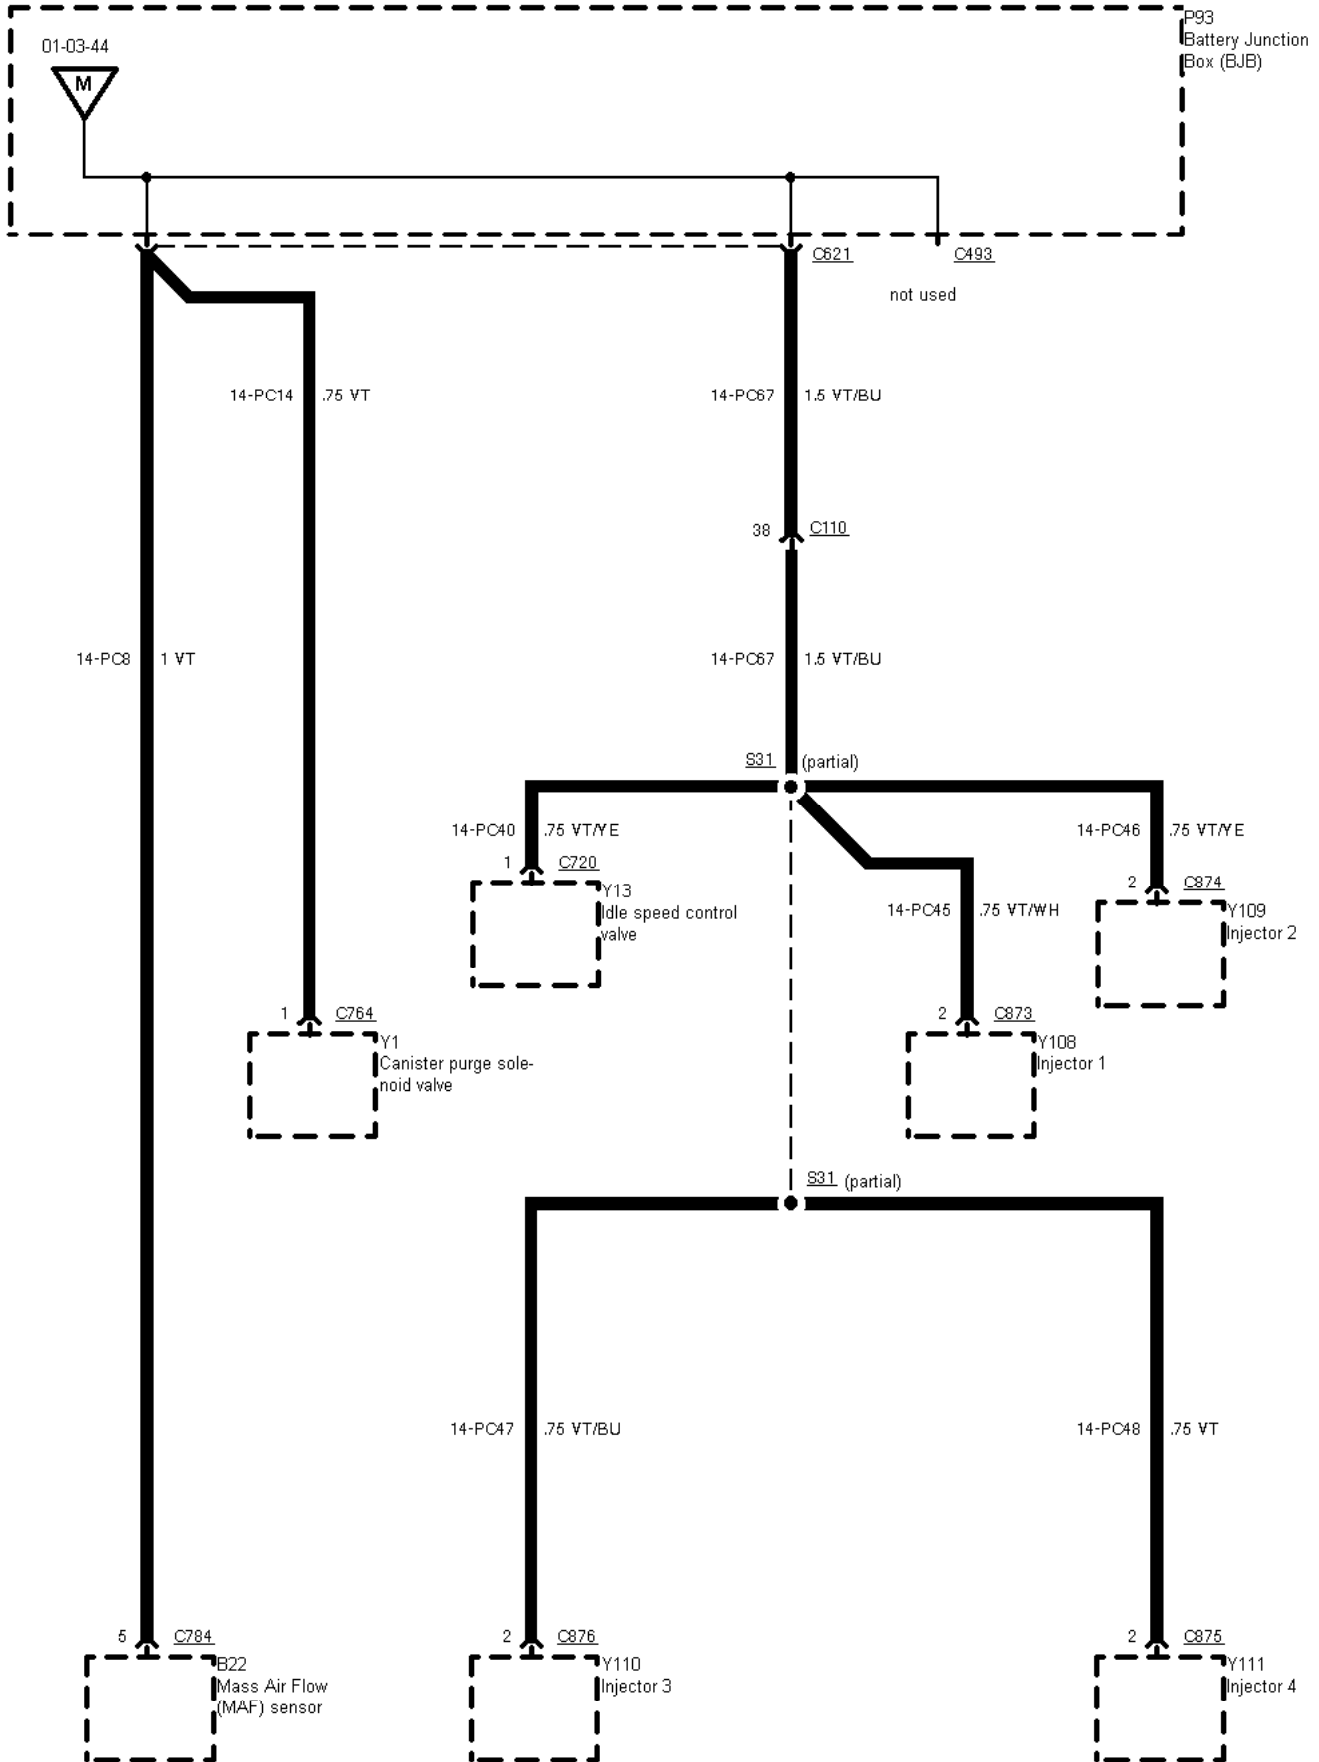






---

01-03-046 , Fuse Details , Fuse 37, 2,9 l V6

   ---

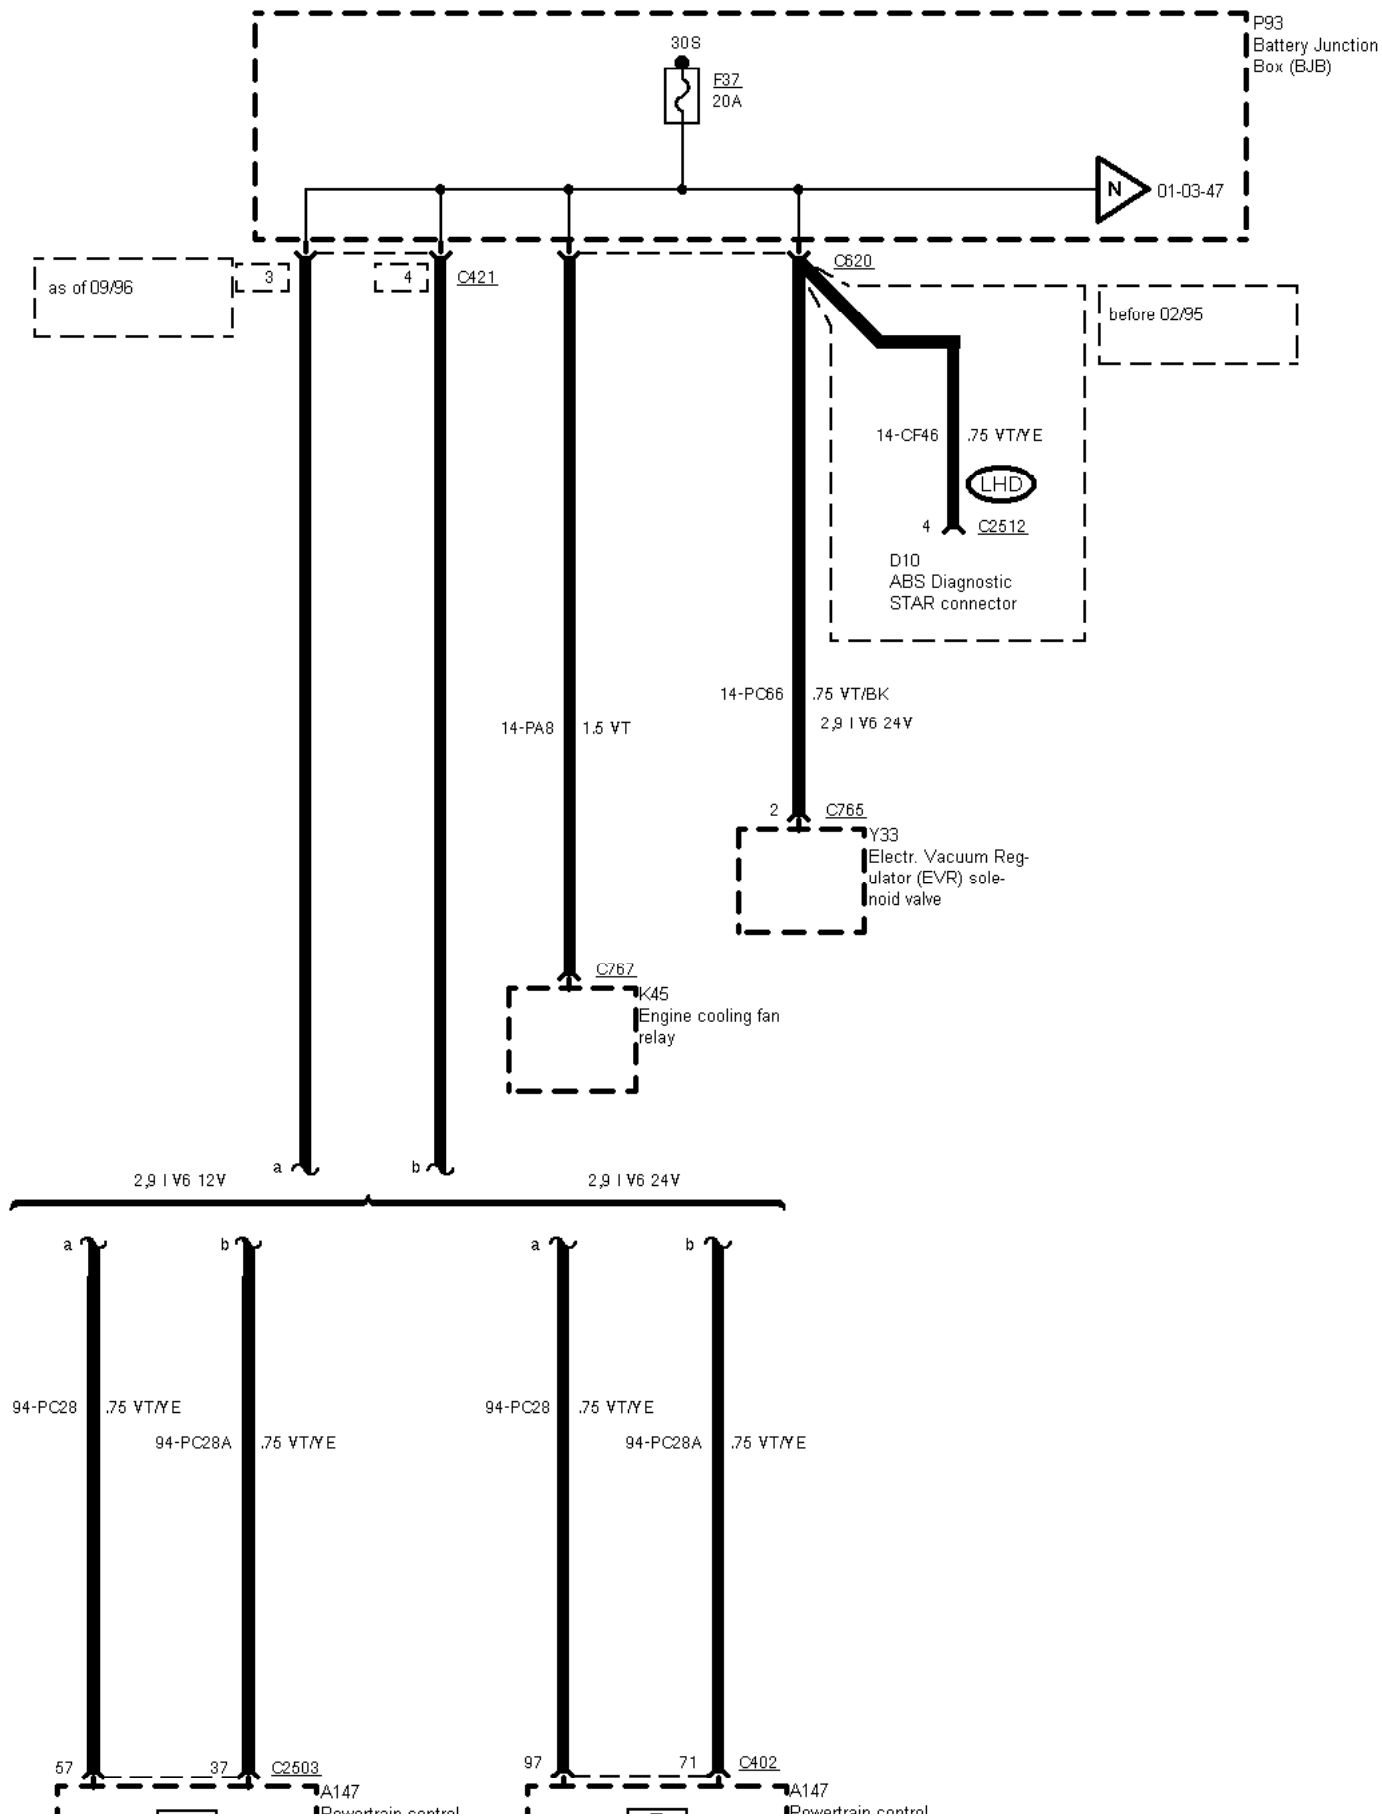




---

01-03-047 , Fuse Details , Fuse 37, 2,9 l V6

 ---

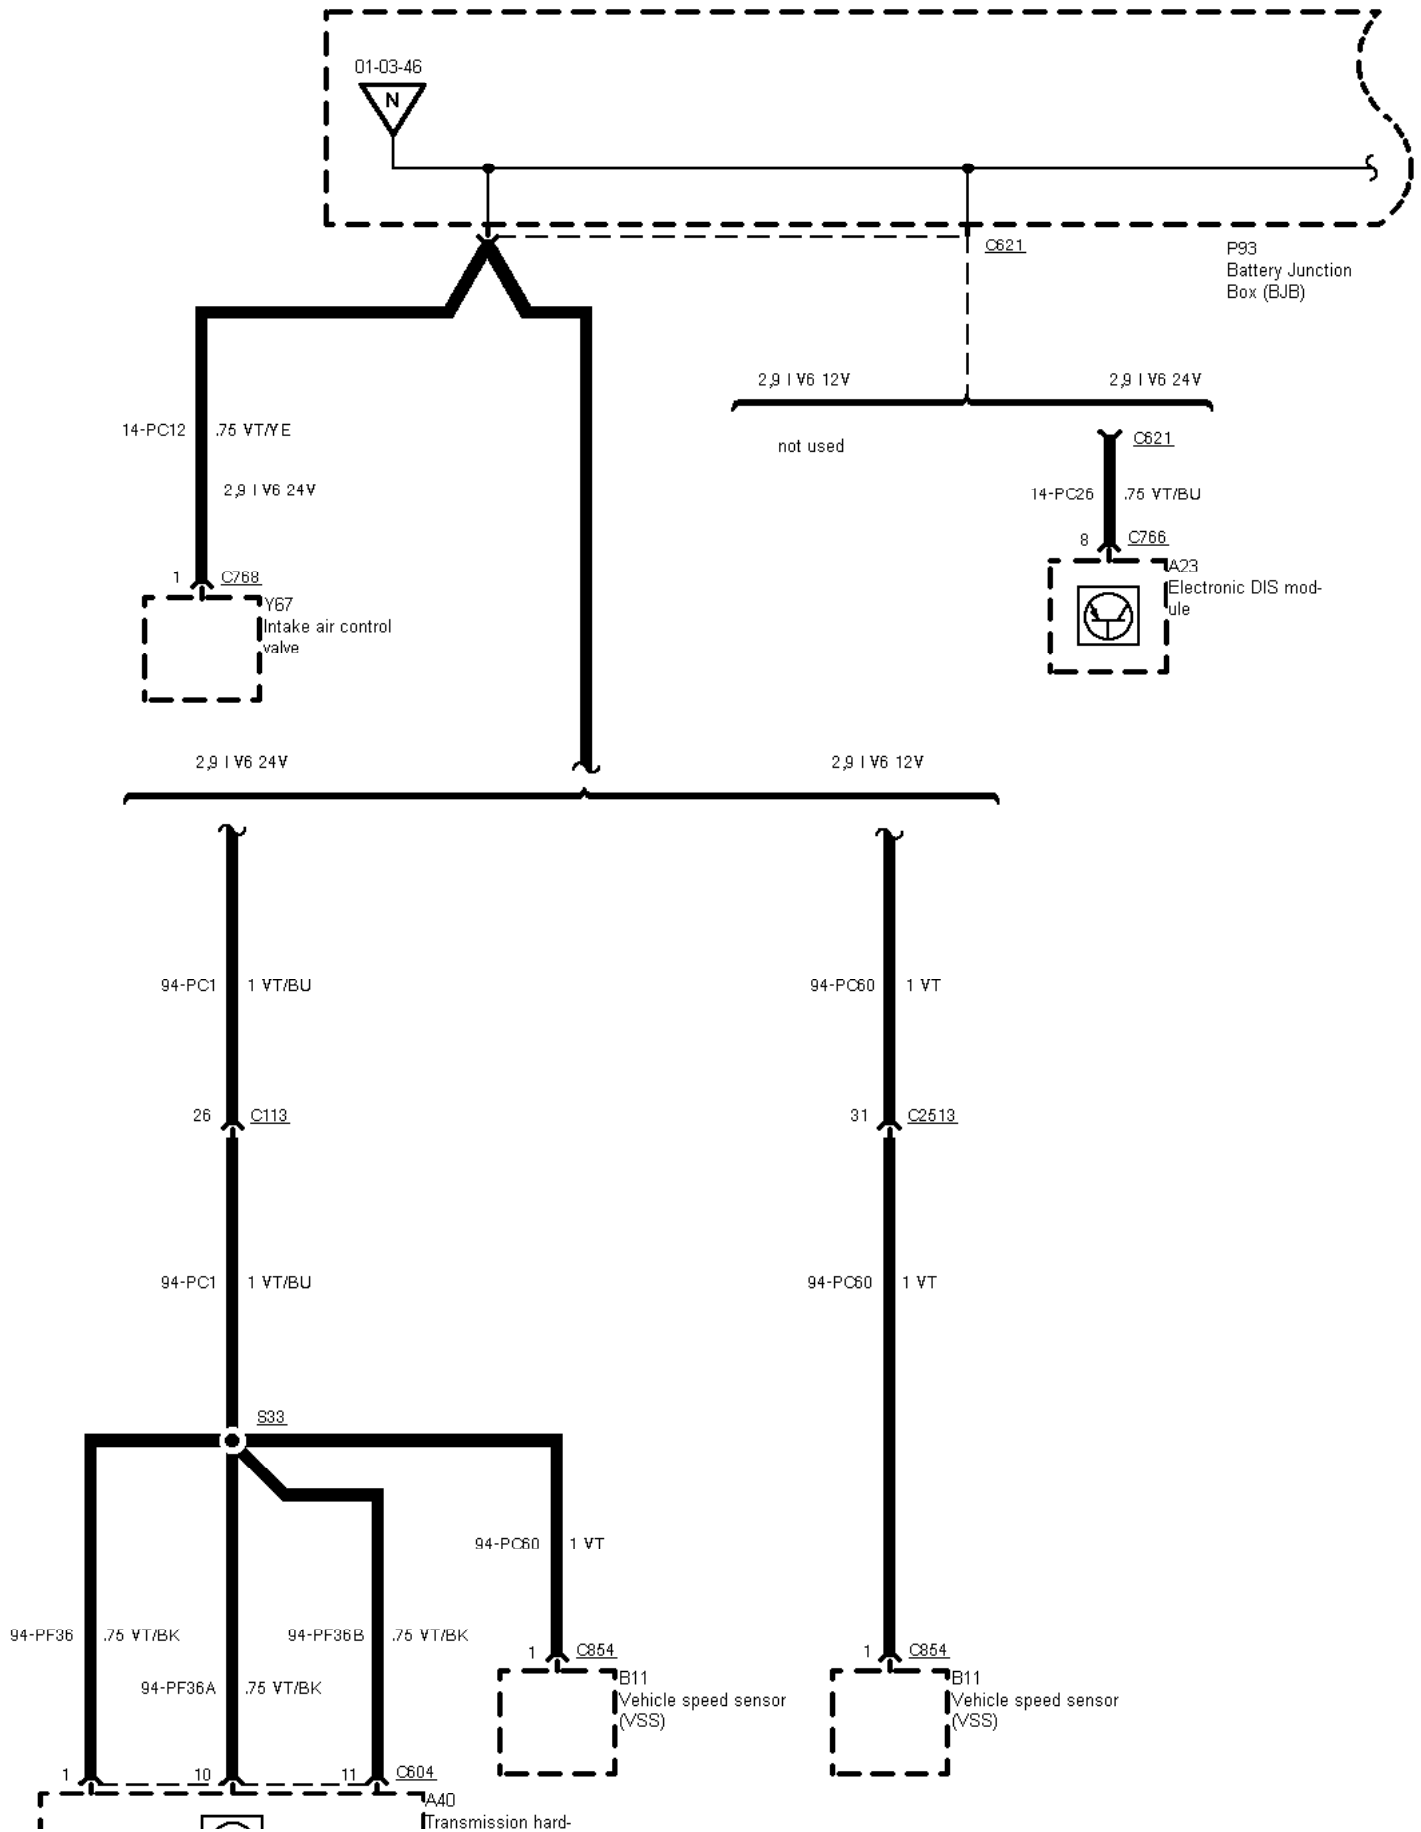





---

01-03-048 , Fuse Details , Fuse 37, 2,9 I V6

  ---

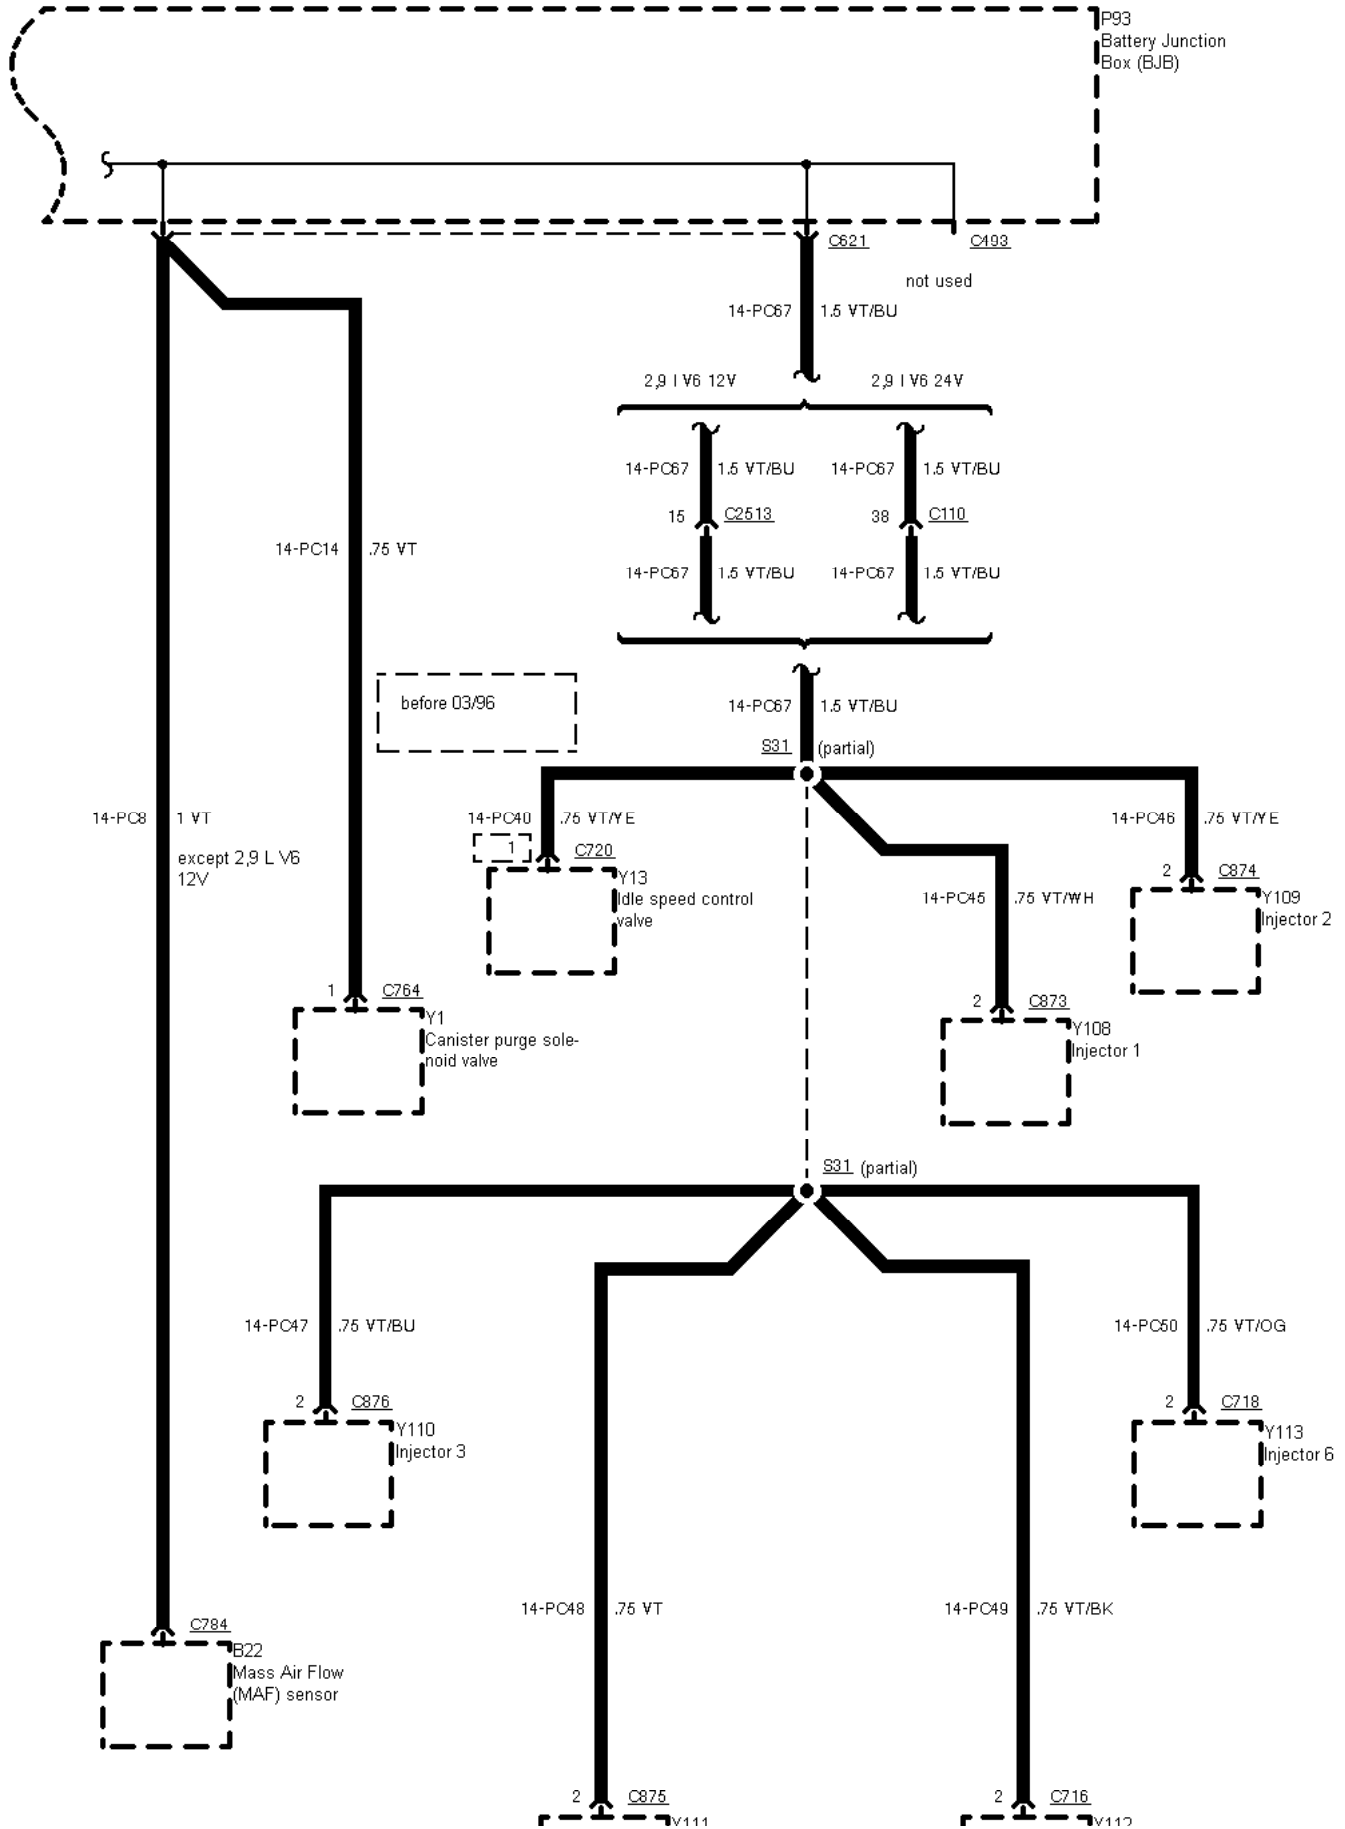




---

01-03-049 , Fuse Details , Fuse 37, TCI Diesel before 09/96

 ---

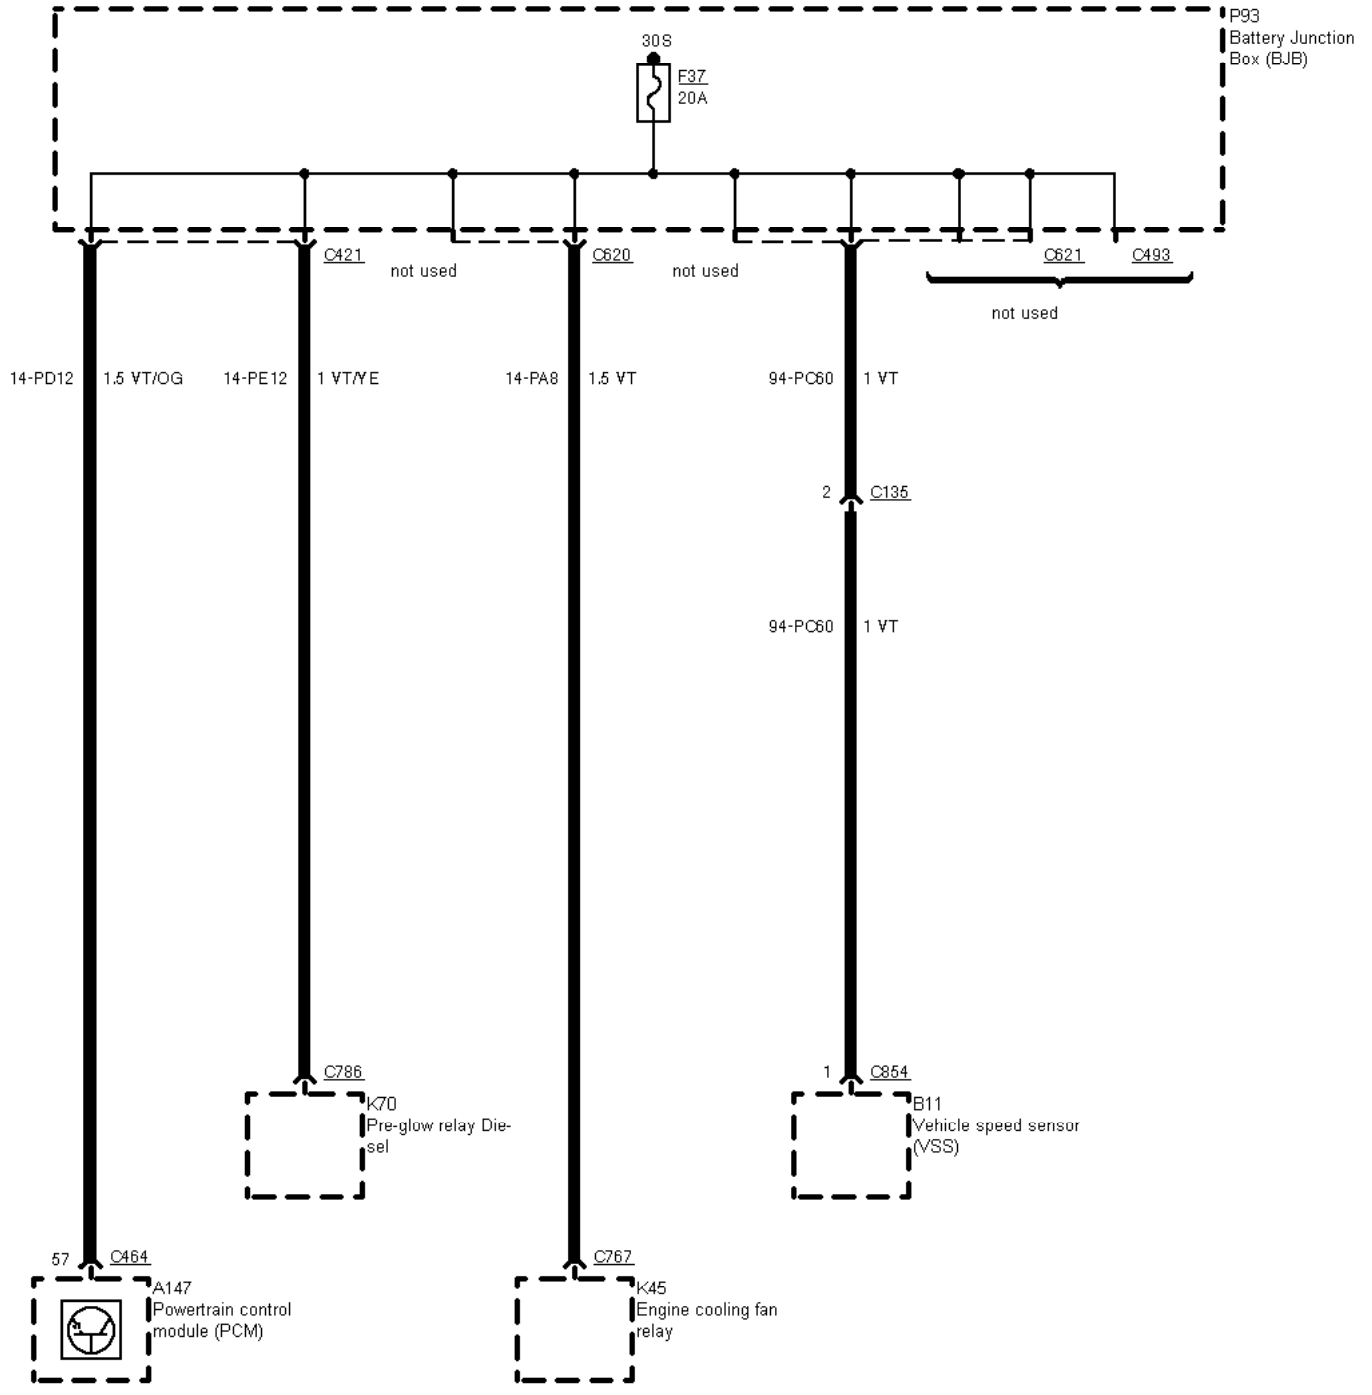




---

01-03-050 , Fuse Details , Fuse 37, TCI Diesel as of 09/96

 ---

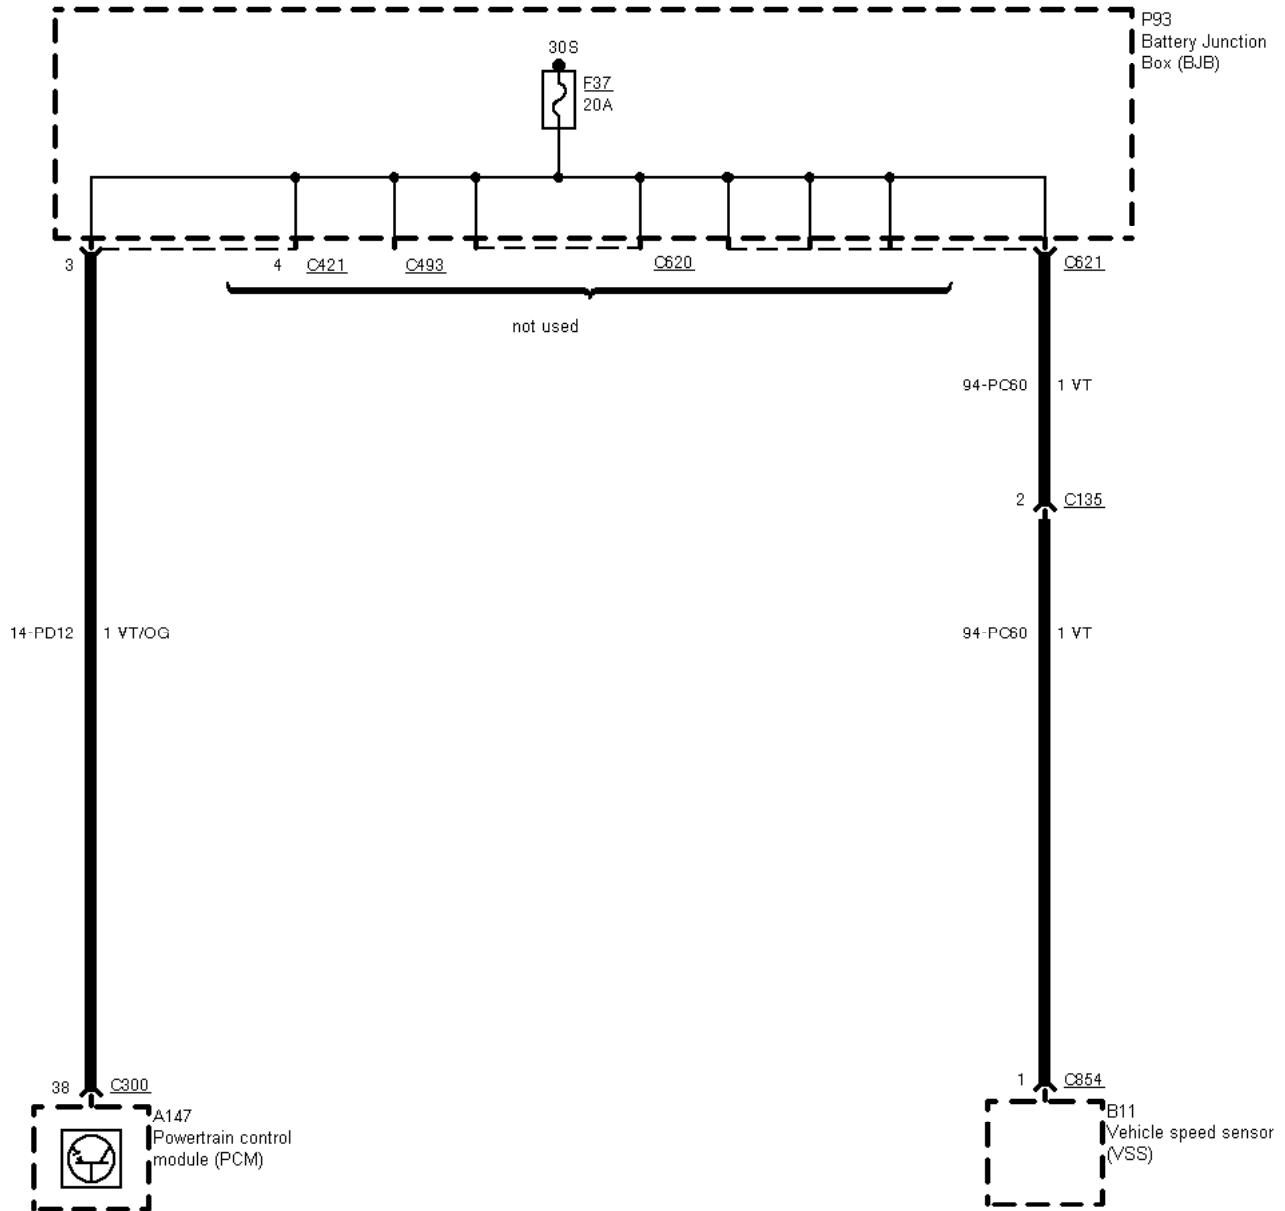


---


01-03-051 , Fuse Details

---

 Fuse 38, Fuse 39 except TCI Diesel automatic transmission as of 11/97

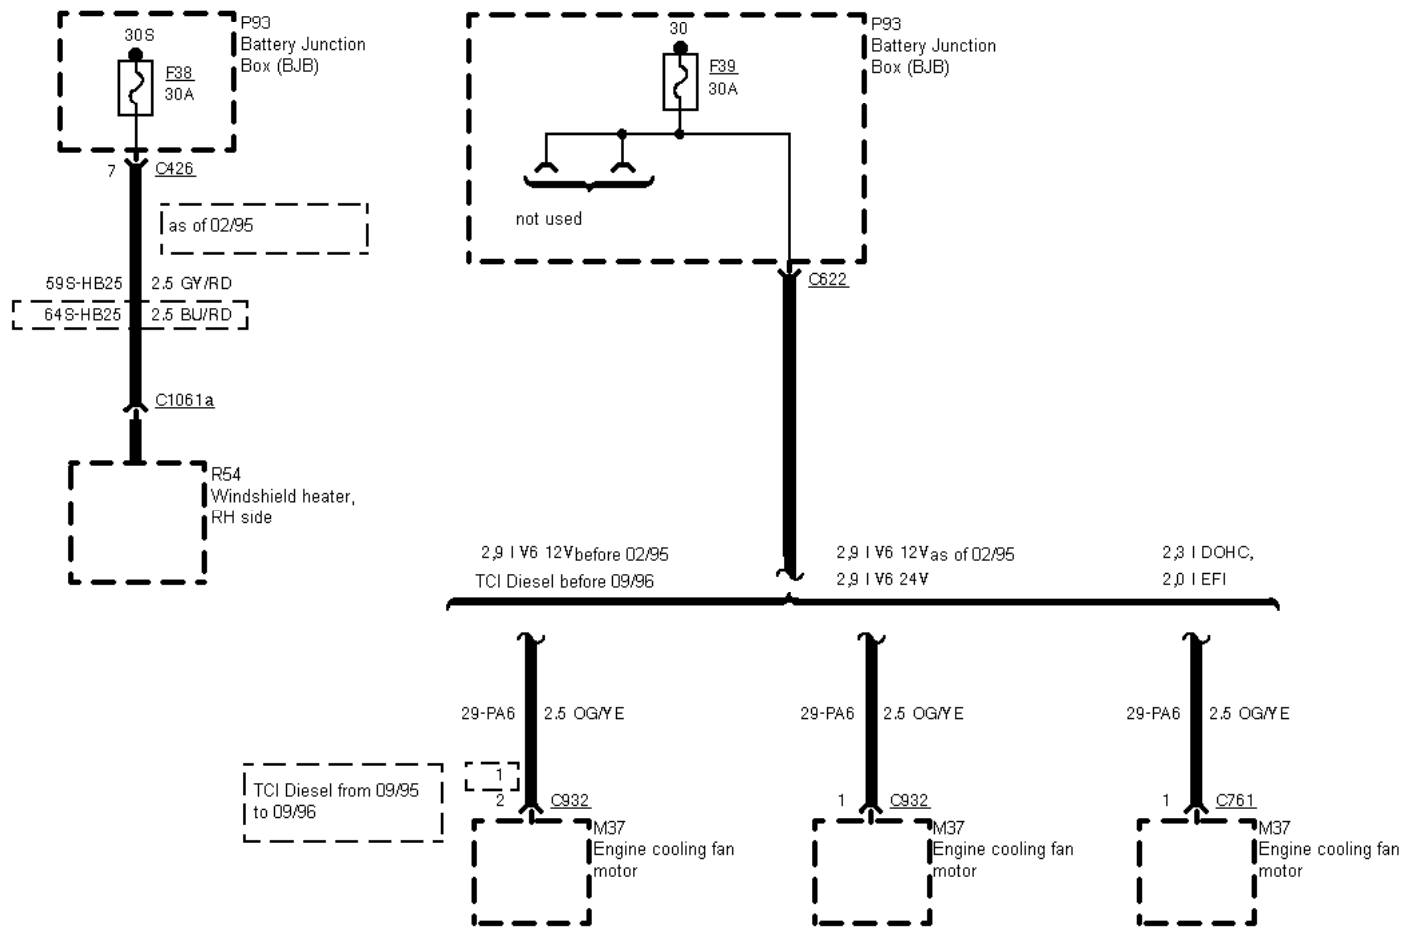

 
Fuse 39 TCI Diesel automatic transmission as of 11/97

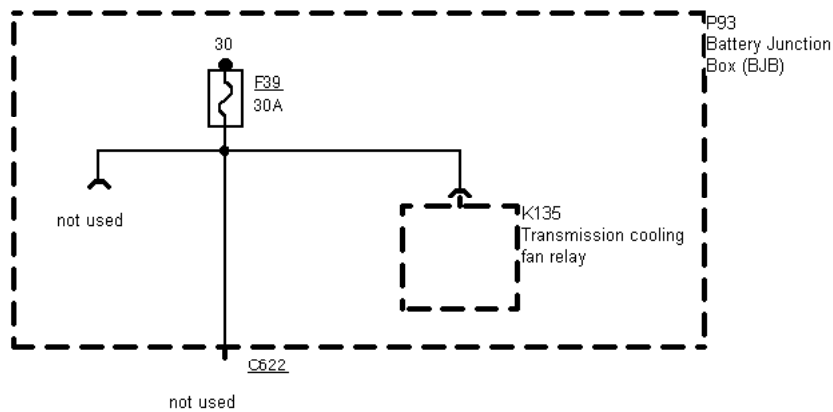

---

01-03-052 , Fuse Details , Fuse 40, 2,9 l V6

 
---

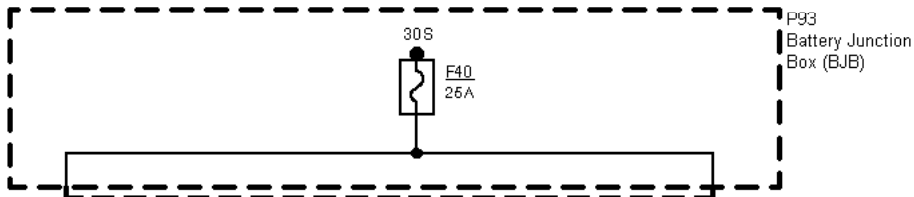

2,9 I V6 12V

before 02/95  
2,9 I V6 24V

 as of 02/95  
2,9 I V6 24V

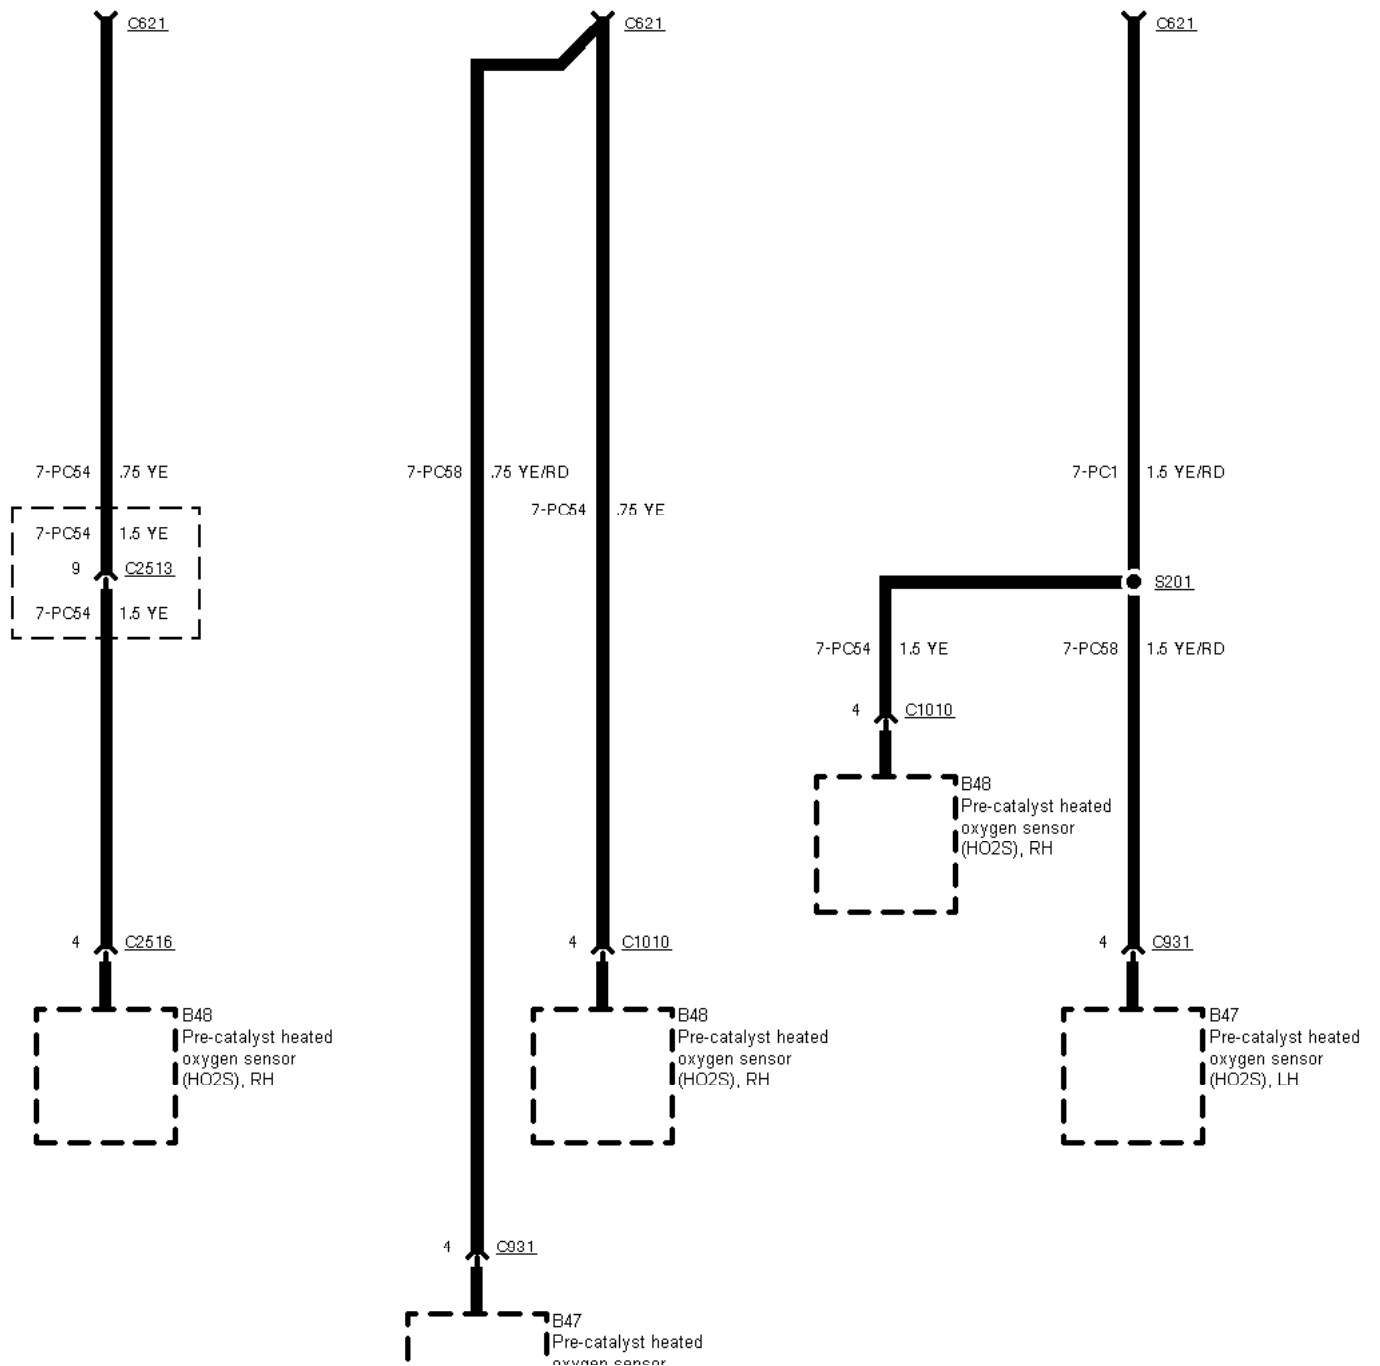

01-03-053 (H02S), LH

---

01-03-053 , Fuse Details , Fuse 40, 2,9 I V6

---


01-03-52



2,9 | V6 12V

before 02/95  
2,9 | V6 24V

as of 02/95  
2,9 | V6 24V

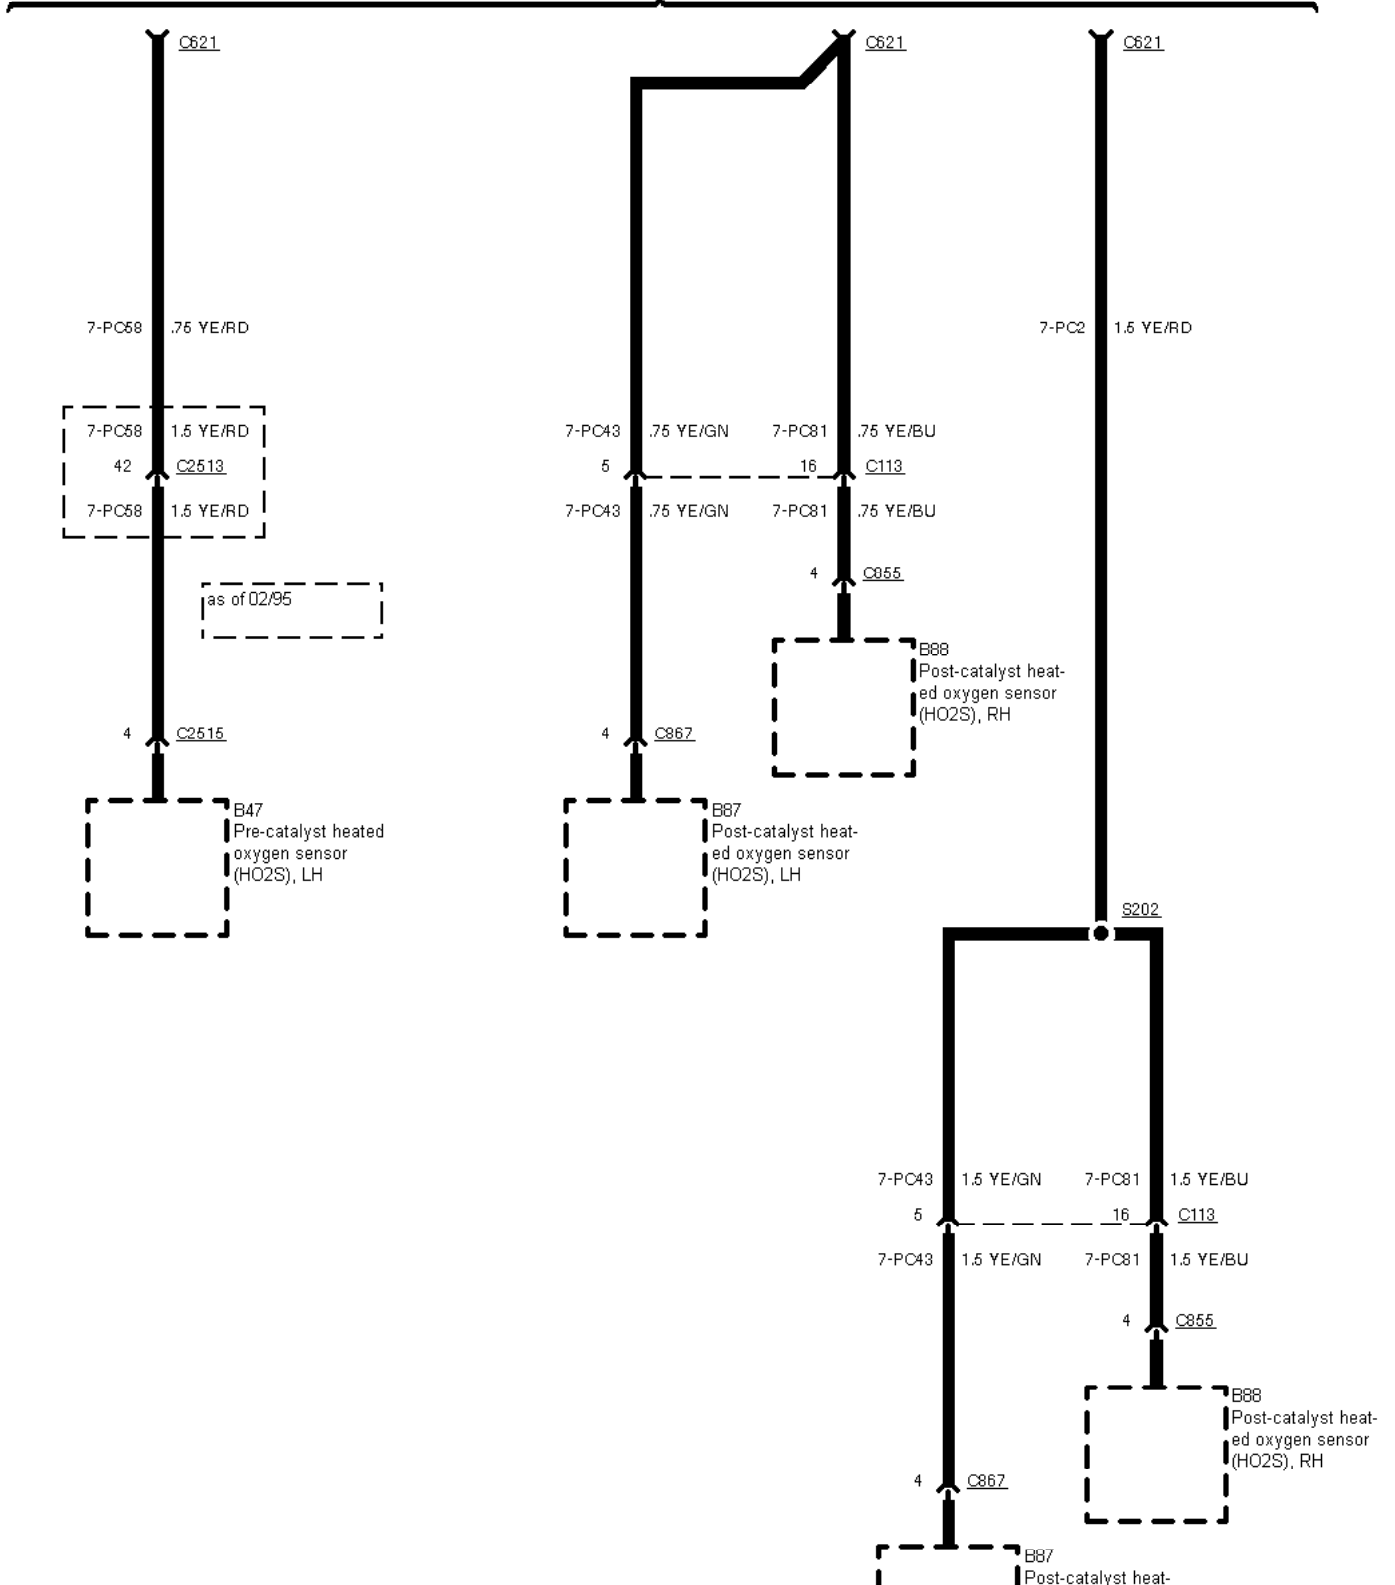 






ed oxygen sensor  
(HO2S), LH

---

01-03-054 , Fuse Details , Fuse 40, except 2,9 I V6

   ---

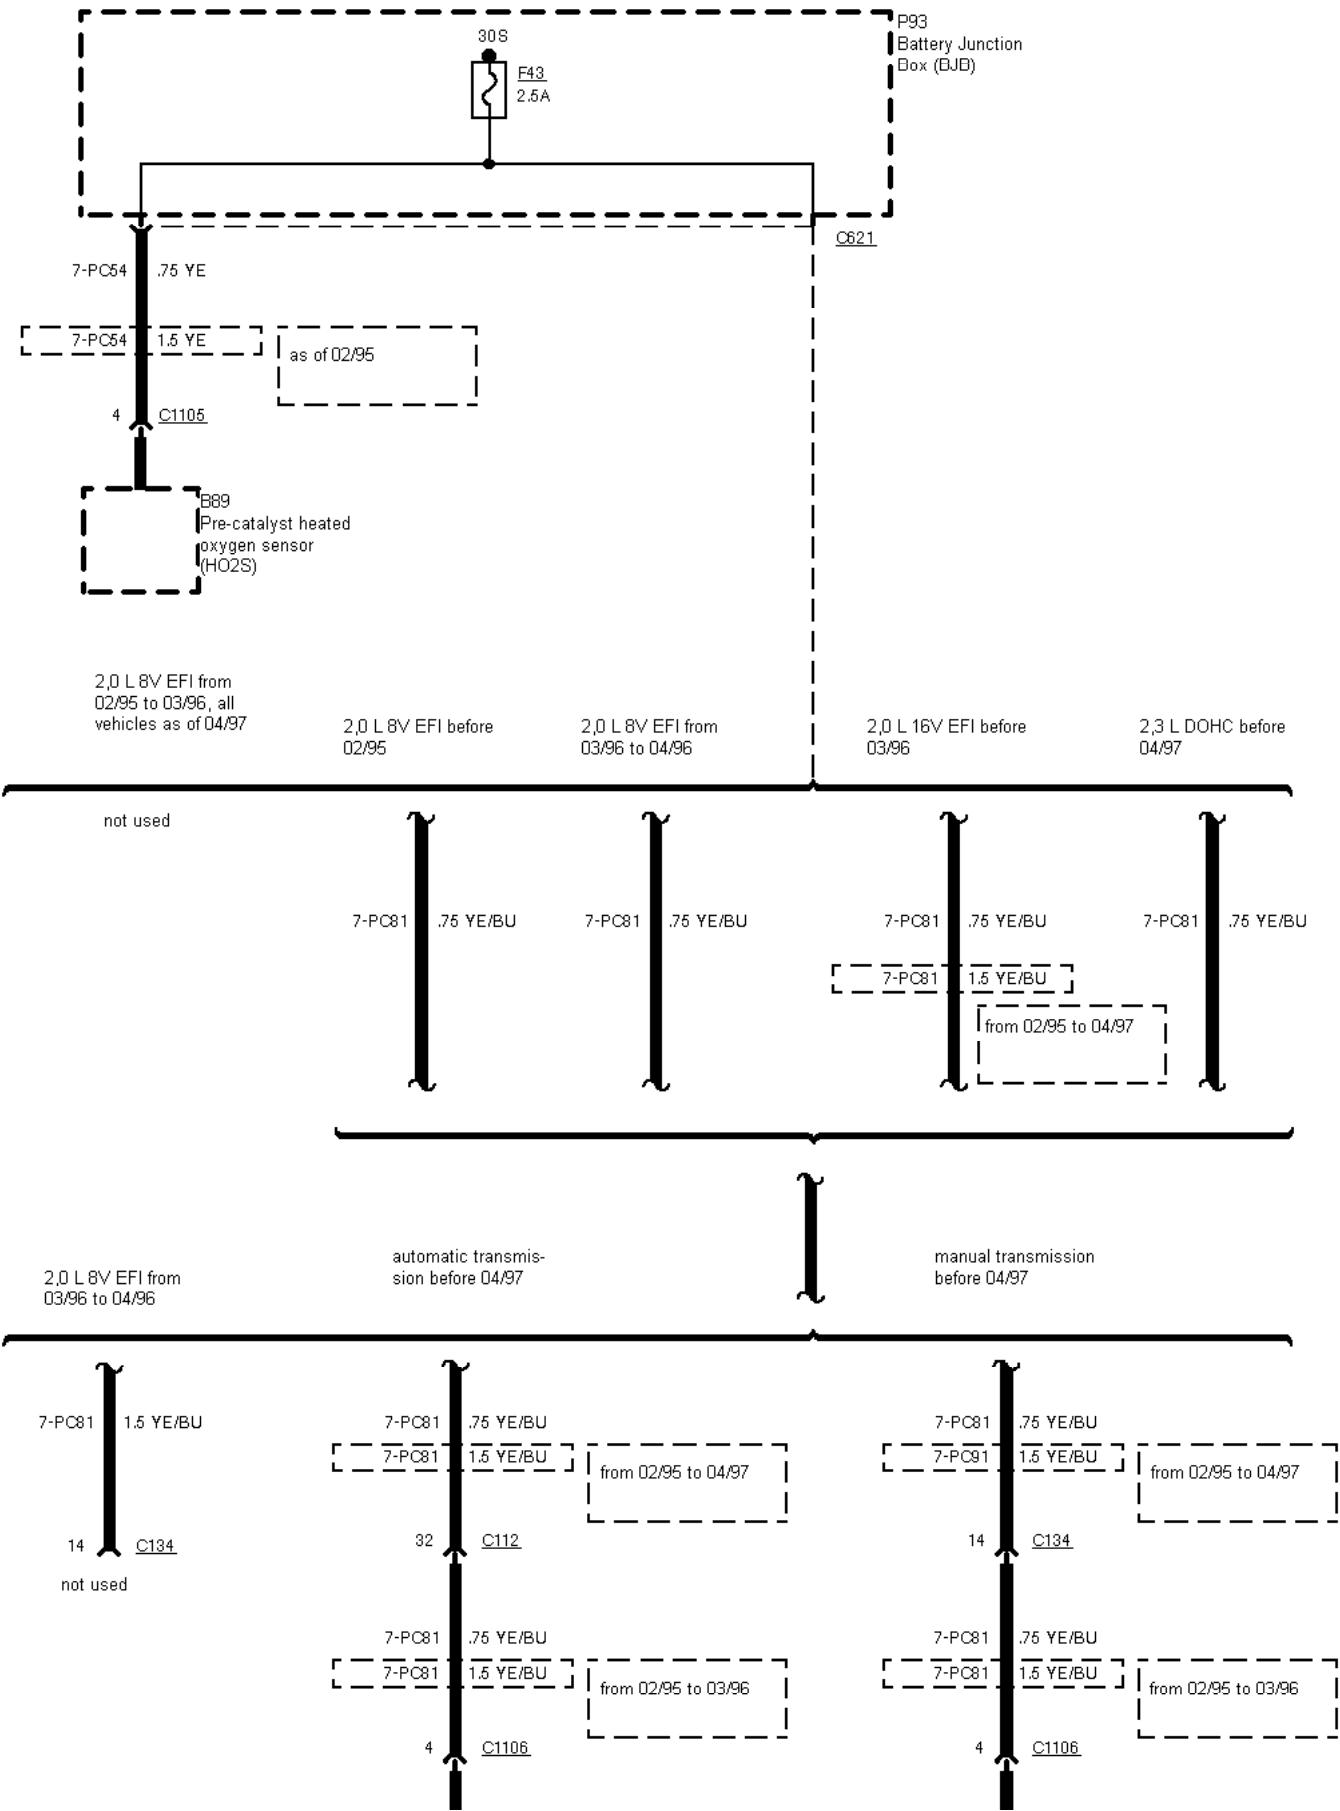


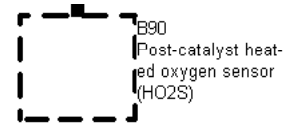
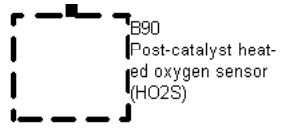


---

01-03-055 , Fuse Details , Fuse 41

   ---

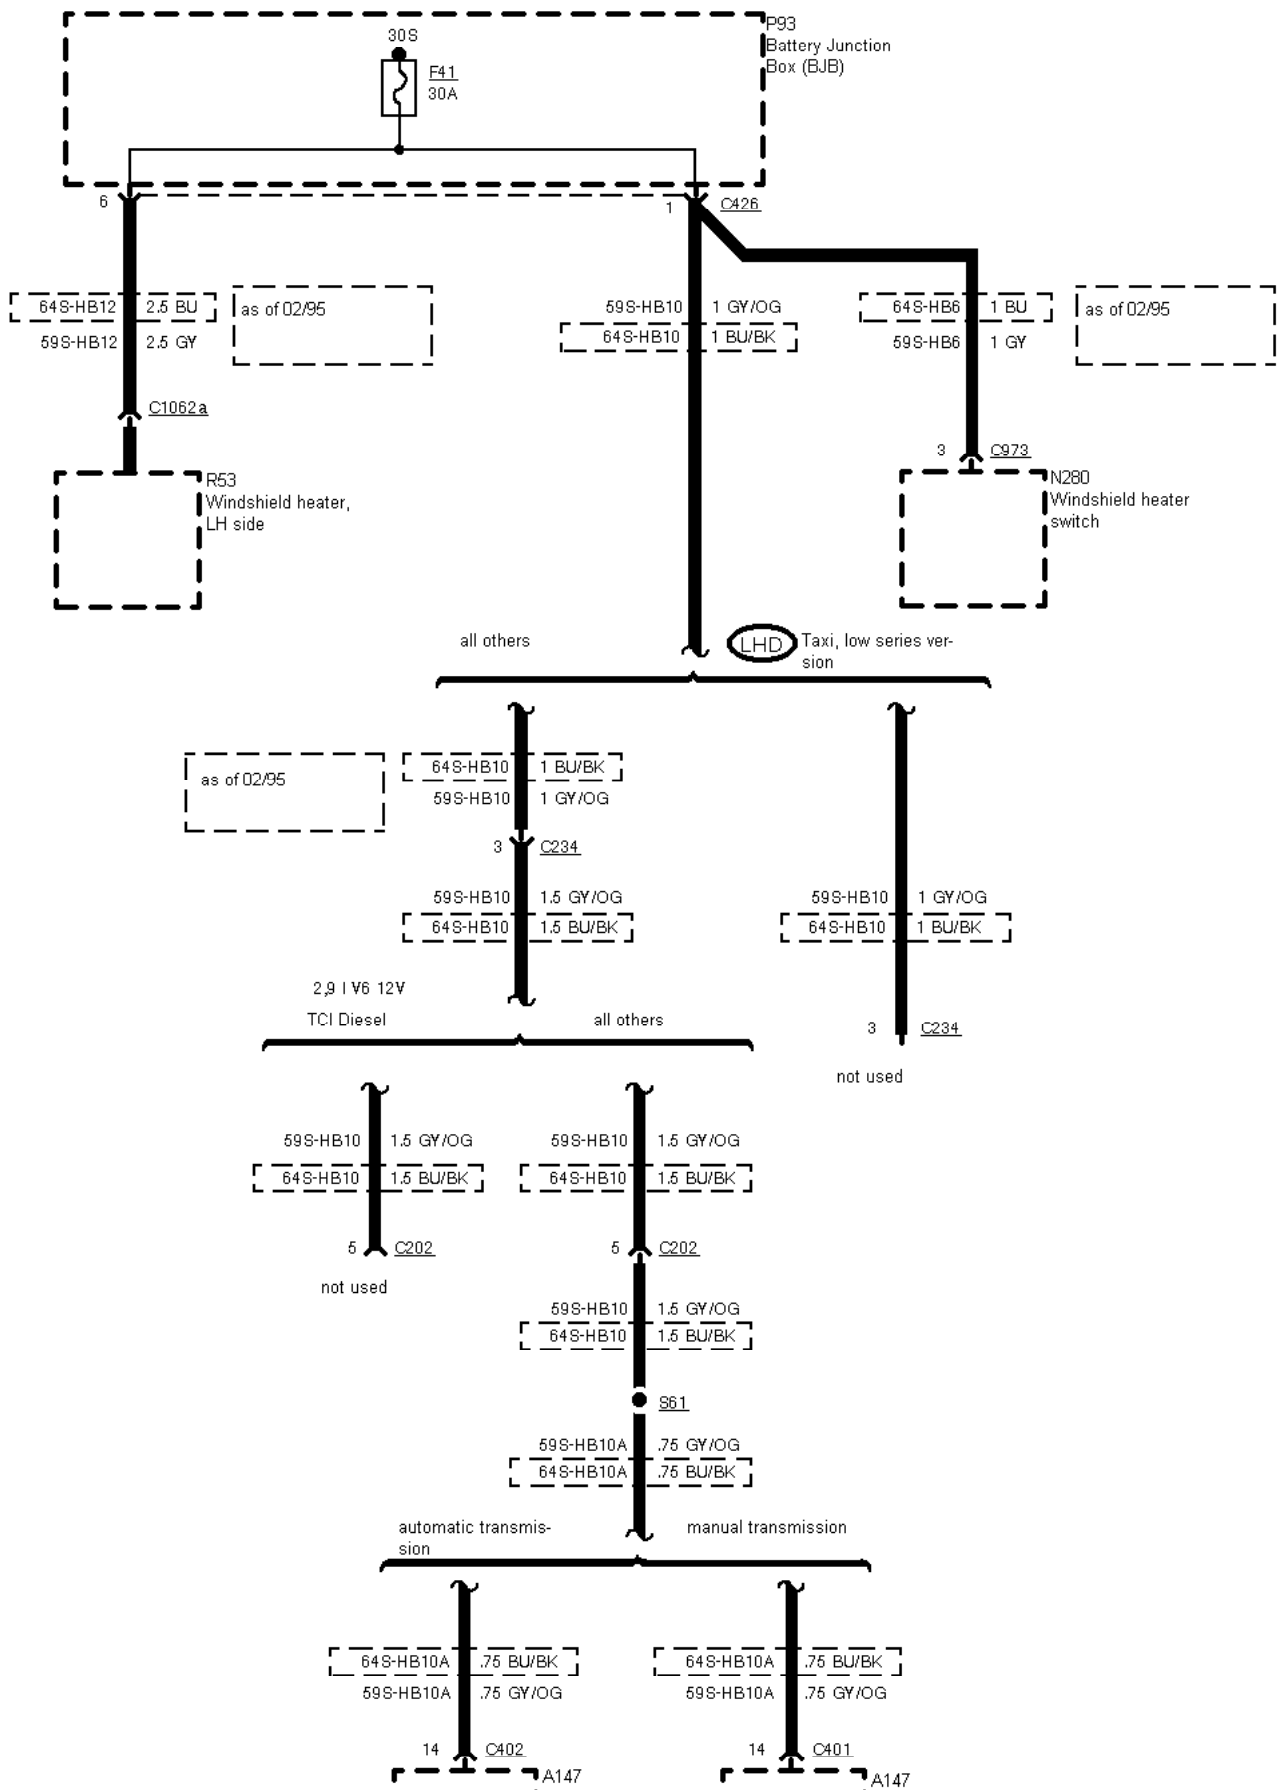


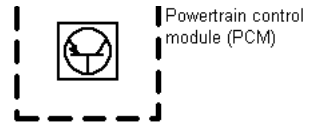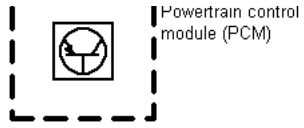

---

01-03-056 , Fuse Details , Fuse 42, except TCI Diesel

 
---

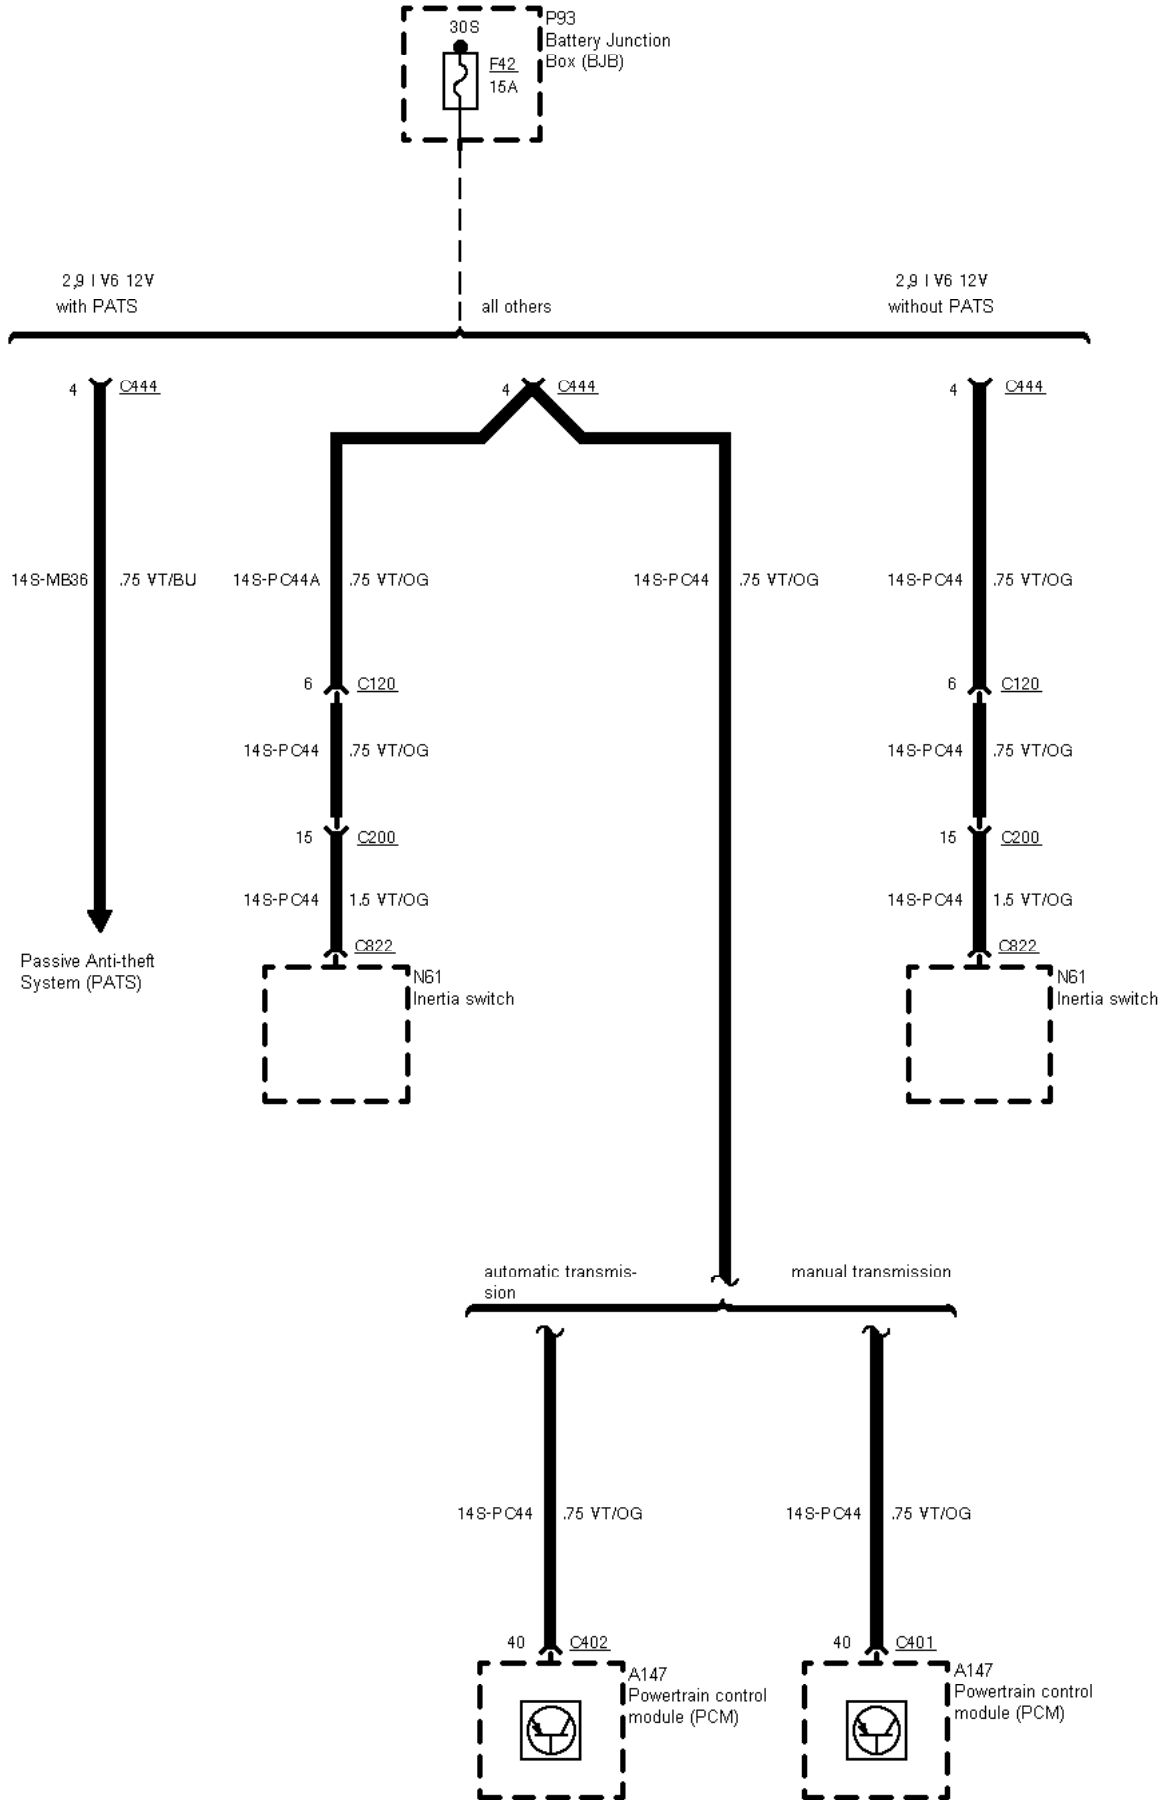


---

01-03-057 , Fuse Details , Fuse 43, Before 02/95

  ---

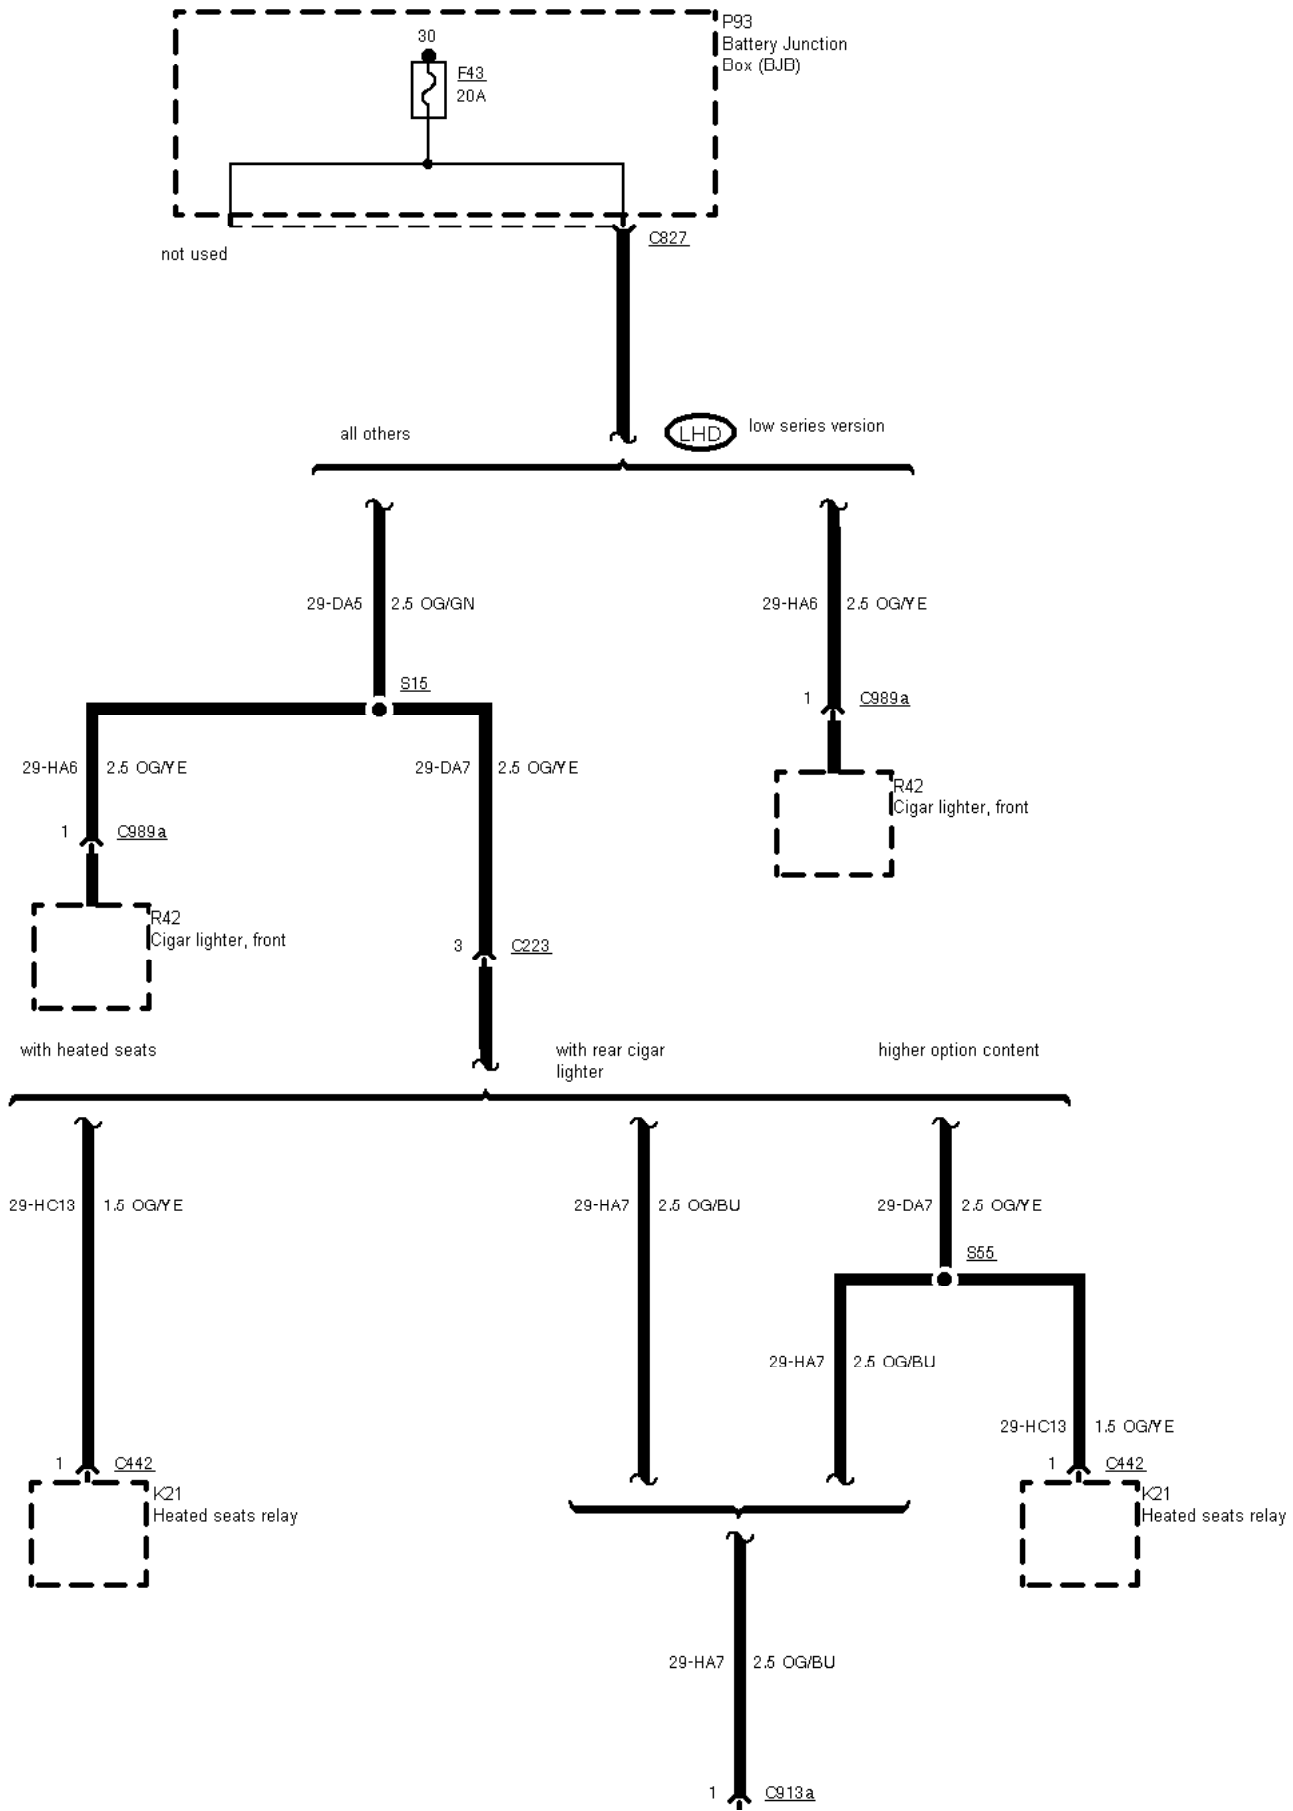




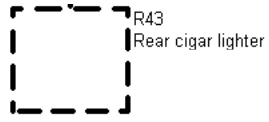


---

01-03-058 , Fuse Details , Fuse 43, As of 02/95

  ---

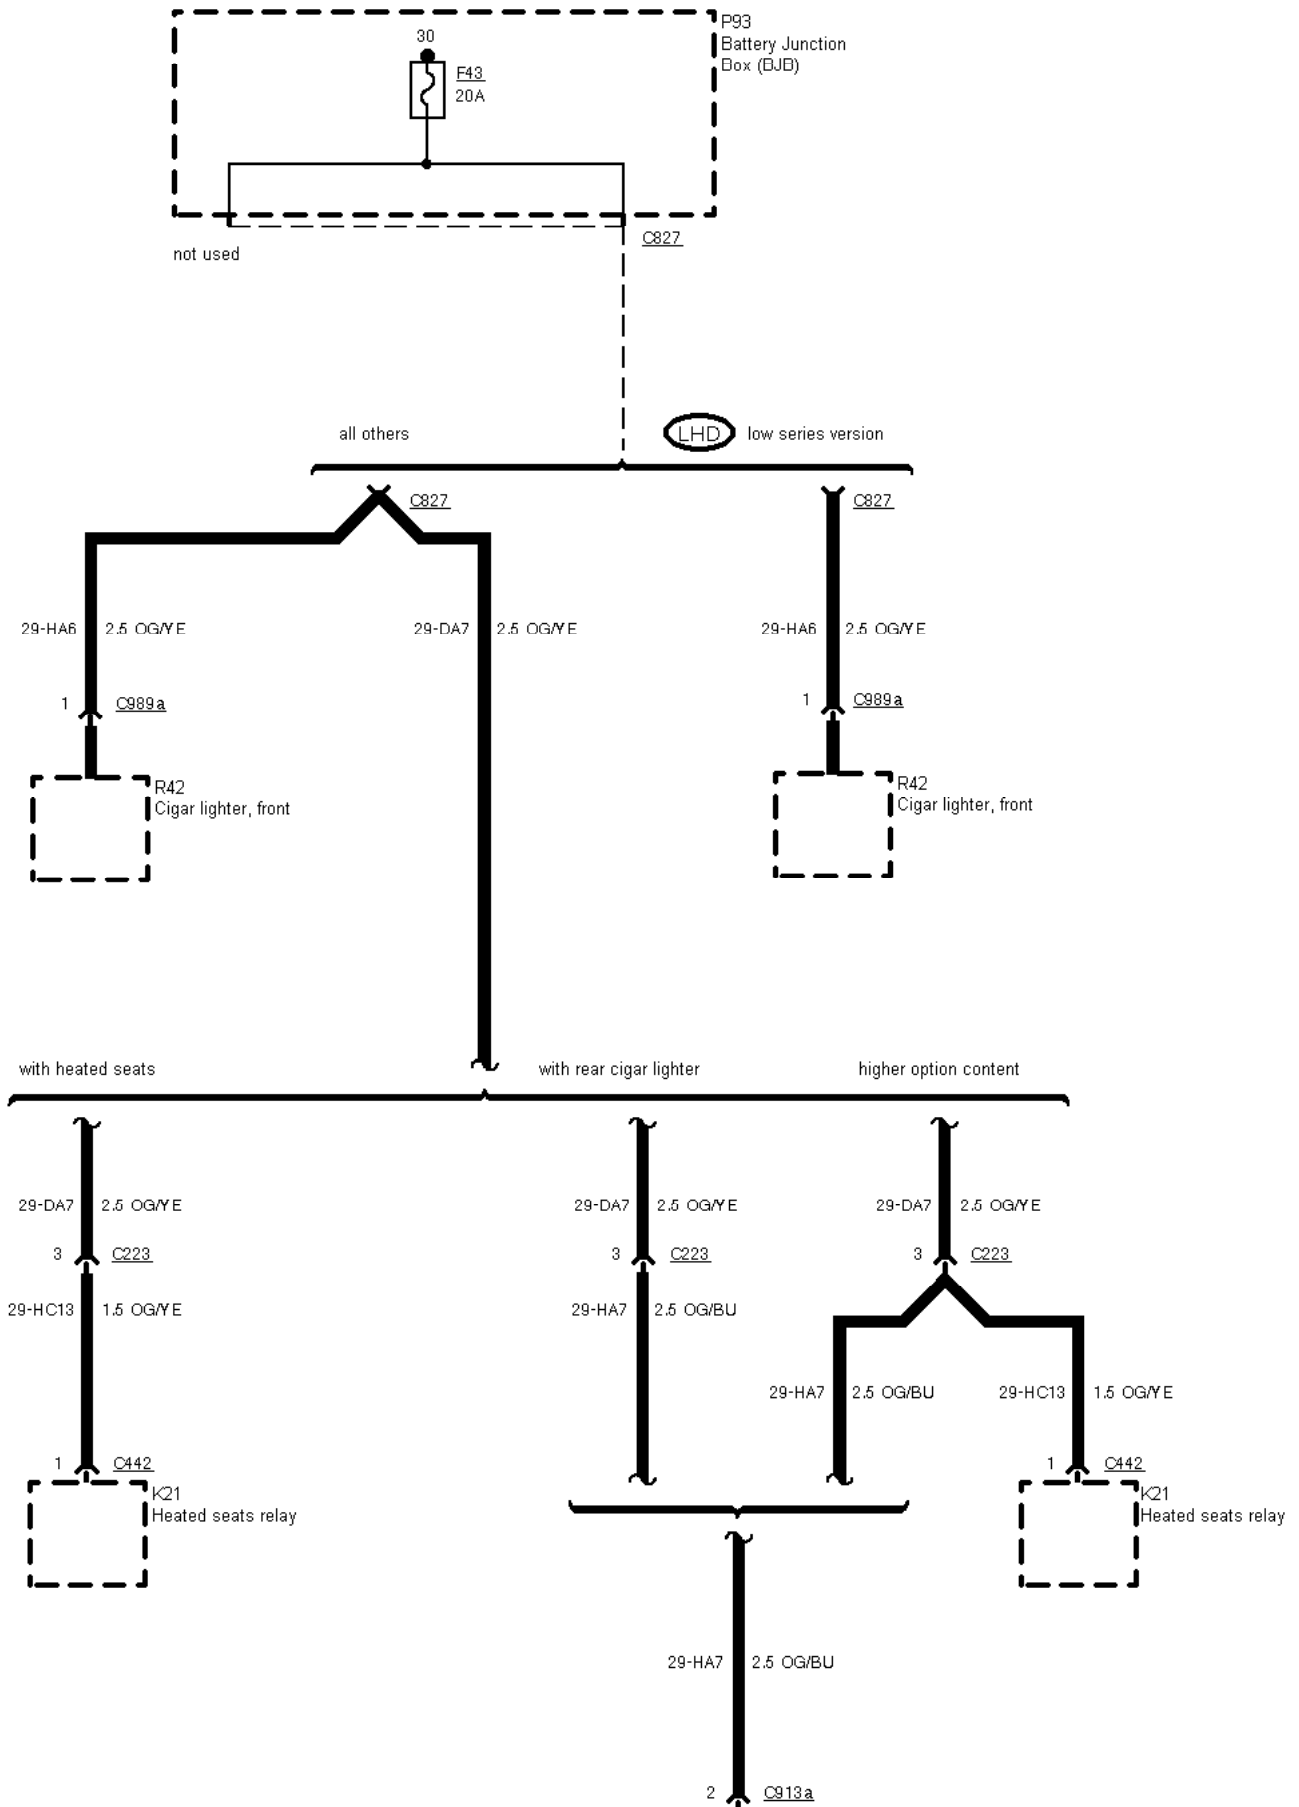

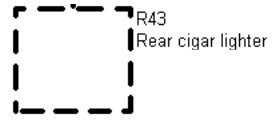


---

**01-03-059 , Fuse Details**

 
---


Fuse 44, except TCI Diesel as of 09/96

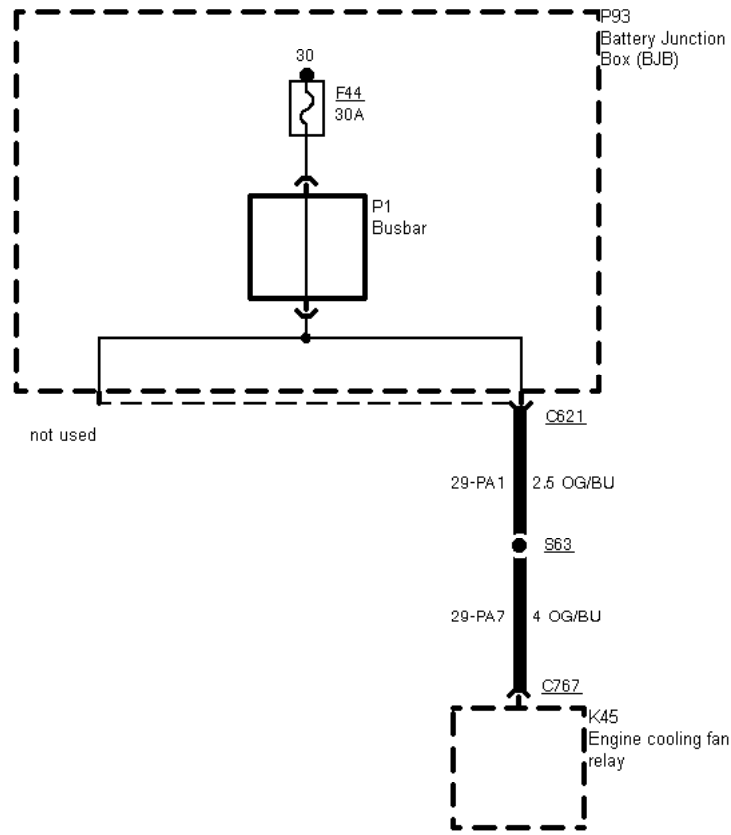

Fuse 45

  **LHD** low series version before 03/96

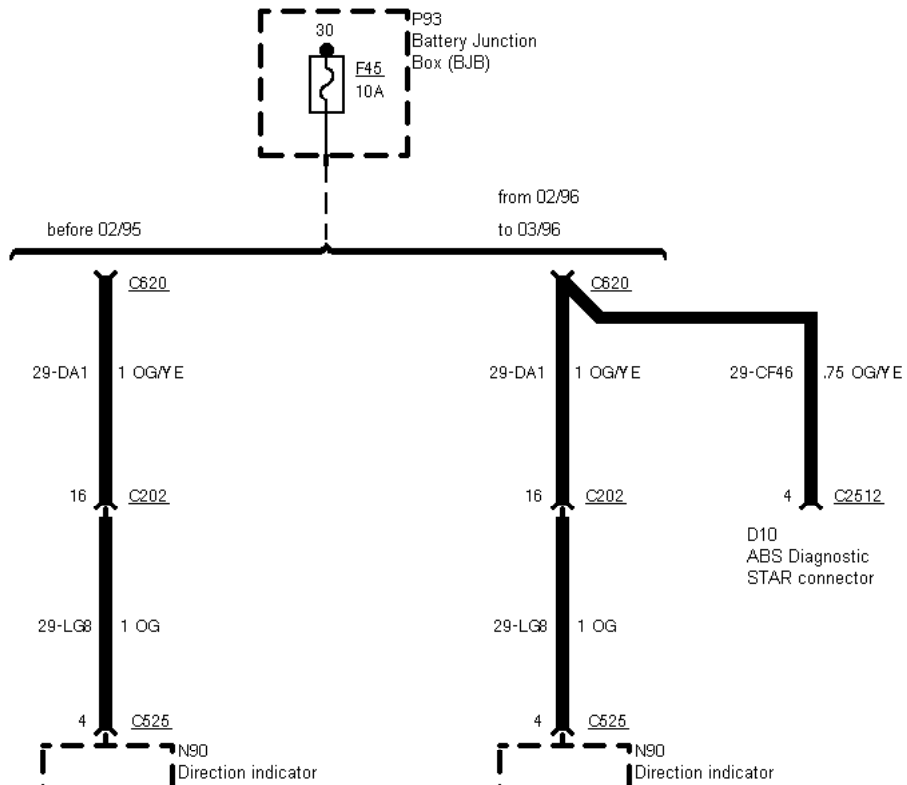




---


01-03-060 , Fuse Details , Fuse 45, except LHD low series version

 ---

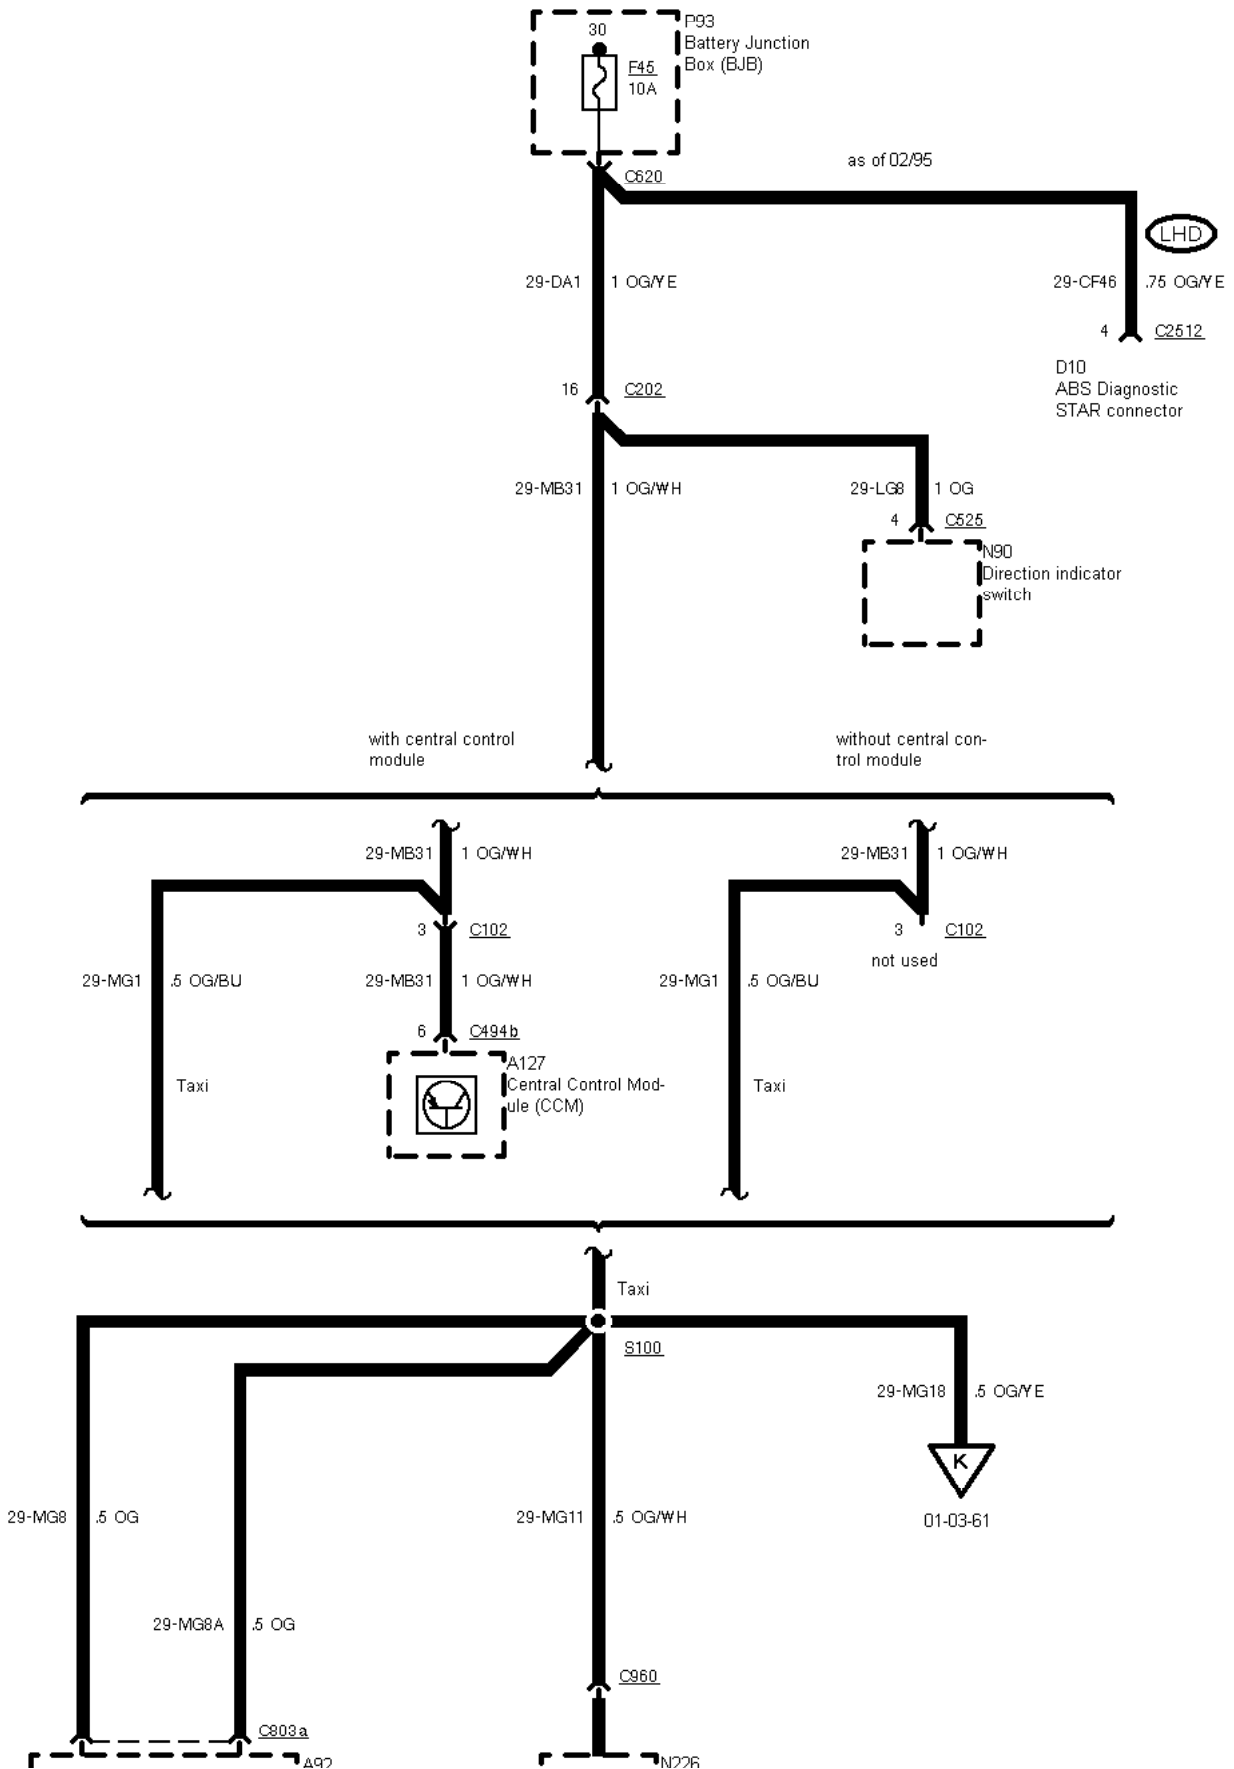



Taxi alarm module

 


Taxi alarm switch

---

01-03-061 , Fuse Details , Fuse 45, except LHD low series version, Taxi

---

 01-03-60

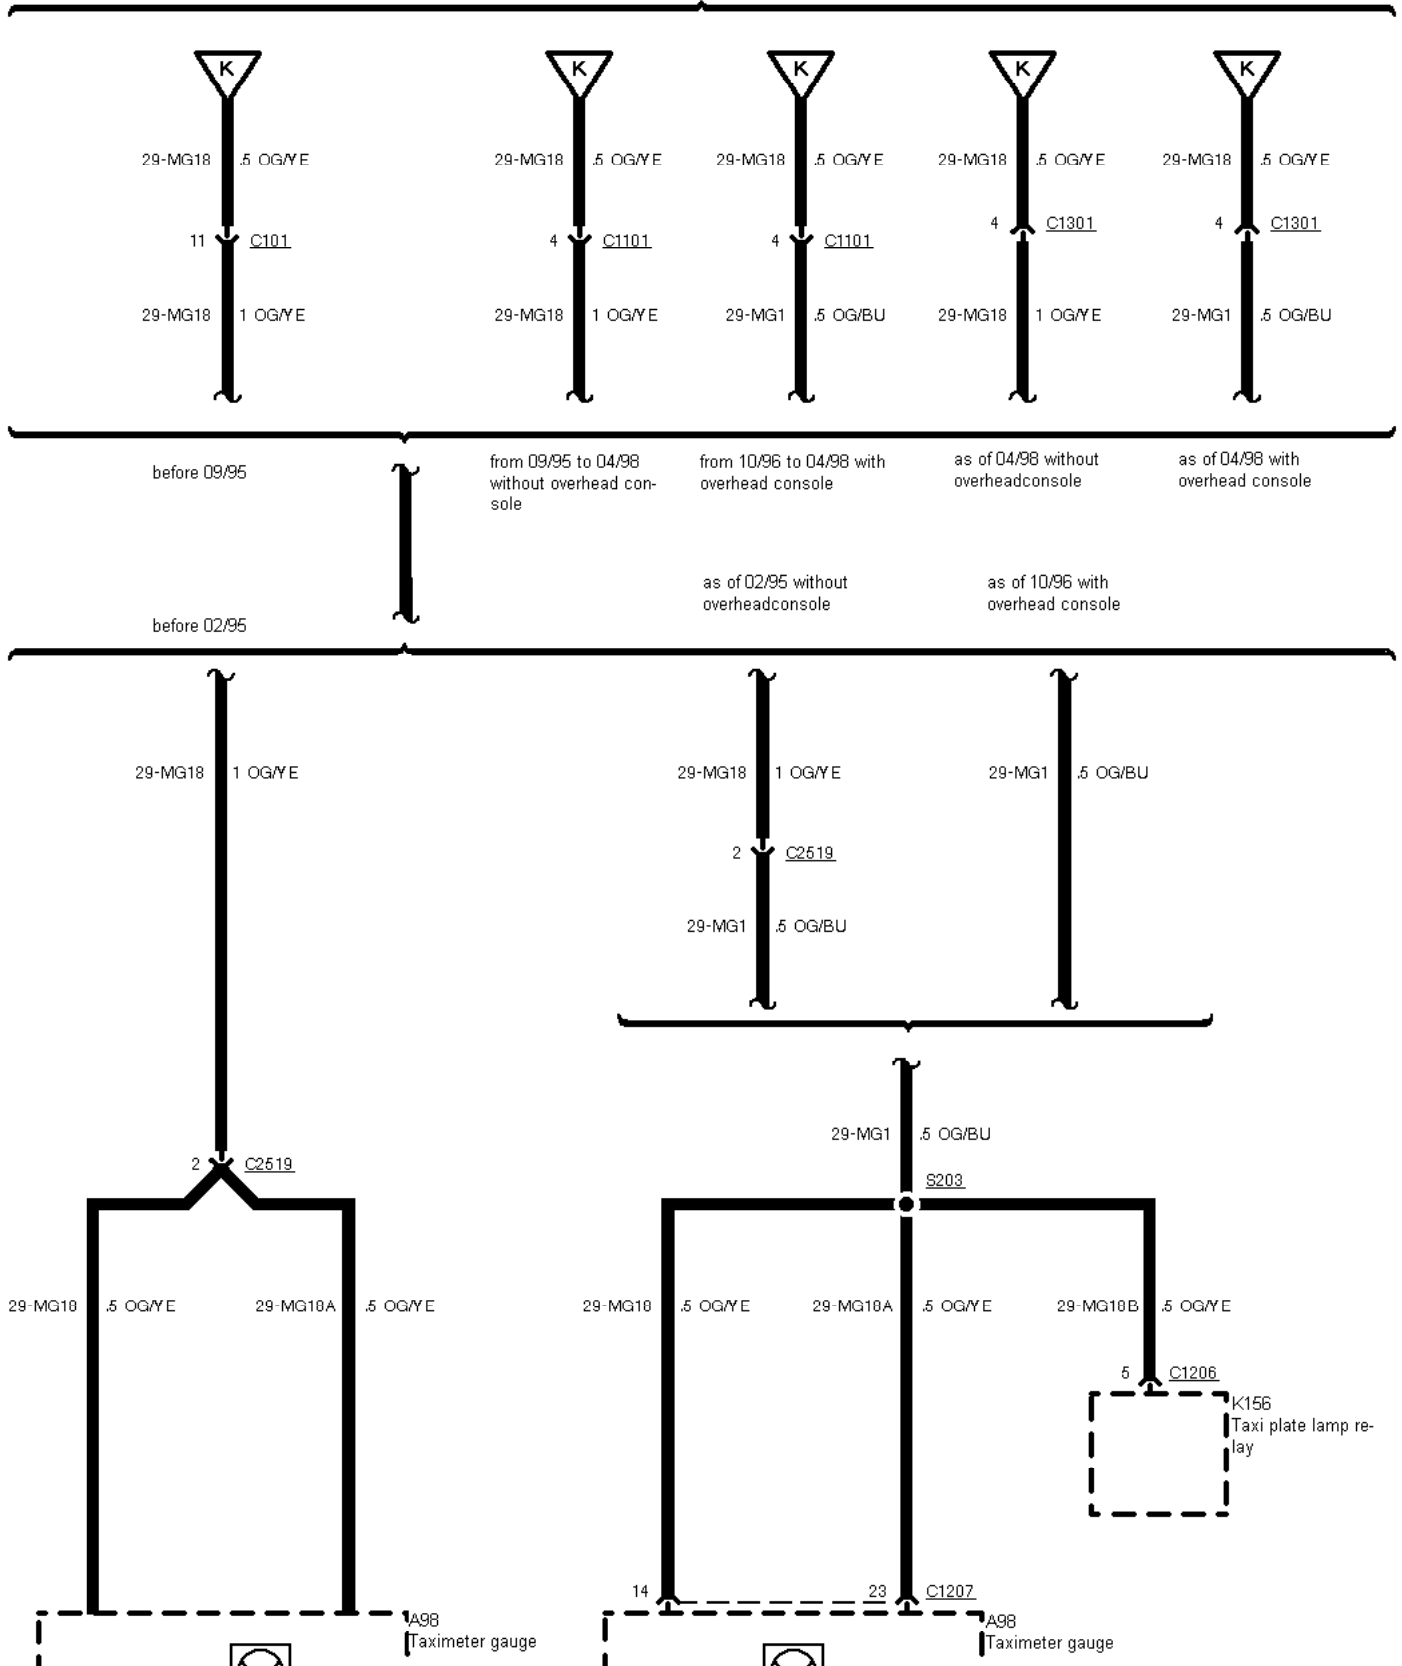






---

01-03-062 , Fuse Details

---

 Fuses 46 and 47

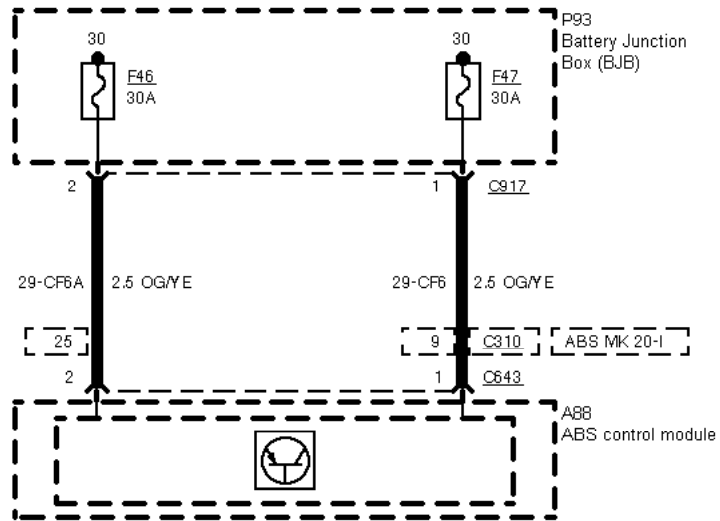

---

Fuse 100

As of 09/95

